


A4010  
Junction box

X11001

15<7  
0.35  
GN/WS

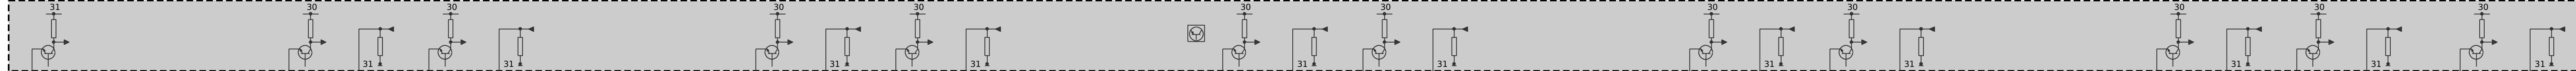

A12  
Multiple restraint system control unit

X18069


POL  
0.35  
SW/GN

ABF1+  
0.5  
GR/SW

ABF1-  
0.5  
GR/BR

ABF2+  
0.5  
GE/SW

ABF2-  
0.5  
GE/BR

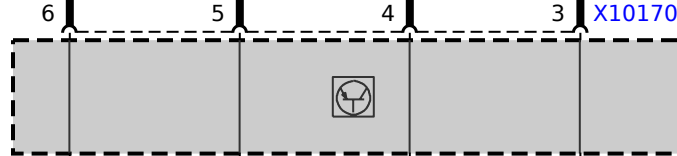


A72  
Steering column switch center

ABF1+  
0.5  
GR/SW

ABF1-  
0.5  
GR/BR

ABF2+  
0.5  
GE/SW

ABF2-  
0.5  
GE/BR

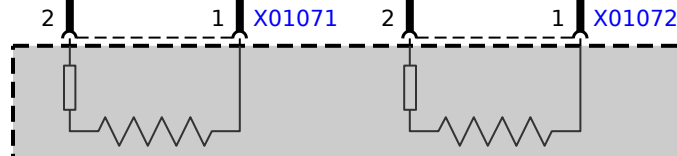

G5  
Driver's airbag gas generator

ABBF1+  
0.5  
BL/SW

ABBF1-  
0.5  
BL/BR

ABBF2+  
0.5  
WS/SW

ABBF2-  
0.5  
WS/BR



 

G6  
Front passenger airbag gas generators

SIAF+  
0.5  
BL

SIAF-  
0.5  
BR

GSF+  
0.5  
GE/RT

GSF-  
0.5  
GE/BR

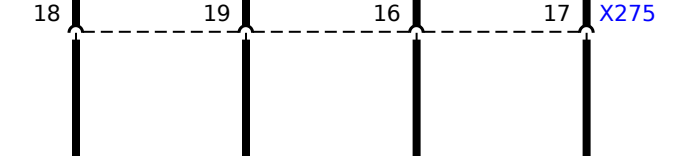



G12  
Driver belt tensioner gas generator

SIABF+  
0.5  
GE

SIABF-  
0.5  
BR

GSBF+  
0.5  
BL/RT

 GSBF-  
0.5  
BL/BR

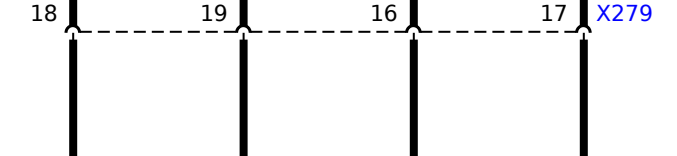


G13  
Front passenger belt tensioner gas generator

CUL+  
0.5  
GE

CUL-  
0.5  
BL/GE

CUR+  
0.5  
WS

 
CUR-  
0.5  
BL/WS



G18  
Right head airbag gas generator

SBK+  
0.5  
BL

SBK-  
0.5  
BR

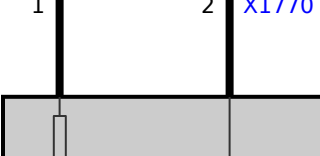

G19a  
Gas generator safety battery terminal