



A46  
Fuse carrier, rear

F102

30  
100A

X1984

X7520

G6430

Jump start terminal point

X2007

30<102

6.0

RT

6

X2085

K2003a

DDE main relay

30

85

87

4

X2085

U\_HR

6.0

RT/WS

1

3

5

7

X8582

A8682

Fuse carrier, engine electronics

F01

F02

F03

F04

20A

20A

30A

10A

X8582

U\_HR<3

6.0

RT/BL

1

X64101

A2076

B+ potential distributor

1

2

X13604

1

X13603

U\_HR<3

2.5

RT/WS

U\_HR<3

2.5

RT/WS

U\_HR<3

2.5

RT/WS

X10547

15WUP

0.35

GN/RT

X2412

A2249

Digital diesel electronics control unit

X2411

S\_HR

0.5

BR

44

31

2.5

BR

31

2.5

BR

31

2.5

BR

left-hand drive

right-hand drive

left-hand drive

right-hand drive

left-hand drive

right-hand drive

X166

X165

X166

X165

X166

X165