



A11
Crash safety module

B237
Gas generator, safety battery terminal for starter unit

7-Series Hybrid

S77b
Seat belt buckle, rear passenger side
1) Gas generator for belt tensioner

S76b
Seat belt buckle, rear driver's side
1) Gas generator for belt tensioner

B237
Gas generator, safety battery terminal for starter unit

B73
Gas generator, safety battery terminal

B76b
Gas generator for front passenger active head restraint

B69
Gas generator for front passenger side airbag

B47
Gas generator for driver active head restraint

B44
Gas generator for driver belt tensioner

B54
Gas generator for driver side airbag

B53
Gas generator for left head airbag

B48
Gas generators for front passenger airbag

A92
Steering column switch cluster

B52
Gas generators for driver's airbag

Y32
Pedestrian guard actuator, front left

Y31
Pedestrian guard actuator, rear right

Y30
Pedestrian guard actuator, rear left

Y9
Pedestrian guard actuator, front right

A11*4B

A11*5B

X14*2B

X12*2B

B237*2B

B237*2B

B73*1B

S76b

S77*1B

B76*1B

B67*1B

B91*1B

B69*1B

B69*1B

B47*1B

B44*1B

B54*1B

B53*1B

B68*1B

B68*1B

B48*1B

A92*1B

A92*3B

A11*4B

A11*5B

Y31*1B

Y9*1B

Y30*1B

Y32*1B

FGSLV+

FGSLV-

FGSLH+

FGSLH-

FGSRV+

FGSRV-

FGSRH+

FGSRH-

ABF1+

ABF1-

ABBF1+

ABBF1-

CUL+

CUL-

CUR+

CUR-

SIAFA+

SIAFA-

GSFA+

GSFA-

ESFA+

ESFA-

KOSFA+

KOSFA-

SIABF+

SIABF-

GSBF+

GSBF-

KOSBF+

KOSBF-

SBK+

SBK-

GS_HL+

GS_HL-

SBK_ZSE+

SBK_ZSE-

GS_HR+

GS_HR-

WS/RT

WS/SW

WS/RT

WS/SW

WS/RT

WS/SW

WS/RT

WS/SW

WS/RT

WS/SW