 



Z44
Front right power distribution
box

30<36
0.35



3 A21*4B

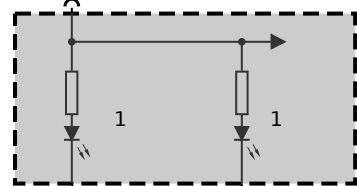


A21
Roof function centre
1) Airbag indicator lamp

8 POL_ON 0.35 WS/GN
11 POL_OFF 0.35 WS/GE

34 A11*1B 33 A11*1B

A11
Crash safety module

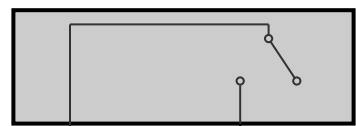


S44
Switch for passenger airbag
deactivation

not USA

11 POS+ 0.35 GE/WS
13 POS- 0.35 GE/GR

11 A11*2B 13 A11*2B

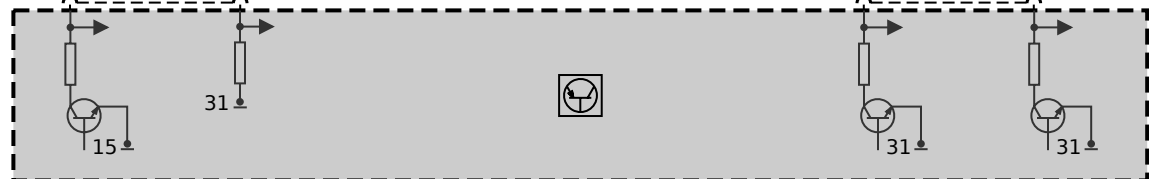

indicator light for 'Front passenger
airbag active' is country and
equipment dependent