



A53

Beam throw adjustment control unit (LWR)

X991

31L<5
0.5
BR

X13004

X13251

B42

Rear right level sensor

X18032

B64

Front right level sensor

HSGV
0.5
GR/WS

HSSV
0.5
GR/GN

HSPV
0.5
GR/BR

HSGH
0.5
SW/WS

HSSH
0.5
SW/GN

HSPH
0.5
SW/GR