


S2
 Ignition switch
 0) OFF
 1) Radio position
 2) Ignition
 3) Start



L1
 EWS toroidal coil

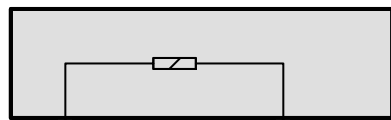

A2a
 Instrument cluster control unit



A6000
 DME control unit



A836
 Electronic vehicle immobilizer (EWS)

8 **X33**
 S_50
 4.0
 SW/BL

1
 SP_A
 0.5
 SW/GR


3
 SP_B
 0.5
 SW/GE

9 **X11175**
 S_50EWS
 0.75
 SW/GE


33 **X60004**
 D_EWS
 0.35
 SW/VI

2
 1
 S_50
 4.0
 SW
X06810

6 **X1659**
 S_L2
 0.35
 BR/SW

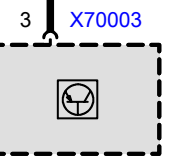

A7000a
 Transmission control

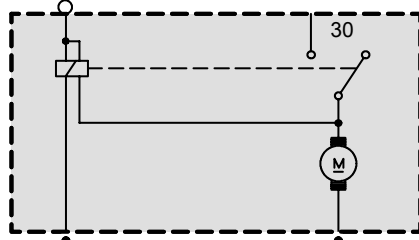

M6510a
 Starter

1 **X6011**
 S_50
 2.5
 WS
X6510