



S2
Ignition switch
0) OFF
1) Radio position
2) Ignition
3) Start

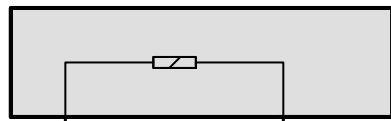



L1
EWS toroidal coil

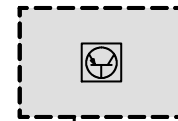

A2a
Instrument cluster control unit



A6000
DME control unit

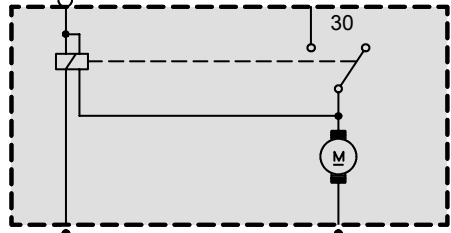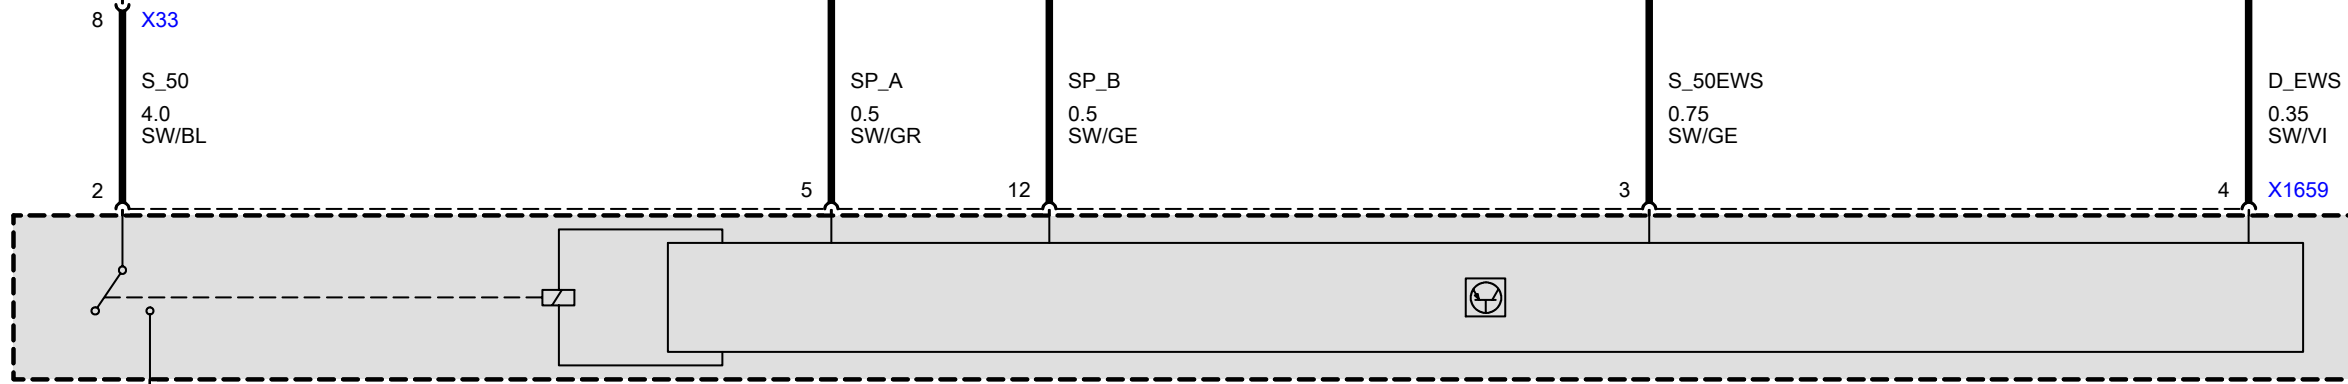

M6510a
Starter

A836
Electronic vehicle immobilizer (EWS)