








Z73
Power distribution box in the centre












A528
Basic central platform (BCP)

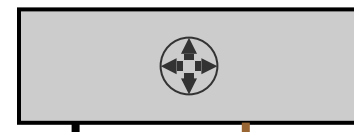

      
S93
Switch, steering column adjustment



A286
Steering column adjustment

 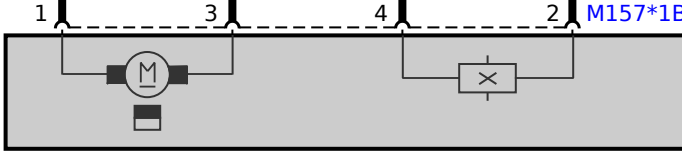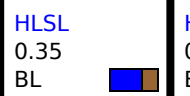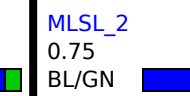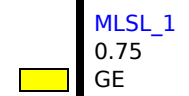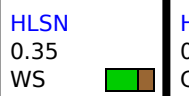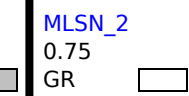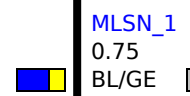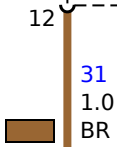

M157
Steering column height adjustment motor

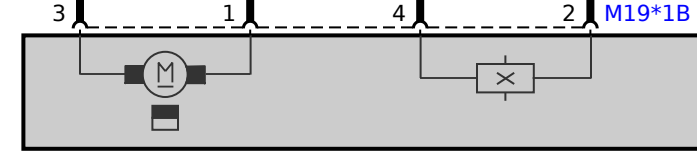

M19
Steering column longitudinal adjustment motor