


Z2
Fuse holder, rear

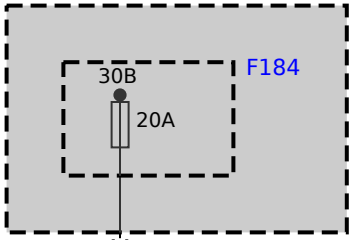

F184



1 Z2*9B

30B<184
2.5
RT/GN



X180*1V



PT_CAN2H
0.35
WS/GE



X180*2V



PT_CAN2L
0.35
WS/BL



TERM
0.35
BL/GE



X123*1V



15WUP
0.35
GN/RT



1

9

16


8

15

13

A98*1B

A98
Fuel pump control (EKPS)

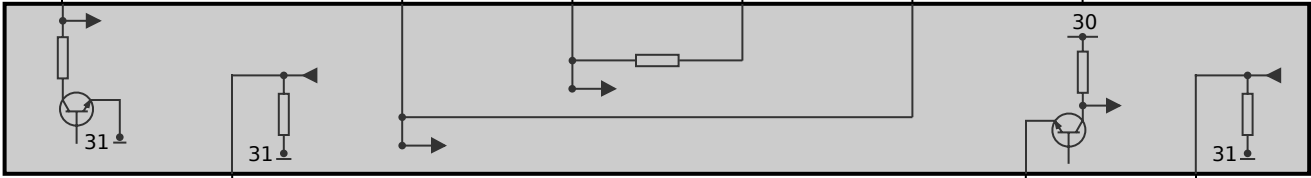

2 A98*1B

31
2.5
BR



Z10*12B

MEKP+
2.5
RT/GN



MEKP-
2.5
BR



4 A98*2B

2

X94*1B

4

1

M14
Electric fuel pump

