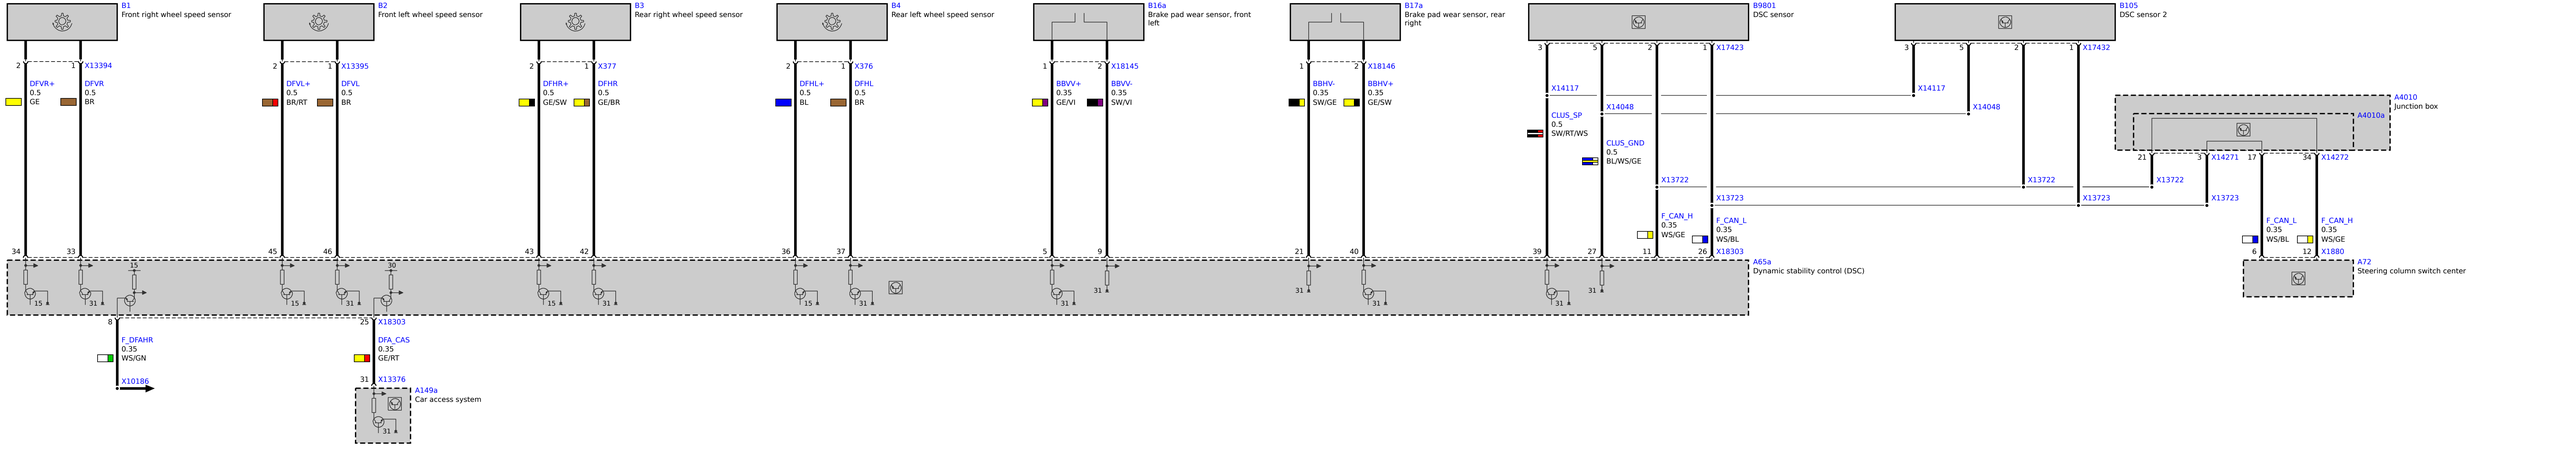
B1
Front right wheel speed sensor
B2
Front left wheel speed sensor
B3
Rear right wheel speed sensor
B4
Rear left wheel speed sensor
B16a
Brake pad wear sensor, front left
B17a
Brake pad wear sensor, rear right
B9801
DSC sensor
B105
DSC sensor 2
A4010
Junction box
A4010a
A65a
Dynamic stability control (DSC)
A72
Steering column switch center
A149a
Car access system
X13394
DFVR+
0.5
GE
DFVR
0.5
BR
X13395
DFVL+
0.5
BR/RT
DFVL
0.5
BR
X377
DFHR+
0.5
GE/SW
DFHR
0.5
GE/BR
X376
DFHL+
0.5
BL
DFHL
0.5
BR
X18145
BBVV+
0.35
GE/VI
BBVV-
0.35
SW/VI
X18146
BBHV-
0.35
SW/GE
BBHV+
0.35
GE/SW
X17423
X14117
CLUS_SP
0.5
SW/RT/WS
X14048
CLUS_GND
0.5
BL/WS/GE
X13722
X13723
F_CAN_H
0.35
WS/GE
F_CAN_L
0.35
WS/BL
X18303
X17432
X14271
X14272
F_CAN_L
0.35
WS/BL
F_CAN_H
0.35
WS/GE
X1880
F_DFAHR
0.35
WS/GN
X10186
X18303
DFA_CAS
0.35
GE/RT
X13376