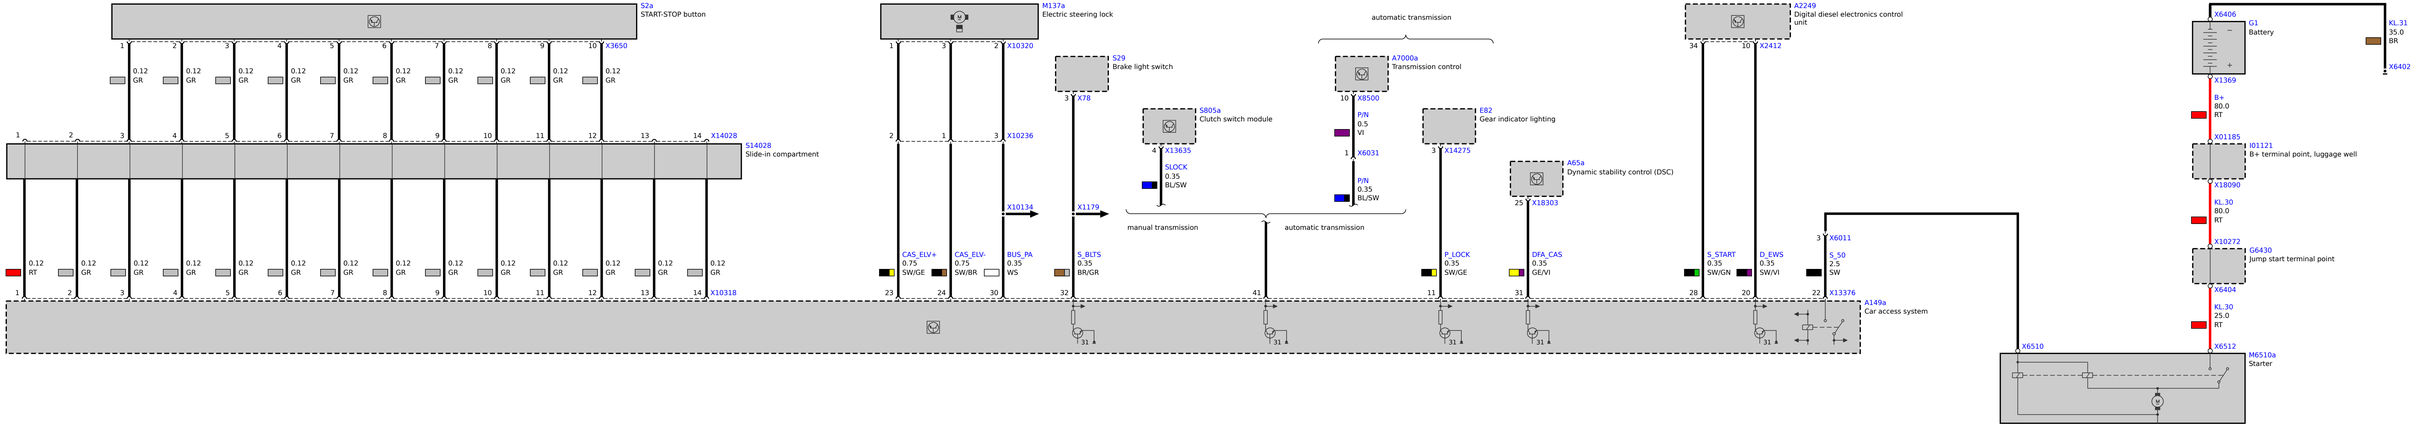
S2a
START-STOP button
X3650
X14028
S14028
Slide-in compartment
X10318
M137a
Electric steering lock
X10320
X10236
X10134
S29
Brake light switch
X78
X1179
S805a
Clutch switch module
X13635
SLOCK
0.35
BL/SW
automatic transmission
A7000a
Transmission control
X8500
P/N
0.5
VI
X6031
P/N
0.35
BL/SW
manual transmission
automatic transmission
E82
Gear indicator lighting
X14275
A65a
Dynamic stability control (DSC)
X18303
A2249
Digital diesel electronics control unit
X2412
X6011
X13376
A149a
Car access system
CAS_ELV+
0.75
SW/GE
CAS_ELV-
0.75
SW/BR
BUS_PA
0.35
WS
S_BLTS
0.35
BR/GR
P_LOCK
0.35
SW/GE
DFA_CAS
0.35
GE/VI
S_START
0.35
SW/GN
D_EWS
0.35
SW/VI
S_50
2.5
SW
X6406
G1
Battery
KL_31
35.0
BR
X6402
X1369
B+
80.0
RT
X0118S
I01121
B+ terminal point, luggage well
X18090
KL_30
80.0
RT
X10272
G6430
Jump start terminal point
X6404
KL_30
25.0
RT
X6512
M6510a
Starter
X6510