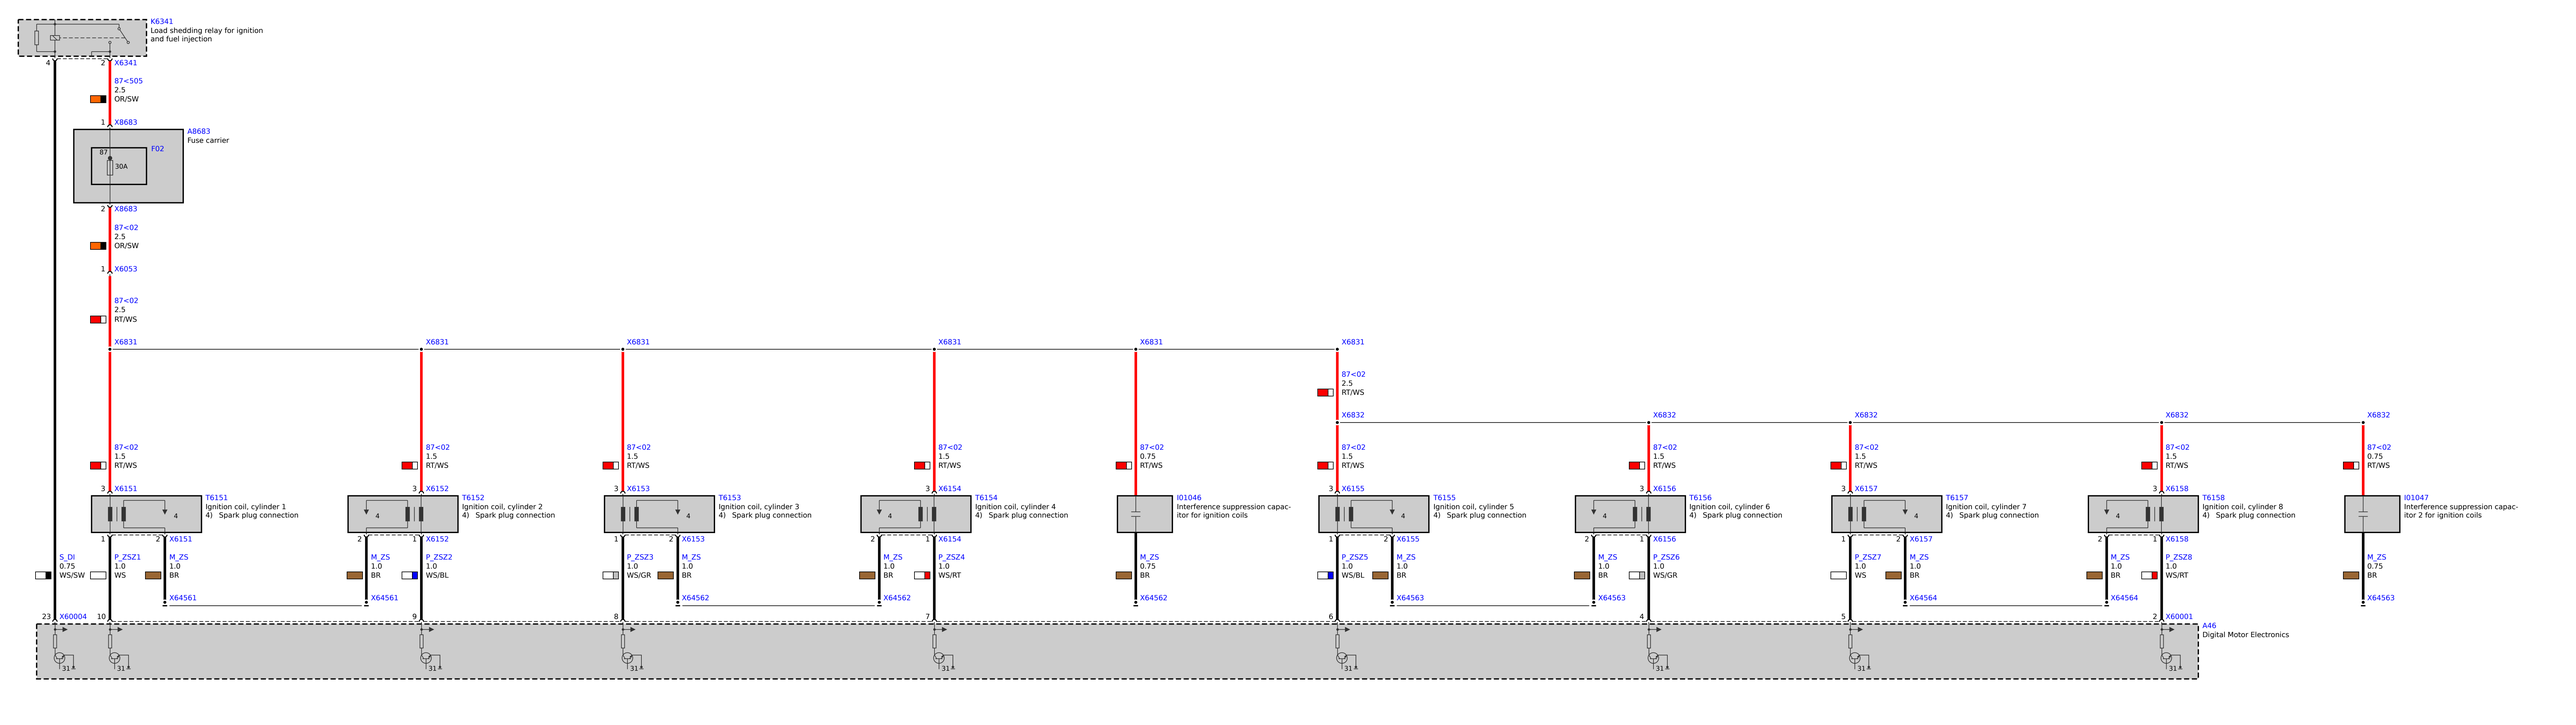
K6341
Load shedding relay for ignition and fuel injection
X6341
B7<505
2.5
OR/SW
X8683
A8683
Fuse carrier
F02
87
30A
X8683
B7<02
2.5
OR/SW
X6053
B7<02
2.5
RT/WS
X6831
B7<02
1.5
RT/WS
X6151
T6151
Ignition coil, cylinder 1
4) Spark plug connection
S_DI
0.75
WS/SW
P_ZSZ1
1.0
WS
M_ZS
1.0
BR
X6151
X64561
X60004
X6831
B7<02
1.5
RT/WS
X6152
T6152
Ignition coil, cylinder 2
4) Spark plug connection
M_ZS
1.0
BR
P_ZSZ2
1.0
WS/BL
X6152
X64561
X6831
B7<02
1.5
RT/WS
X6153
T6153
Ignition coil, cylinder 3
4) Spark plug connection
P_ZSZ3
1.0
WS/GR
M_ZS
1.0
BR
X6153
X64562
X6831
B7<02
1.5
RT/WS
X6154
T6154
Ignition coil, cylinder 4
4) Spark plug connection
M_ZS
1.0
BR
P_ZSZ4
1.0
WS/RT
X6154
X64562
X6831
B7<02
0.75
RT/WS
I01046
Interference suppression capacitor for ignition coils
M_ZS
0.75
BR
X64562
X6831
B7<02
2.5
RT/WS
X6832
B7<02
1.5
RT/WS
X6155
T6155
Ignition coil, cylinder 5
4) Spark plug connection
P_ZSZ5
1.0
WS/BL
M_ZS
1.0
BR
X6155
X64563
X6832
B7<02
1.5
RT/WS
X6156
T6156
Ignition coil, cylinder 6
4) Spark plug connection
M_ZS
1.0
BR
P_ZSZ6
1.0
WS/GR
X6156
X64563
X6832
B7<02
1.5
RT/WS
X6157
T6157
Ignition coil, cylinder 7
4) Spark plug connection
P_ZSZ7
1.0
WS
M_ZS
1.0
BR
X6157
X64564
X6832
B7<02
1.5
RT/WS
X6158
T6158
Ignition coil, cylinder 8
4) Spark plug connection
M_ZS
1.0
BR
P_ZSZ8
1.0
WS/RT
X6158
X64564
X60001
X6832
B7<02
0.75
RT/WS
I01047
Interference suppression capacitor 2 for ignition coils
M_ZS
0.75
BR
X64563
A46
Digital Motor Electronics
31