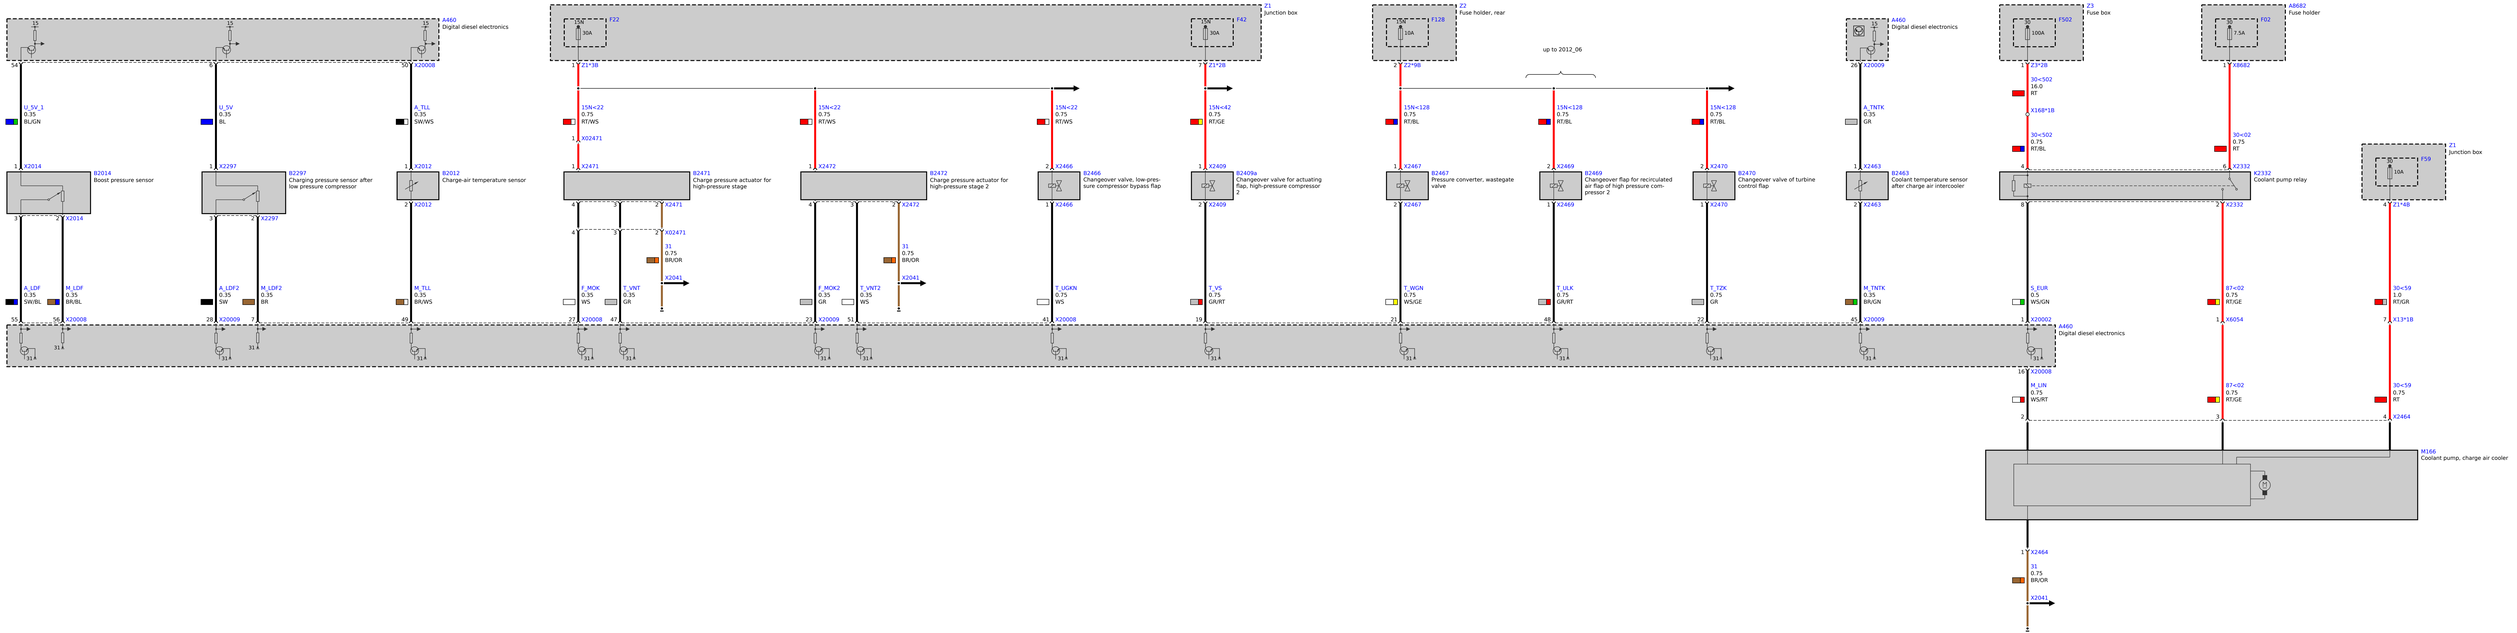
A460
Digital diesel electronics
Z1
Junction box
F22
30A
F42
30A
Z2
Fuse holder, rear
F128
10A
up to 2012_06
A460
Digital diesel electronics
Z3
Fuse box
F502
100A
A8682
Fuse holder
F02
7.5A
Z1
Junction box
F59
10A
U_5V_1
0.35
BL/GN
U_5V
0.35
BL
A_TLL
0.35
SW/WS
Z1*3B
15N<22
0.75
RT/WS
X02471
15N<22
0.75
RT/WS
15N<22
0.75
RT/WS
Z1*2B
15N<42
0.75
RT/GE
Z2*9B
15N<128
0.75
RT/BL
15N<128
0.75
RT/BL
15N<128
0.75
RT/BL
A_TNTK
0.35
GR
Z3*2B
30<502
16.0
RT
X168*1B
30<502
0.75
RT/BL
30<02
0.75
RT
X2014
B2014
Boost pressure sensor
X2297
B2297
Charging pressure sensor after low pressure compressor
X2012
B2012
Charge-air temperature sensor
X2471
B2471
Charge pressure actuator for high-pressure stage
X2472
B2472
Charge pressure actuator for high-pressure stage 2
X2466
B2466
Changeover valve, low-pressure compressor bypass flap
X2409
B2409a
Changeover valve for actuating flap, high-pressure compressor 2
X2467
B2467
Pressure converter, wastegate valve
X2469
B2469
Changeover flap for recirculated air flap of high pressure compressor 2
X2470
B2470
Changeover valve of turbine control flap
X2463
B2463
Coolant temperature sensor after charge air intercooler
X2332
Coolant pump relay
A_LDF
0.35
SW/BL
M_LDF
0.35
BR/BL
A_LDF2
0.35
SW
M_LDF2
0.35
BR
M_TLL
0.35
BR/WS
X02471
31
0.75
BR/OR
X2041
F_MOK
0.35
WS
T_VNT
0.35
GR
F_MOK2
0.35
GR
T_VNT2
0.35
WS
31
0.75
BR/OR
X2041
T_UGKN
0.75
WS
T_VS
0.75
GR/RT
T_WGN
0.75
WS/GE
T_ULK
0.75
GR/RT
T_TZK
0.75
GR
M_TNTK
0.35
BR/GN
S_EUR
0.5
WS/GN
B7<02
0.75
RT/GE
30<59
1.0
RT/GR
X20008
X20009
X20002
X6054
X13*1B
31 A
A460
Digital diesel electronics
M_LIN
0.75
WS/RT
B7<02
0.75
RT/GE
30<59
0.75
RT
X2464
M166
Coolant pump, charge air cooler
X2464
31
0.75
BR/OR
X2041