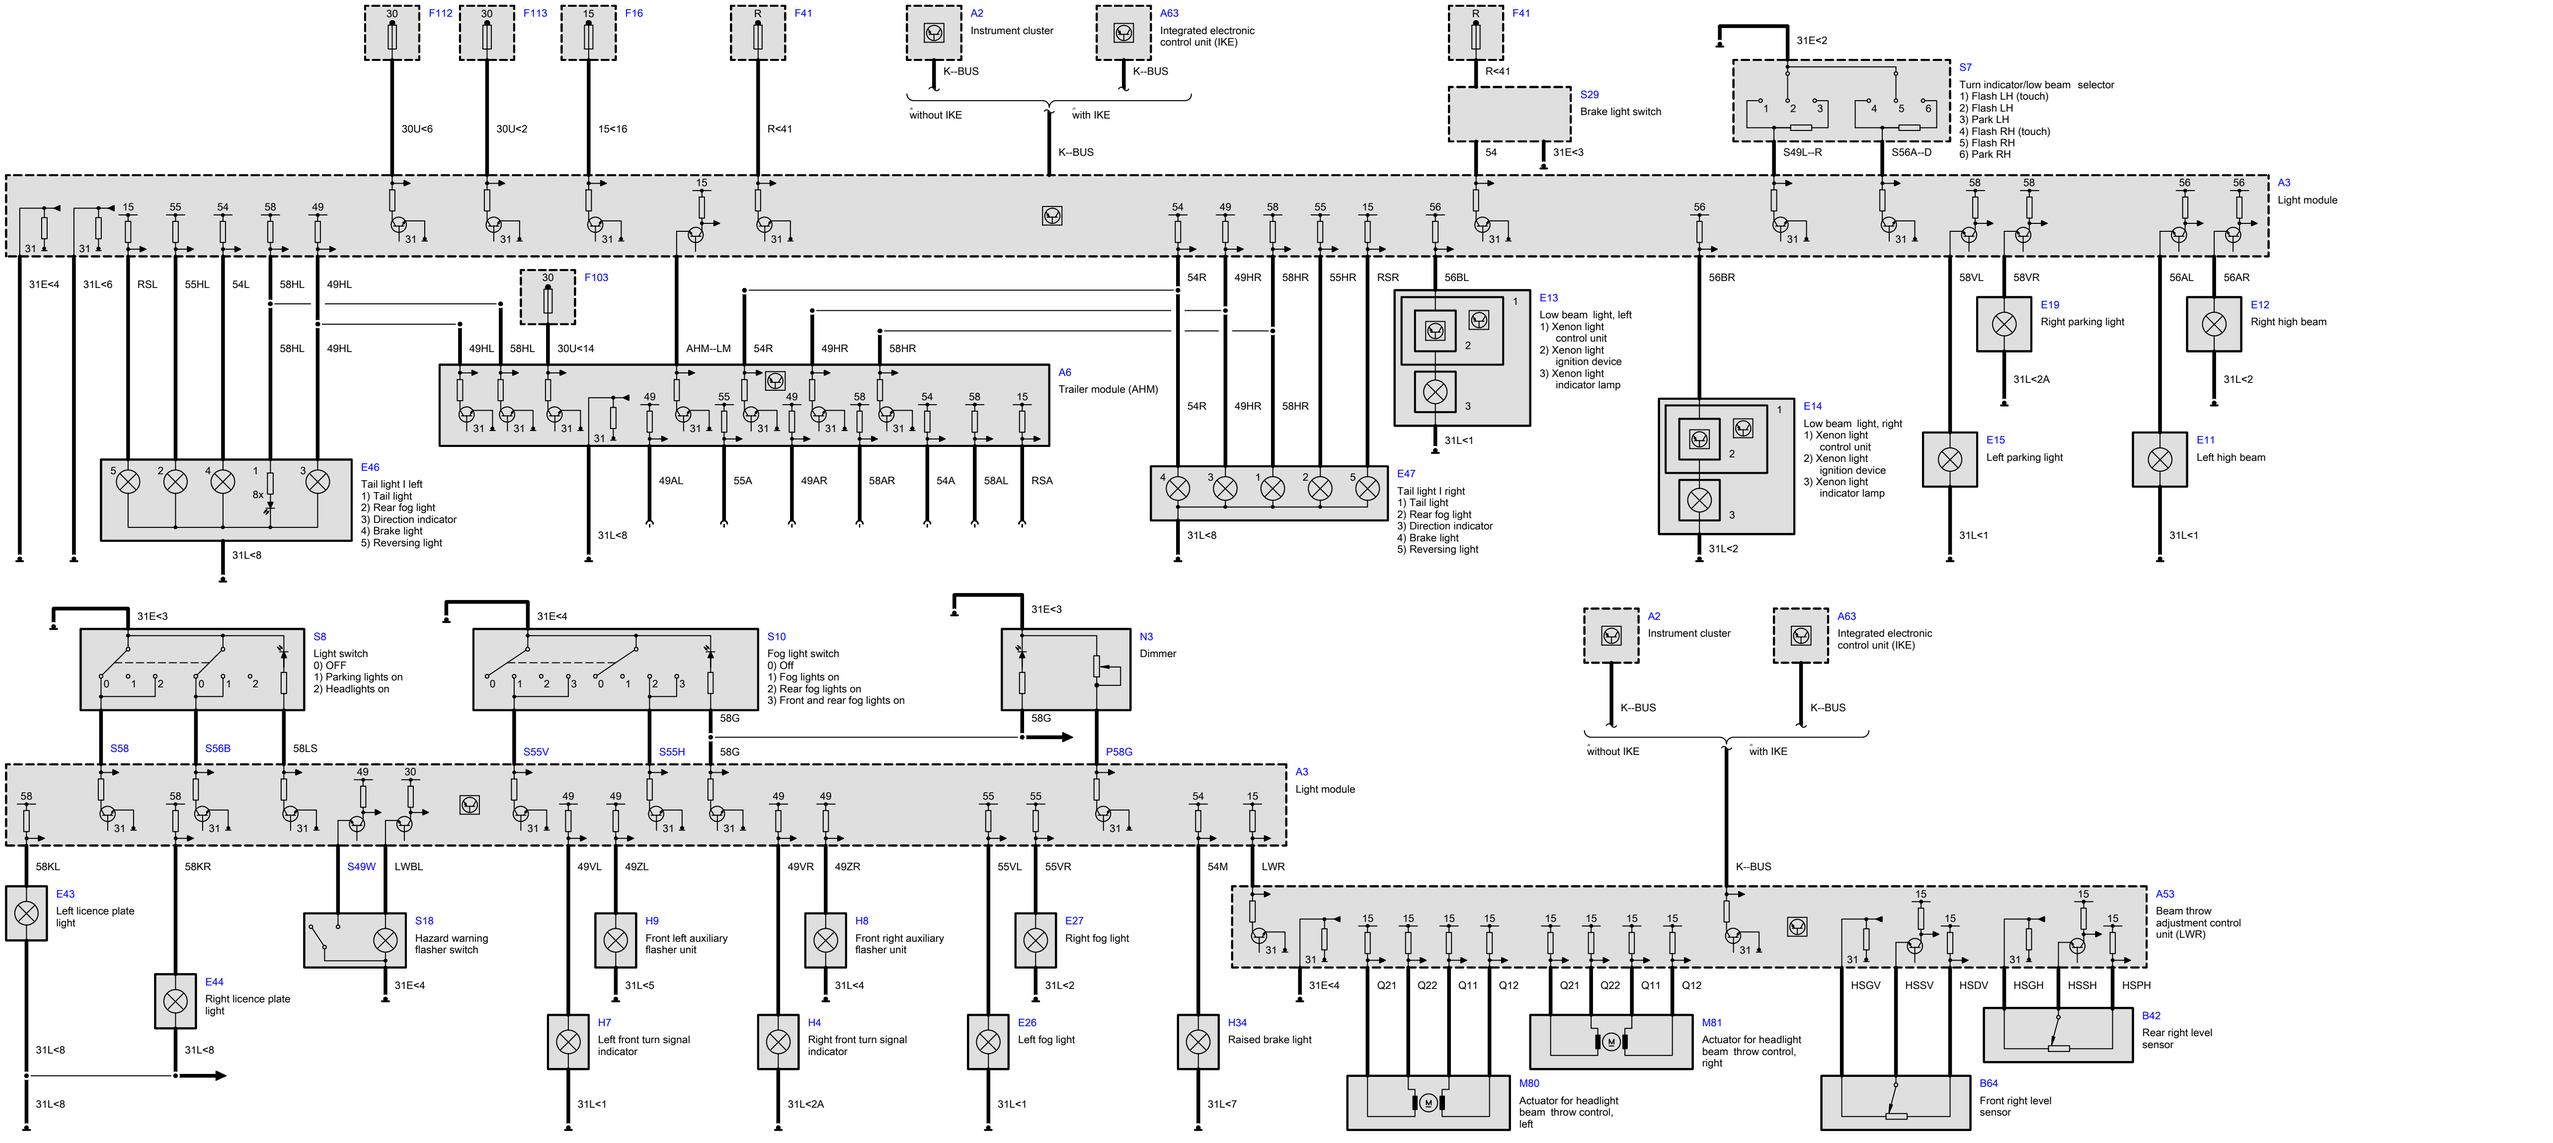
F112
F113
F16
F41
A2
Instrument cluster
A63
Integrated electronic control unit (IKE)
K--BUS
without IKE
with IKE
S29
Brake light switch
S7
Turn indicator/low beam selector
1) Flash LH (touch)
2) Flash LH
3) Park LH
4) Flash RH (touch)
5) Flash RH
6) Park RH
S49L--R
S56A--D
A3
Light module
F103
A6
Trailer module (AHM)
E46
Tail light l left
1) Tail light
2) Rear fog light
3) Direction indicator
4) Brake light
5) Reversing light
E13
Low beam light, left
1) Xenon light control unit
2) Xenon light ignition device
3) Xenon light indicator lamp
E47
Tail light l right
1) Tail light
2) Rear fog light
3) Direction indicator
4) Brake light
5) Reversing light
E14
Low beam light, right
1) Xenon light control unit
2) Xenon light ignition device
3) Xenon light indicator lamp
E19
Right parking light
E12
Right high beam
E15
Left parking light
E11
Left high beam
S8
Light switch
0) OFF
1) Parking lights on
2) Headlights on
S10
Fog light switch
0) Off
1) Fog lights on
2) Rear fog lights on
3) Front and rear fog lights on
N3
Dimmer
E43
Left licence plate light
E44
Right licence plate light
S18
Hazard warning flasher switch
H9
Front left auxiliary flasher unit
H8
Front right auxiliary flasher unit
E27
Right fog light
H7
Left front turn signal indicator
H4
Right front turn signal indicator
E26
Left fog light
H34
Raised brake light
A53
Beam throw adjustment control unit (LWR)
M81
Actuator for headlight beam throw control, right
M80
Actuator for headlight beam throw control, left
B42
Rear right level sensor
B64
Front right level sensor