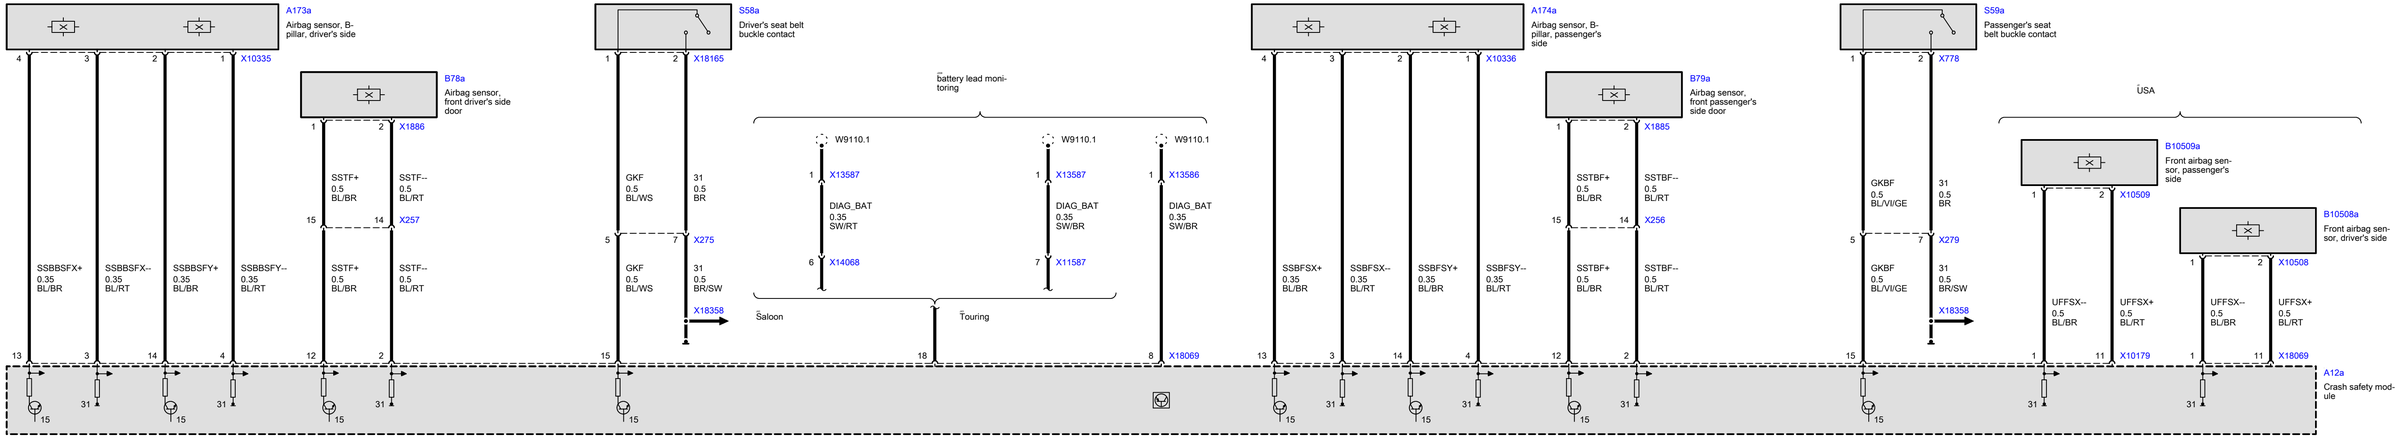
A173a
Airbag sensor, B-pillar, driver's side
X10335
SSBBSFX+ 0.35 BL/BR
SSBBSFX-- 0.35 BL/RT
SSBBSFY+ 0.35 BL/BR
SSBBSFY-- 0.35 BL/RT
B78a
Airbag sensor, front driver's side door
X1886
SSTF+ 0.5 BL/BR
SSTF-- 0.5 BL/RT
X257
SSTF+ 0.5 BL/BR
SSTF-- 0.5 BL/RT
S58a
Driver's seat belt buckle contact
X18165
GKF 0.5 BL/WS
31 0.5 BR
X275
GKF 0.5 BL/WS
31 0.5 BR/SW
X18358
battery lead monitoring
W9110.1
X13587
DIAG_BAT 0.35 SW/RT
X14068
W9110.1
X13587
DIAG_BAT 0.35 SW/BR
X11587
W9110.1
X13586
DIAG_BAT 0.35 SW/BR
X18069
Saloon
Touring
A174a
Airbag sensor, B-pillar, passenger's side
X10336
SSBFSX+ 0.35 BL/BR
SSBFSX-- 0.35 BL/RT
SSBFSY+ 0.35 BL/BR
SSBFSY-- 0.35 BL/RT
B79a
Airbag sensor, front passenger's side door
X1885
SSTBF+ 0.5 BL/BR
SSTBF-- 0.5 BL/RT
X256
SSTBF+ 0.5 BL/BR
SSTBF-- 0.5 BL/RT
S59a
Passenger's seat belt buckle contact
X778
GKBF 0.5 BL/VI/GE
31 0.5 BR
X279
GKBF 0.5 BL/VI/GE
31 0.5 BR/SW
X18358
USA
B10509a
Front airbag sensor, passenger's side
X10509
UFFSX-- 0.5 BL/BR
UFFSX+ 0.5 BL/RT
X10179
B10508a
Front airbag sensor, driver's side
X10508
UFFSX-- 0.5 BL/BR
UFFSX+ 0.5 BL/RT
X18069
A12a
Crash safety module
15
31