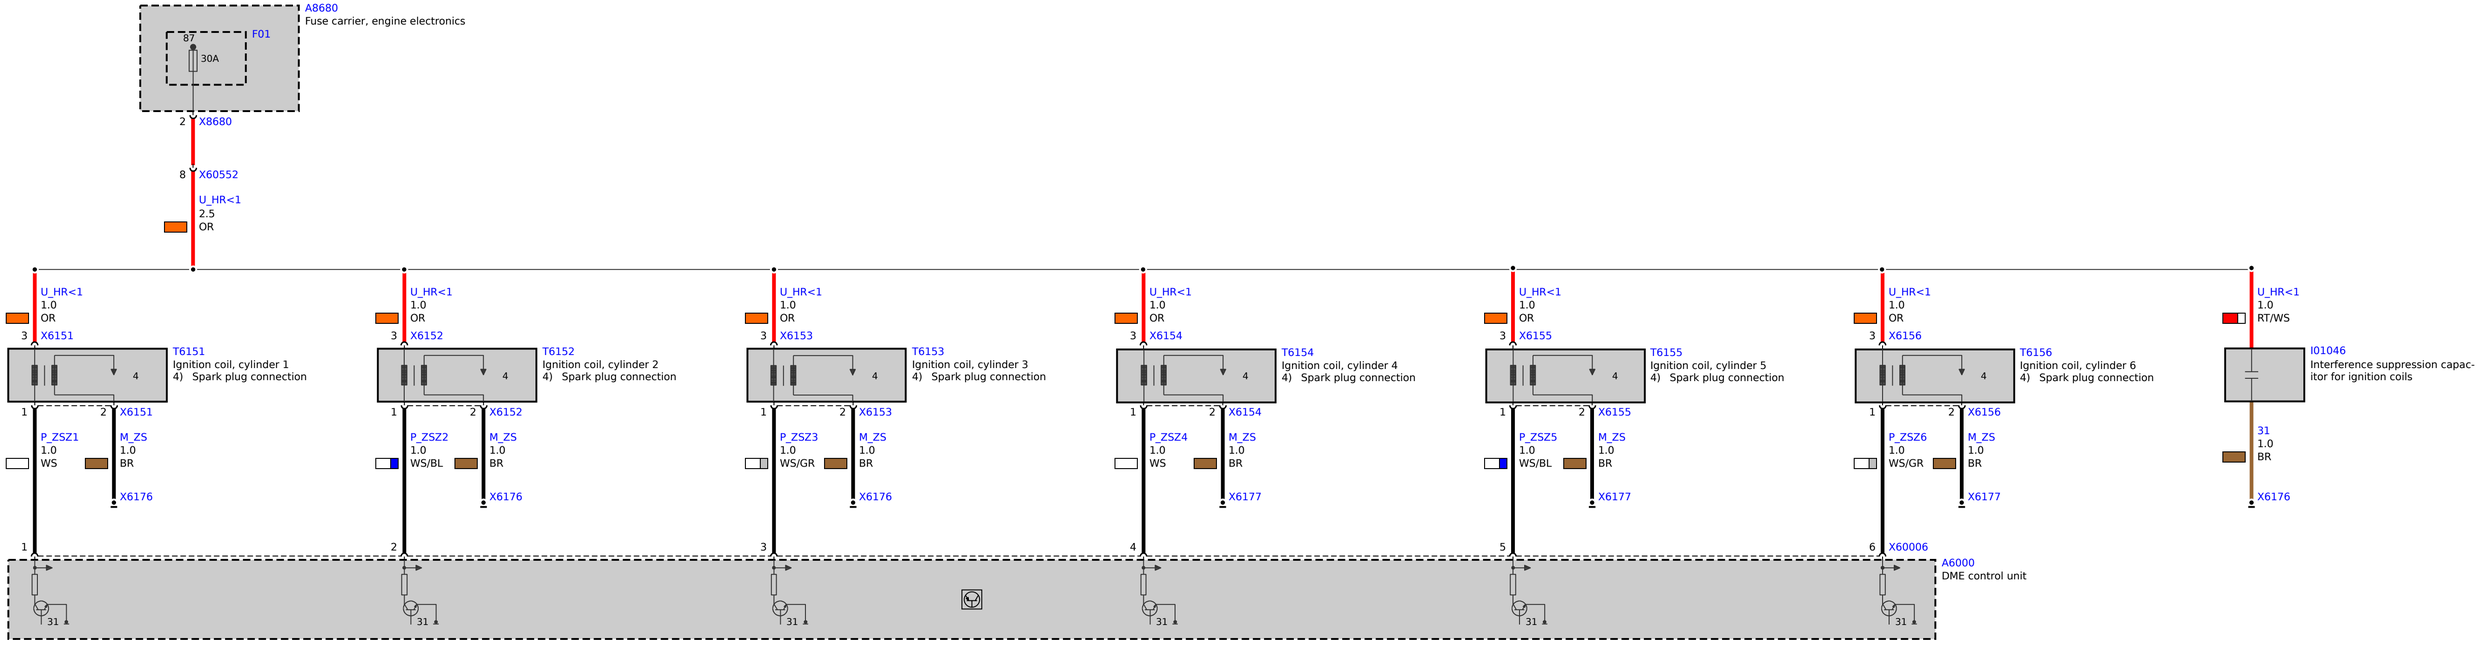
A8680
Fuse carrier, engine electronics
87
F01
30A
2
X8680
8
X60552
U_HR<1
2.5
OR
U_HR<1
1.0
OR
3
X6151
T6151
Ignition coil, cylinder 1
4) Spark plug connection
1
2
X6151
P_ZSZ1
1.0
WS
M_ZS
1.0
BR
X6176
X6152
T6152
Ignition coil, cylinder 2
4) Spark plug connection
X6152
P_ZSZ2
1.0
WS/BL
M_ZS
1.0
BR
X6176
X6153
T6153
Ignition coil, cylinder 3
4) Spark plug connection
X6153
P_ZSZ3
1.0
WS/GR
M_ZS
1.0
BR
X6176
X6154
T6154
Ignition coil, cylinder 4
4) Spark plug connection
X6154
P_ZSZ4
1.0
WS
M_ZS
1.0
BR
X6177
X6155
T6155
Ignition coil, cylinder 5
4) Spark plug connection
X6155
P_ZSZ5
1.0
WS/BL
M_ZS
1.0
BR
X6177
X6156
T6156
Ignition coil, cylinder 6
4) Spark plug connection
X6156
P_ZSZ6
1.0
WS/GR
M_ZS
1.0
BR
X6177
RT/WS
I01046
Interference suppression capac-
itor for ignition coils
31
1.0
BR
X6176
1
2
3
4
5
6
X60006
A6000
DME control unit
31