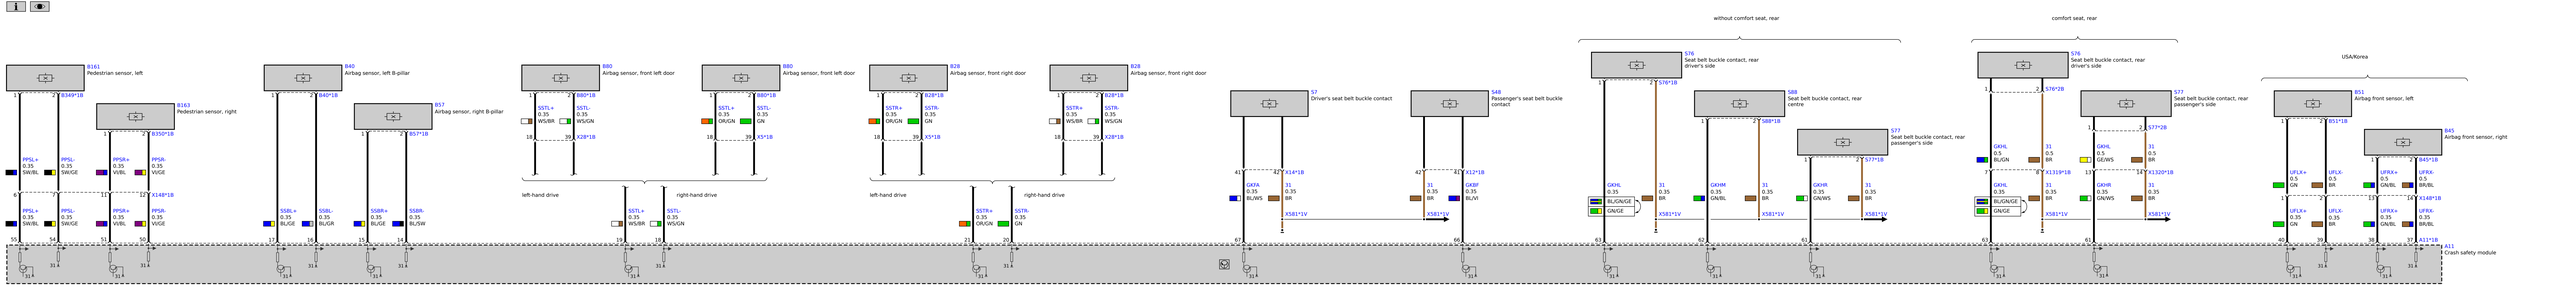
B161
Pedestrian sensor, left
B163
Pedestrian sensor, right
B40
Airbag sensor, left B-pillar
B57
Airbag sensor, right B-pillar
B80
Airbag sensor, front left door
B80
Airbag sensor, front left door
B28
Airbag sensor, front right door
B28
Airbag sensor, front right door
left-hand drive
right-hand drive
left-hand drive
right-hand drive
S7
Driver's seat belt buckle contact
S48
Passenger's seat belt buckle contact
without comfort seat, rear
S76
Seat belt buckle contact, rear driver's side
S88
Seat belt buckle contact, rear centre
S77
Seat belt buckle contact, rear passenger's side
comfort seat, rear
S76
Seat belt buckle contact, rear driver's side
S77
Seat belt buckle contact, rear passenger's side
USA/Korea
B51
Airbag front sensor, left
B45
Airbag front sensor, right
A11
Crash safety module