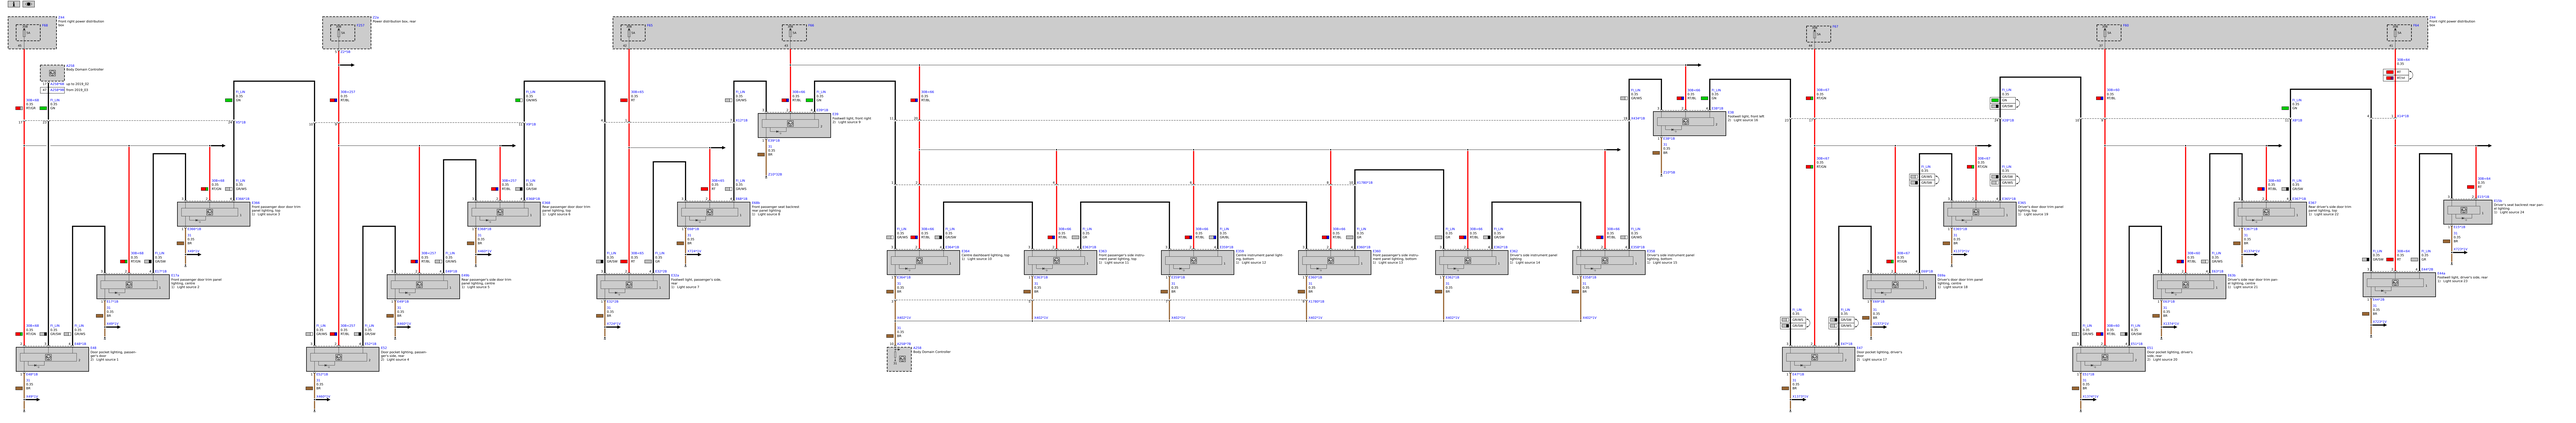
Z54
Fuse right power distribution
Body Domain Controller
up to 2019.20
up to 2019.03
Front passenger door trim panel lighting, centre
1 - Light source 2
Front passenger door trim panel lighting, top
1 - Light source 3
Glove box pocket lighting, passenger's
1 - Light source 1
Z52
Fuse distribution box, rear
Front passenger's side door trim panel lighting, centre
1 - Light source 5
Front passenger door trim panel lighting, top
1 - Light source 6
Glove box pocket lighting, passenger's
1 - Light source 4
Footwell light, passenger's side, rear
1 - Light source 7
Front passenger seat backrest rear panel lighting
1 - Light source 8
Roof panel light, front right
1 - Light source 9
Centre dashboard lighting, top
1 - Light source 10
Front passenger's side instrument panel lighting, middle
1 - Light source 11
Centre instrument panel light
1 - Light source 12
Front passenger's side instrument panel lighting, bottom
1 - Light source 13
Driver's side instrument panel lighting, middle
1 - Light source 14
Driver's side instrument panel lighting, bottom
1 - Light source 15
Footwell light, front left
1 - Light source 16
Z53
Fuse right power distribution
Driver's door trim panel lighting, centre
1 - Light source 18
Driver's door trim panel lighting, top
1 - Light source 19
Glove box pocket lighting, driver's
1 - Light source 17
Driver's side rear door trim panel lighting, centre
1 - Light source 21
Driver's side rear door trim panel lighting, top
1 - Light source 20
Glove box pocket lighting, driver's
1 - Light source 22
Driver's seat backrest rear panel lighting
1 - Light source 24
Footwell light, driver's side, rear
1 - Light source 23