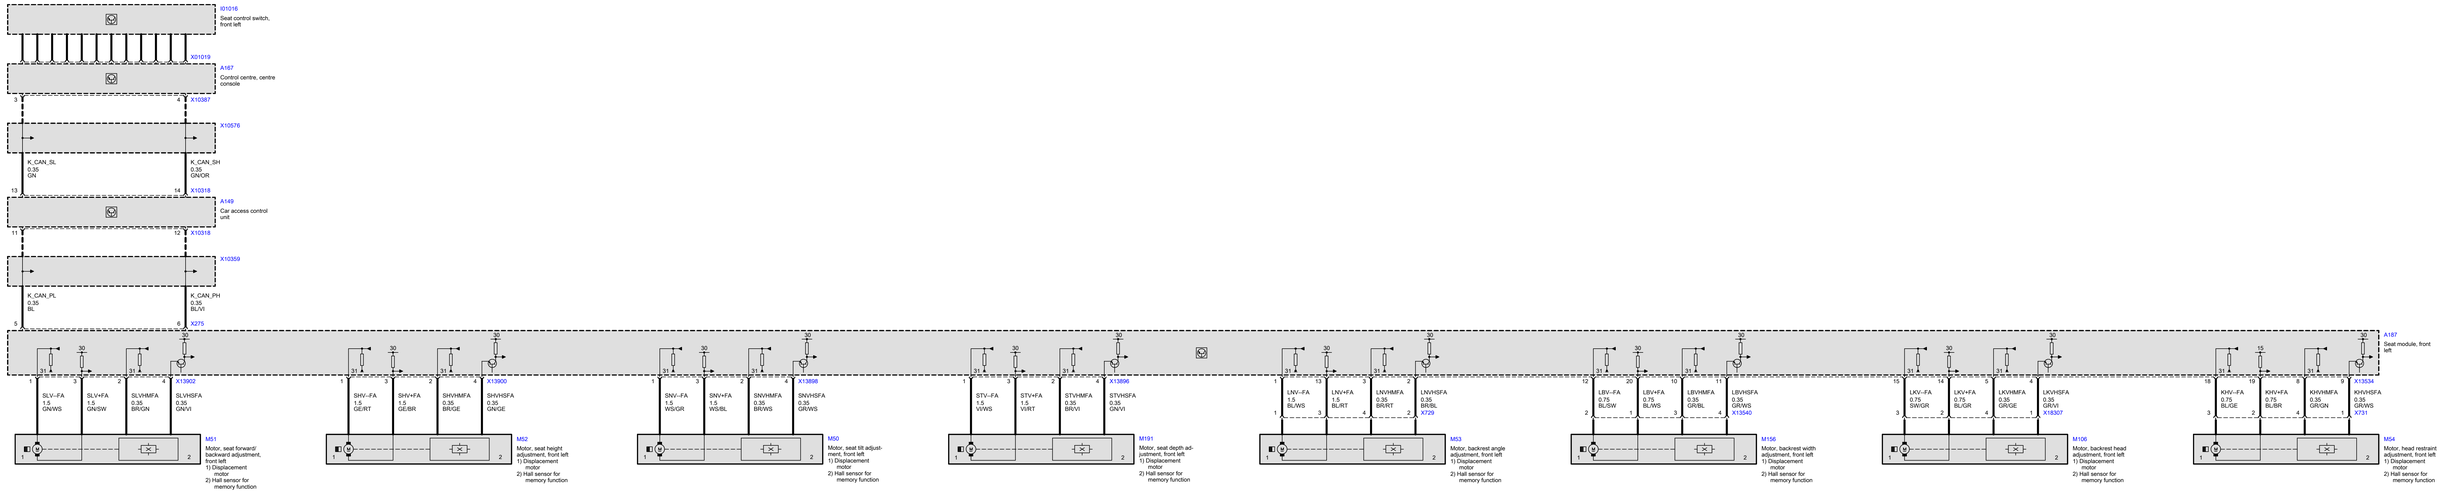
X01016
Seat control switch, front left
X01019
A167
Control centre, centre console
3
4
X10387
X10576
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
GN/OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10359
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
BL/VI
5
6
X275
A187
Seat module, front left
SLV–FA
1.5
GN/WS
SLV+FA
1.5
GN/SW
SLVHMFA
0.35
BR/GN
SLVHSFA
0.35
GN/VI
X13902
M51
Motor, seat forward/ backward adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
SHV–FA
1.5
GE/RT
SHV+FA
1.5
GE/BR
SHVHMFA
0.35
BR/GE
SHVHSFA
0.35
GN/GE
X13900
M52
Motor, seat height adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
SNV–FA
1.5
WS/GR
SNV+FA
1.5
WS/BL
SNVHMFA
0.35
BR/WS
SNVHSFA
0.35
GR/WS
X13898
M50
Motor, seat tilt adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
STV–FA
1.5
VI/WS
STV+FA
1.5
VI/RT
STVHMFA
0.35
BR/VI
STVHSFA
0.35
GN/VI
X13896
M191
Motor, seat depth adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LNV–FA
1.5
BL/WS
LNV+FA
1.5
BL/RT
LNVHMFA
0.35
BR/RT
LNVHSFA
0.35
BR/BL
X729
M53
Motor, backrest angle adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LBV–FA
0.75
BL/SW
LBV+FA
0.75
BL/WS
LBVHMFA
0.35
GR/BL
LBVHSFA
0.35
GR/WS
X13540
M156
Motor, backrest width adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LKV–FA
0.75
SW/GR
LKV+FA
0.75
BL/GR
LKVHMFA
0.35
GR/GE
LKVHSFA
0.35
GR/VI
X18307
M100
Motor, backrest head adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
KHV–FA
0.75
BL/GE
KHV+FA
0.75
BL/BR
KHVHMFA
0.35
GR/GN
KHVHSFA
0.35
GR/WS
X13534
X731
M54
Motor, head restraint adjustment, front left
1) Displacement motor
2) Hall sensor for memory function