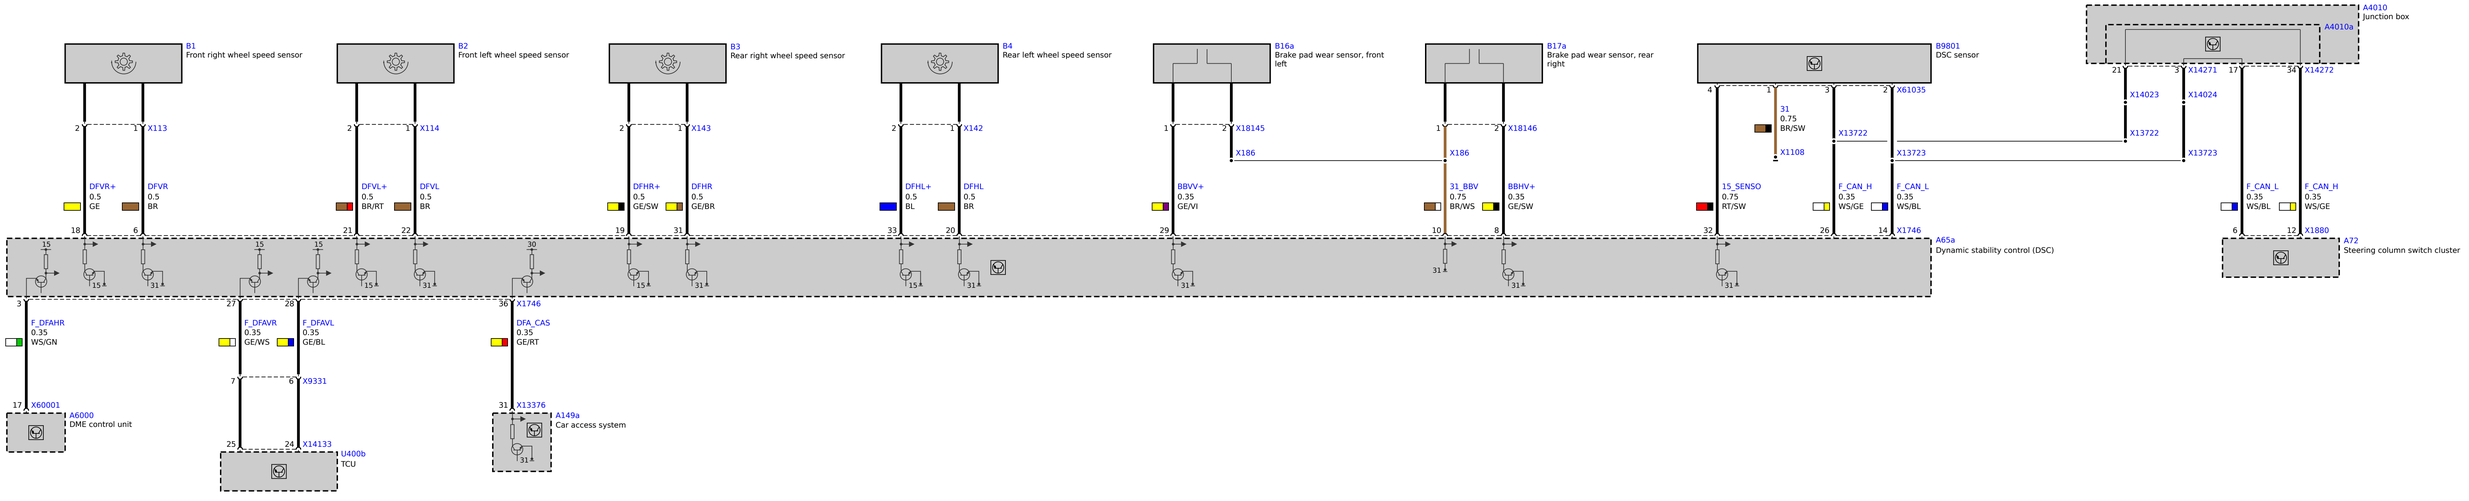
B1
Front right wheel speed sensor
B2
Front left wheel speed sensor
B3
Rear right wheel speed sensor
B4
Rear left wheel speed sensor
B16a
Brake pad wear sensor, front left
B17a
Brake pad wear sensor, rear right
B9801
DSC sensor
A4010
Junction box
A4010a
X113
X114
X143
X142
X18145
X18146
X186
X61035
X14271
X14272
X14023
X14024
X13722
X13723
X1108
DFVR+
0.5
GE
DFVR
0.5
BR
DFVL+
0.5
BR/RT
DFVL
0.5
BR
DFHR+
0.5
GE/SW
DFHR
0.5
GE/BR
DFHL+
0.5
BL
DFHL
0.5
BR
BBVV+
0.35
GE/VI
31_BBV
0.75
BR/WS
BBHV+
0.35
GE/SW
31
0.75
BR/SW
15_SENSO
0.75
RT/SW
F_CAN_H
0.35
WS/GE
F_CAN_L
0.35
WS/BL
X1746
A65a
Dynamic stability control (DSC)
A72
Steering column switch cluster
X1880
F_DFAHR
0.35
WS/GN
F_DFAVR
0.35
GE/WS
F_DFAVL
0.35
GE/BL
DFA_CAS
0.35
GE/RT
X9331
X60001
A6000
DME control unit
X14133
U400b
TCU
X13376
A149a
Car access system