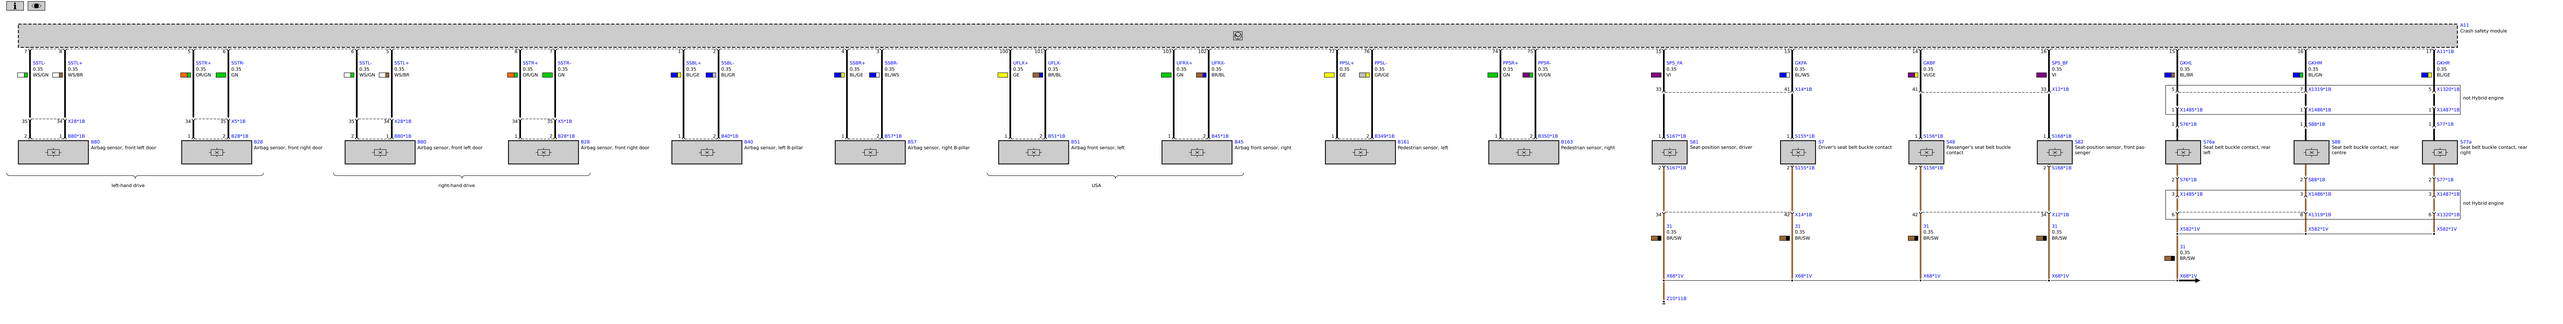
A11
Crash safety module
SSTL- 0.35 WS/GN
SSTL+ 0.35 WS/BR
X28*1B
B80*1B
B80
Airbag sensor, front left door
SSTR+ 0.35 OR/GN
SSTR- 0.35 GN
X5*1B
B28*1B
B28
Airbag sensor, front right door
left-hand drive
SSTL- 0.35 WS/GN
SSTL+ 0.35 WS/BR
X28*1B
B80*1B
B80
Airbag sensor, front left door
SSTR+ 0.35 OR/GN
SSTR- 0.35 GN
X5*1B
B28*1B
B28
Airbag sensor, front right door
right-hand drive
SSBL+ 0.35 BL/GE
SSBL- 0.35 BL/GR
B40*1B
B40
Airbag sensor, left B-pillar
SSBR+ 0.35 BL/GE
SSBR- 0.35 BL/WS
B57*1B
B57
Airbag sensor, right B-pillar
USA
UFLX+ 0.35 GE
UFLX- 0.35 BR/BL
B51*1B
B51
Airbag front sensor, left
UFRX+ 0.35 GN
UFRX- 0.35 BR/BL
B45*1B
B45
Airbag front sensor, right
PPSL+ 0.35 GE
PPSL- 0.35 GR/GE
B104*1B
B183
Pedestrian sensor, left
PPSR+ 0.35 GN
PPSR- 0.35 VI/GN
B150*1B
B163
Pedestrian sensor, right
SPS_FA 0.35 VI
X167*1B
S81
Seat-position sensor, driver
X167*1B
31 0.35 BR/SW
X68*1V
Z10*11B
GAFA 0.35 BL/WS
X14*1B
S7
Driver's seat belt buckle contact
X155*1B
X14*1B
31 0.35 BR/SW
X68*1V
CABF 0.35 VI/GE
X156*1B
S49
Passenger's seat belt buckle contact
X156*1B
31 0.35 BR/SW
X68*1V
SPS_BF 0.35 VI
X12*1B
S68
Seat-position sensor, front passenger
X168*1B
X12*1B
31 0.35 BR/SW
X68*1V
GAHL 0.35 BL/BR
X133*1B
X1485*1B
not Hybrid engine
X76*1B
S76a
Seat belt buckle contact, rear left
X76*1B
X1485*1B
X133*1B
X582*1V
31 0.35 BR/SW
X68*1V
GAHM 0.35 BL/GN
X1488*1B
S88
Seat belt buckle contact, rear centre
X1488*1B
X133*1B
X582*1V
GAHR 0.35 BL/GE
X132*1B
X1487*1B
not Hybrid engine
S77
Seat belt buckle contact, rear right
X77*1B
S77a
Seat belt buckle contact, rear right
X77*1B
X132*1B
X582*1V