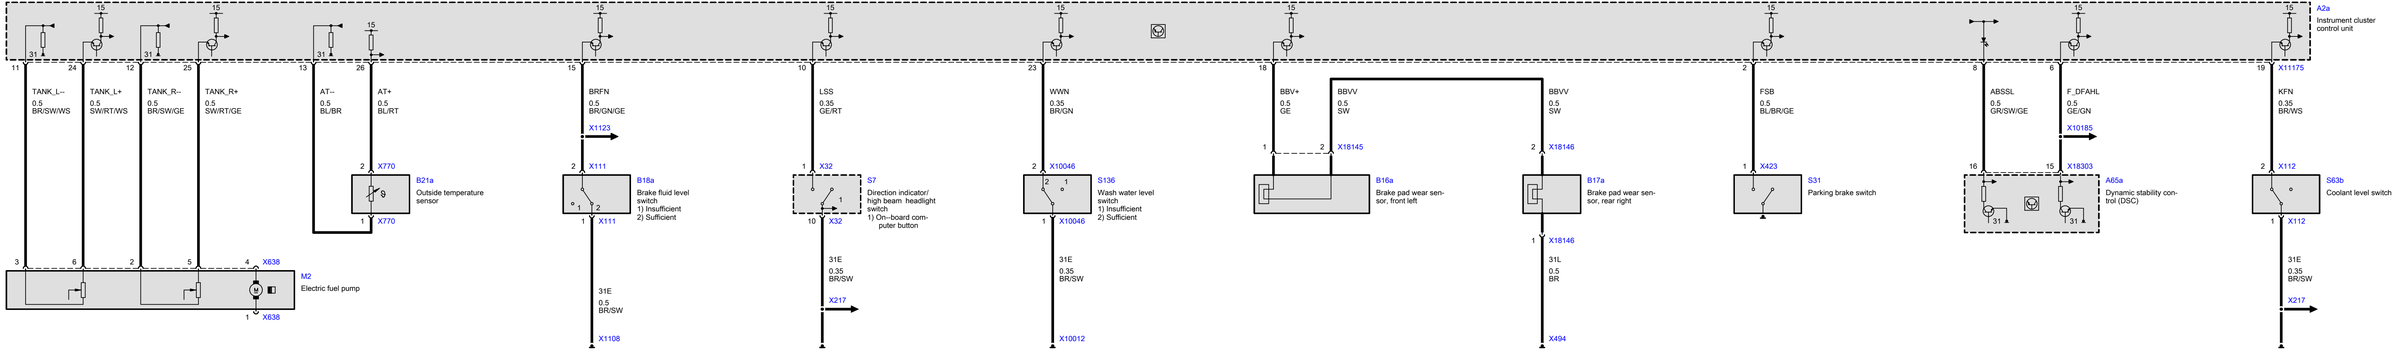
A2a
Instrument cluster control unit
TANK_L--
0.5
BR/SW/WS
TANK_L+
0.5
SW/RT/WS
TANK_R--
0.5
BR/SW/GE
TANK_R+
0.5
SW/RT/GE
X638
M2
Electric fuel pump
AT--
0.5
BL/BR
AT+
0.5
BL/RT
X770
B21a
Outside temperature sensor
BRFN
0.5
BR/GN/GE
X1123
X111
B18a
Brake fluid level switch
1) Insufficient
2) Sufficient
31E
0.5
BR/SW
X1108
LSS
0.35
GE/RT
X32
S7
Direction indicator/ high beam headlight switch
1) On--board computer button
31E
0.35
BR/SW
X217
WWN
0.35
BR/GN
X10046
S136
Wash water level switch
1) Insufficient
2) Sufficient
31E
0.35
BR/SW
X10012
BBV+
0.5
GE
BBVV
0.5
SW
X18145
B16a
Brake pad wear sensor, front left
BBVV
0.5
SW
X18146
B17a
Brake pad wear sensor, rear right
31L
0.5
BR
X494
FSB
0.5
BL/BR/GE
X423
S31
Parking brake switch
ABSSL
0.5
GR/SW/GE
F_DFAHL
0.5
GE/GN
X10185
X18303
A65a
Dynamic stability control (DSC)
KFN
0.35
BR/WS
X11175
X112
S63b
Coolant level switch
31E
0.35
BR/SW
X217