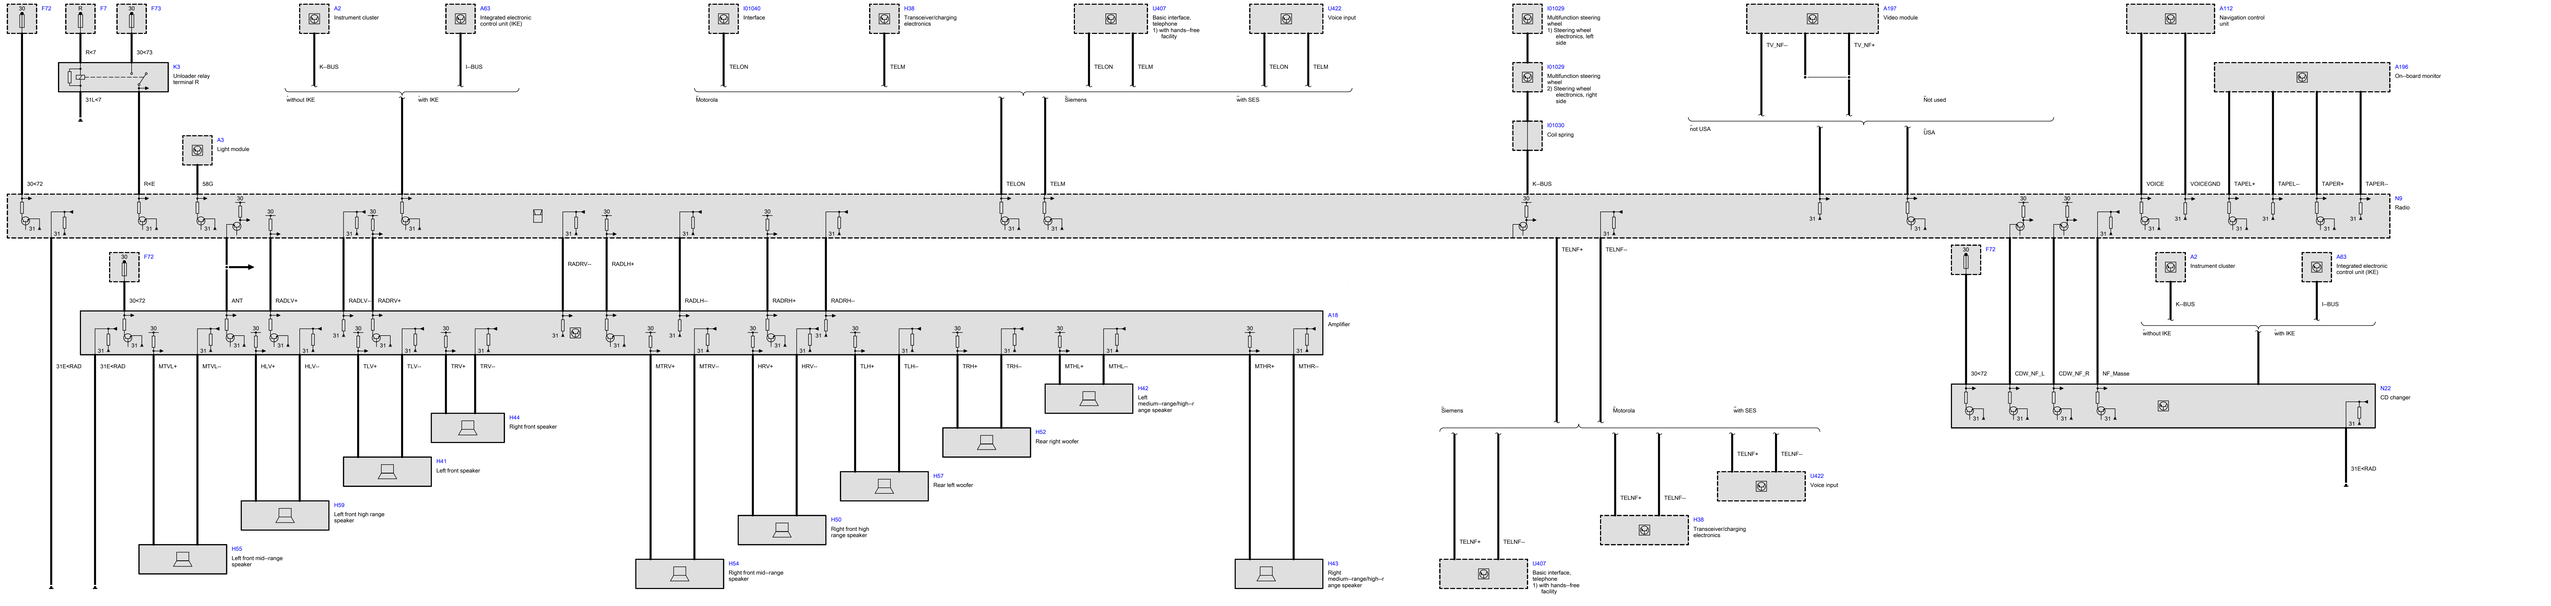
F72
F7
F73
R<7
30<73
K3
Unloader relay terminal R
31L<7
A2
Instrument cluster
K–BUS
A63
Integrated electronic control unit (IKE)
I–BUS
without IKE
with IKE
I01040
Interface
TELON
H38
Transceiver/charging electronics
TELM
Motorola
U407
Basic interface, telephone 1) with hands–free facility
U422
Voice input
Siemens
with SES
A3
Light module
30<72
R<E
58G
A18
Amplifier
RADRV–
RADLH+
RADLH–
RADRH+
RADRH–
30<T2
ANT
RADLV+
RADLV–
RADRV+
31E<RAD
MTVL+
MTVL–
HLV+
HLV–
TLV+
TLV–
TRV+
TRV–
MTRV+
MTRV–
HRV+
HRV–
TLH+
TLH–
TRH+
TRH–
MTHL+
MTHL–
MTHR+
MTHR–
H44
Right front speaker
H41
Left front speaker
H59
Left front high range speaker
H55
Left front mid–range speaker
H54
Right front mid–range speaker
H50
Right front high range speaker
H57
Rear left woofer
H52
Rear right woofer
H42
Left medium–range/high–range speaker
H43
Right medium–range/high–range speaker
I01029
Multifunction steering wheel 1) Steering wheel electronics, left side
I01029
Multifunction steering wheel 2) Steering wheel electronics, right side
I01030
Coil spring
K–BUS
TELNF+
TELNF–
A197
Video module
TV_NF–
TV_NF+
Not used
not USA
USA
A112
Navigation control unit
A196
On–board monitor
VOICE
VOICEGND
TAPEL+
TAPEL–
TAPER+
TAPER–
N9
Radio
CDW_NF_L
CDW_NF_R
NF_Masse
N22
CD changer