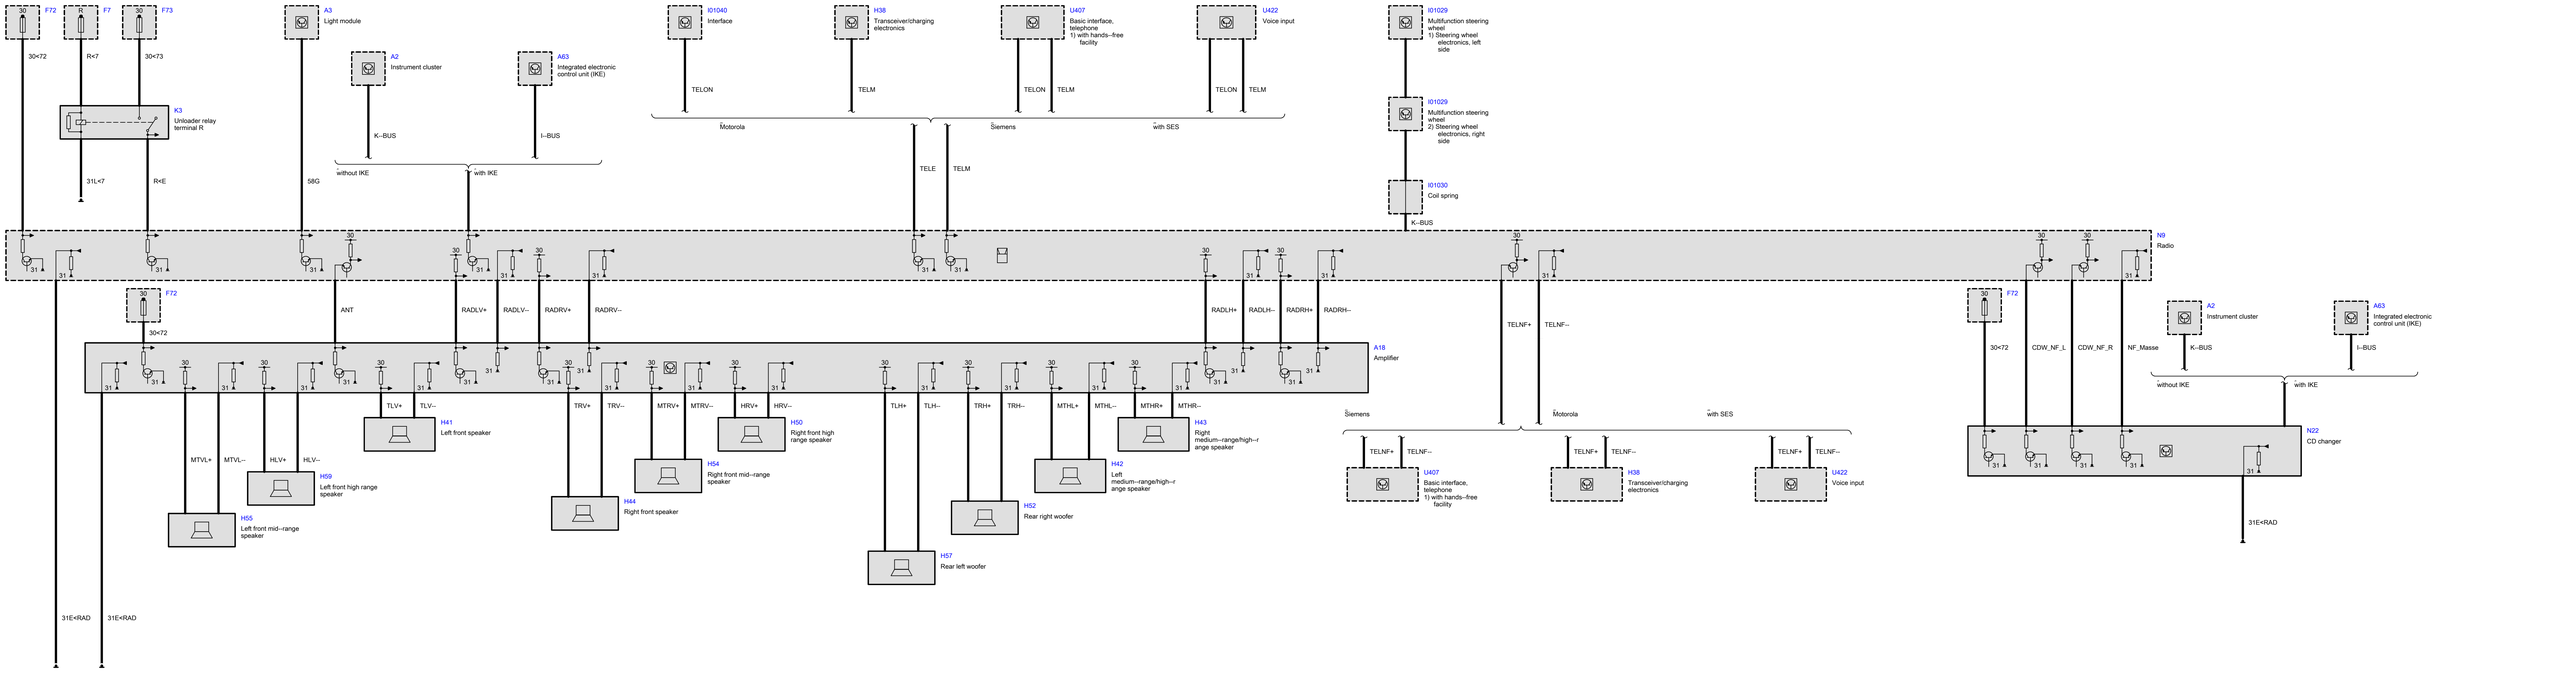
F72
F7
F73
30<72
R<7
30<73
K3
Unloader relay terminal R
31L<7
R<E
A3
Light module
58G
A2
Instrument cluster
K–BUS
A63
Integrated electronic control unit (IKE)
I–BUS
without IKE
with IKE
I01040
Interface
TELON
Motorola
H38
Transceiver/charging electronics
TELM
U407
Basic interface, telephone
1) with hands–free facility
TELON
TELM
Siemens
U422
Voice input
TELON
TELM
with SES
TELE
TELM
I01029
Multifunction steering wheel
1) Steering wheel electronics, left side
I01029
Multifunction steering wheel
2) Steering wheel electronics, right side
I01030
Coil spring
K–BUS
N9
Radio
ANT
RADLV+
RADLV–
RADRV+
RADRV–
RADLH+
RADLH–
RADRH+
RADRH–
A18
Amplifier
TELNF+
TELNF–
F72
30<72
CDW_NF_L
CDW_NF_R
NF_Masse
A2
Instrument cluster
K–BUS
A63
Integrated electronic control unit (IKE)
I–BUS
without IKE
with IKE
N22
CD changer
31E<RAD
TLV+
TLV–
H41
Left front speaker
MTVL+
MTVL–
HLV+
HLV–
H59
Left front high range speaker
H55
Left front mid–range speaker
TRV+
TRV–
H44
Right front speaker
MTRV+
MTRV–
H54
Right front mid–range speaker
HRV+
HRV–
H50
Right front high range speaker
TLH+
TLH–
H57
Rear left woofer
TRH+
TRH–
H52
Rear right woofer
MTHL+
MTHL–
H42
Left medium–range/high–range speaker
MTHR+
MTHR–
H43
Right medium–range/high–range speaker
31E<RAD
31E<RAD
Siemens
Motorola
with SES
TELNF+
TELNF–
U407
Basic interface, telephone
1) with hands–free facility
TELNF+
TELNF–
H38
Transceiver/charging electronics
TELNF+
TELNF–
U422
Voice input