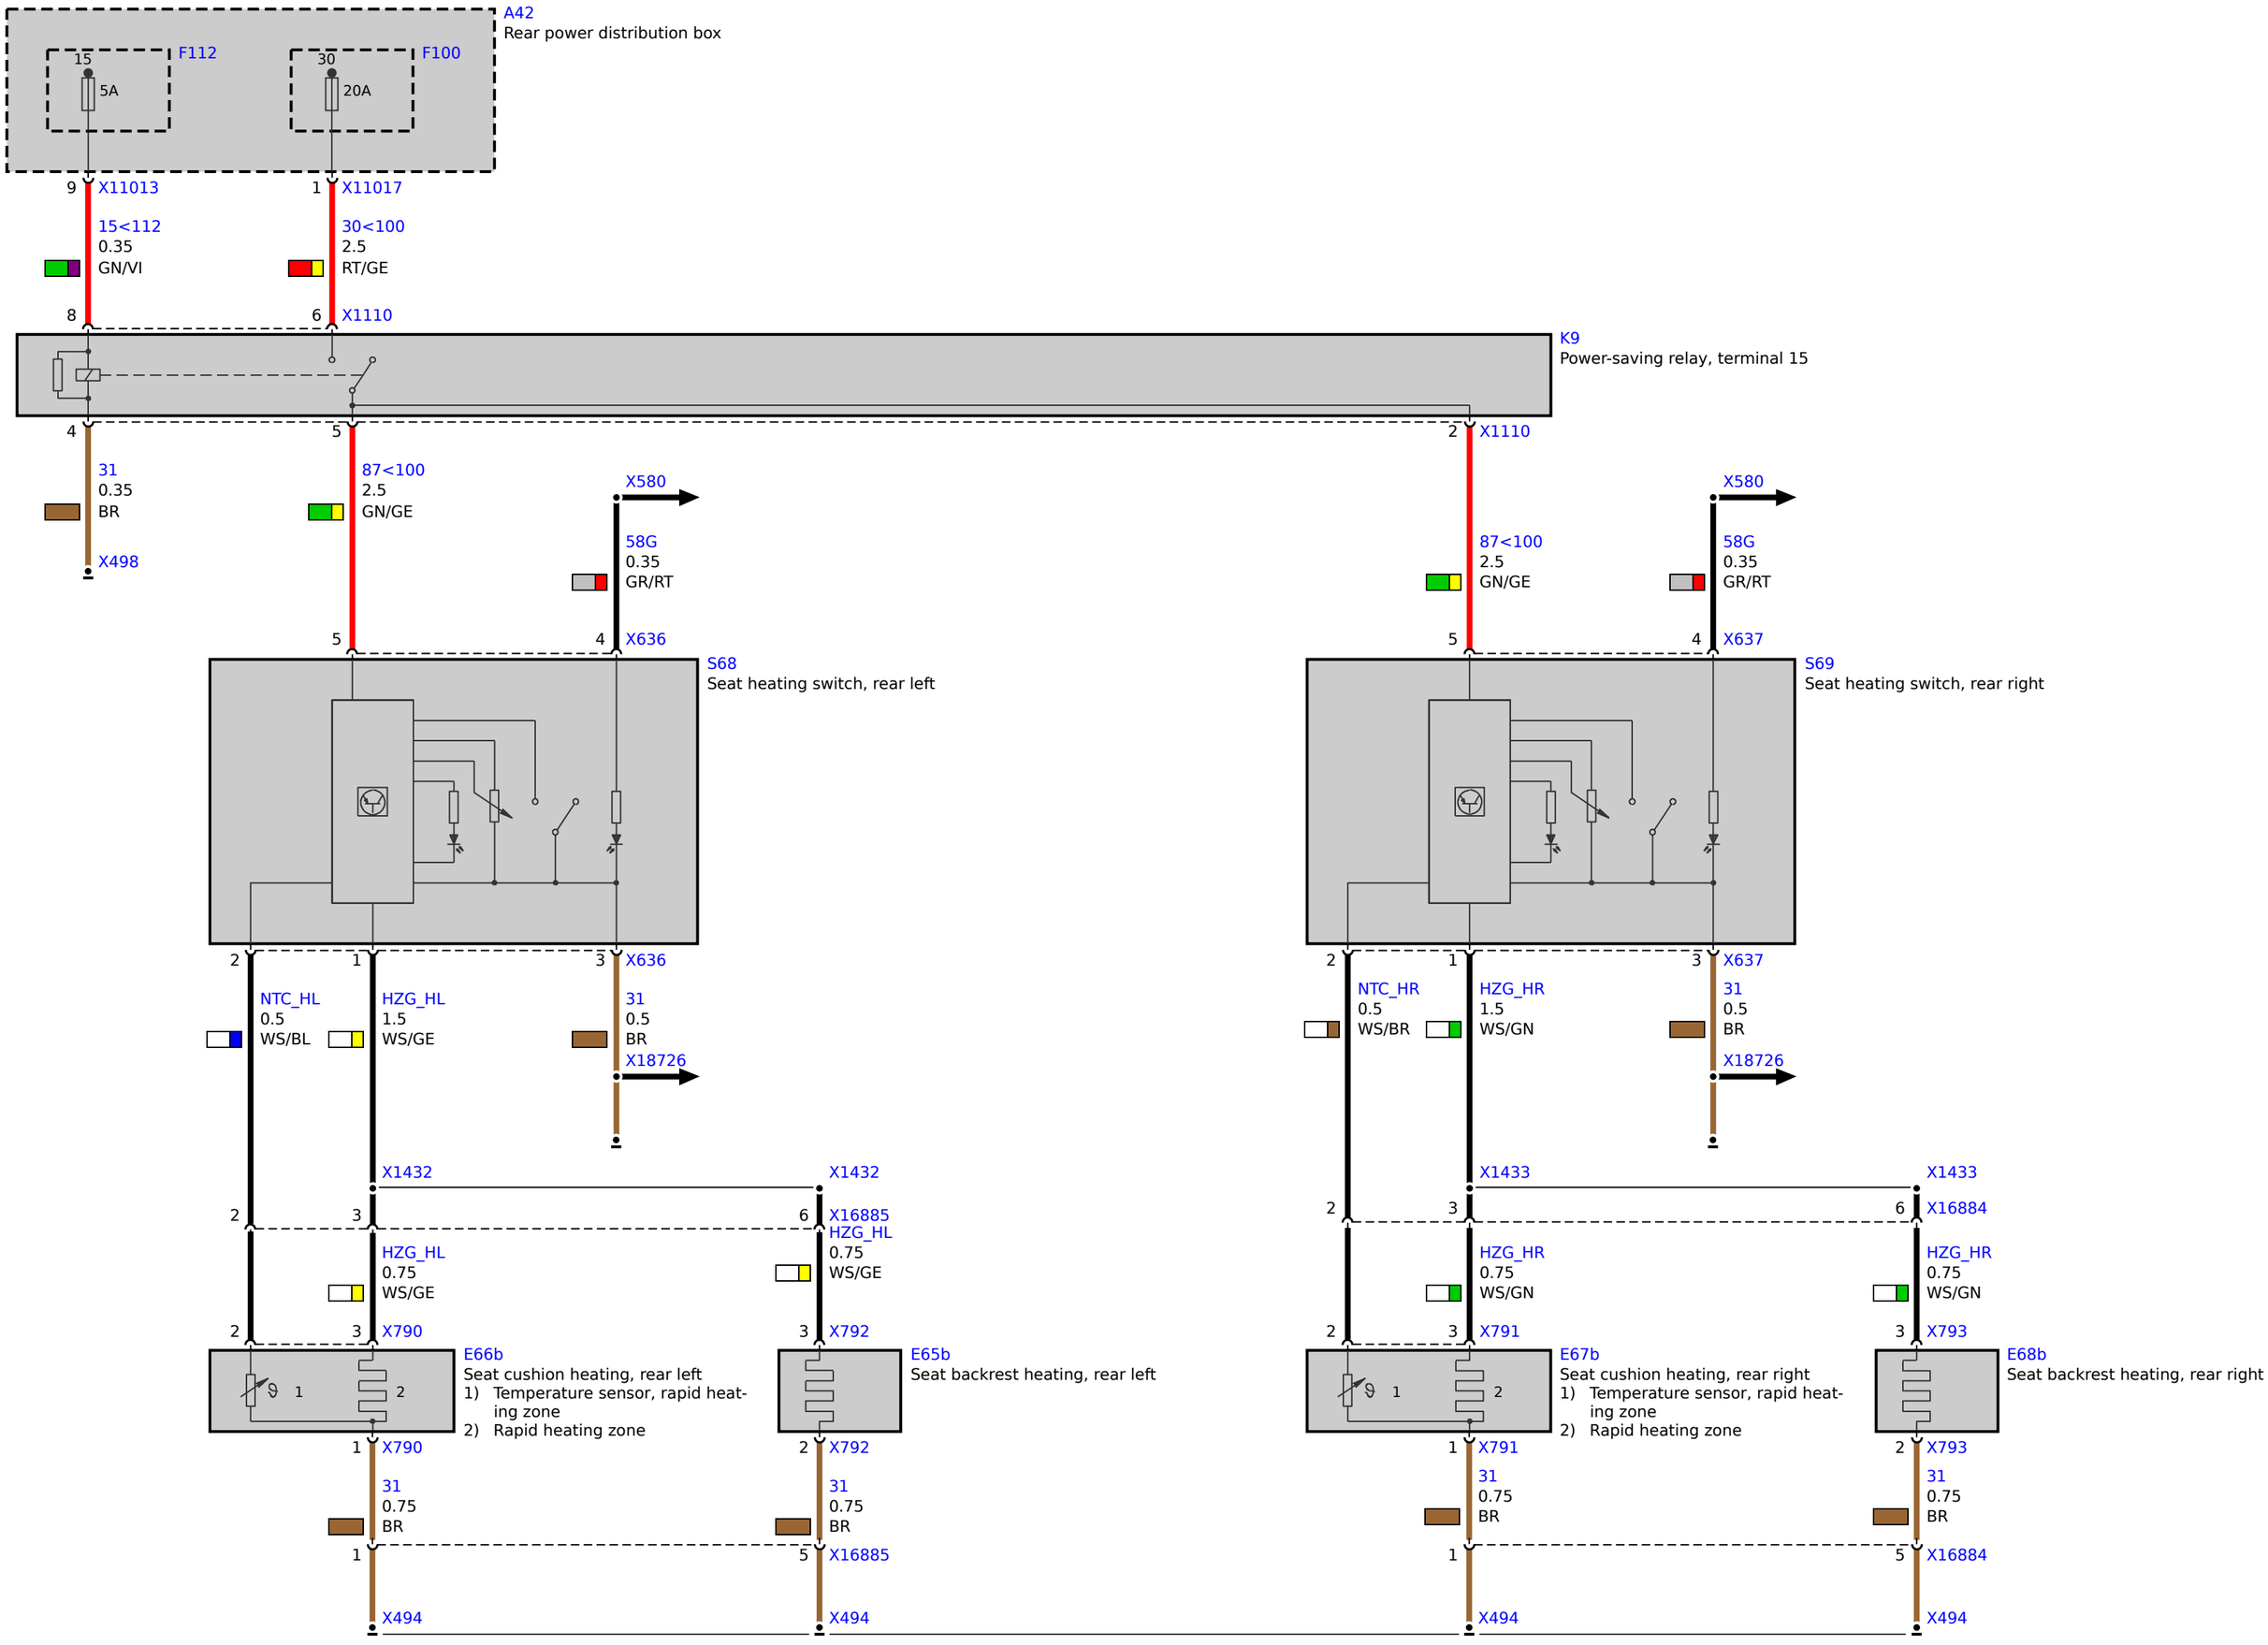
A42
Rear power distribution box
15
F112
5A
30
F100
20A
9
X11013
15<112
0.35
GN/VI
1
X11017
30<100
2.5
RT/GE
8
6
X1110
K9
Power-saving relay, terminal 15
4
5
2
X1110
31
0.35
BR
X498
87<100
2.5
GN/GE
X580
58G
0.35
GR/RT
X580
87<100
2.5
GN/GE
58G
0.35
GR/RT
5
4
X636
5
4
X637
S68
Seat heating switch, rear left
S69
Seat heating switch, rear right
2
1
3
X636
NTC_HL
0.5
WS/BL
HZG_HL
1.5
WS/GE
31
0.5
BR
X18726
2
1
3
X637
NTC_HR
0.5
WS/BR
HZG_HR
1.5
WS/GN
31
0.5
BR
X18726
X1432
X1432
2
3
6
X16885
HZG_HL
HZG_HL
0.75
WS/GE
HZG_HL
0.75
WS/GE
X1433
X1433
2
3
6
X16884
HZG_HR
0.75
WS/GN
HZG_HR
0.75
WS/GN
2
3
X790
3
X792
2
3
X791
3
X793
E66b
Seat cushion heating, rear left
1) Temperature sensor, rapid heating zone
2) Rapid heating zone
E65b
Seat backrest heating, rear left
E67b
Seat cushion heating, rear right
1) Temperature sensor, rapid heating zone
2) Rapid heating zone
E68b
Seat backrest heating, rear right
1
X790
2
X792
1
X791
2
X793
31
0.75
BR
31
0.75
BR
31
0.75
BR
31
0.75
BR
1
5
X16885
1
5
X16884
X494
X494
X494
X494