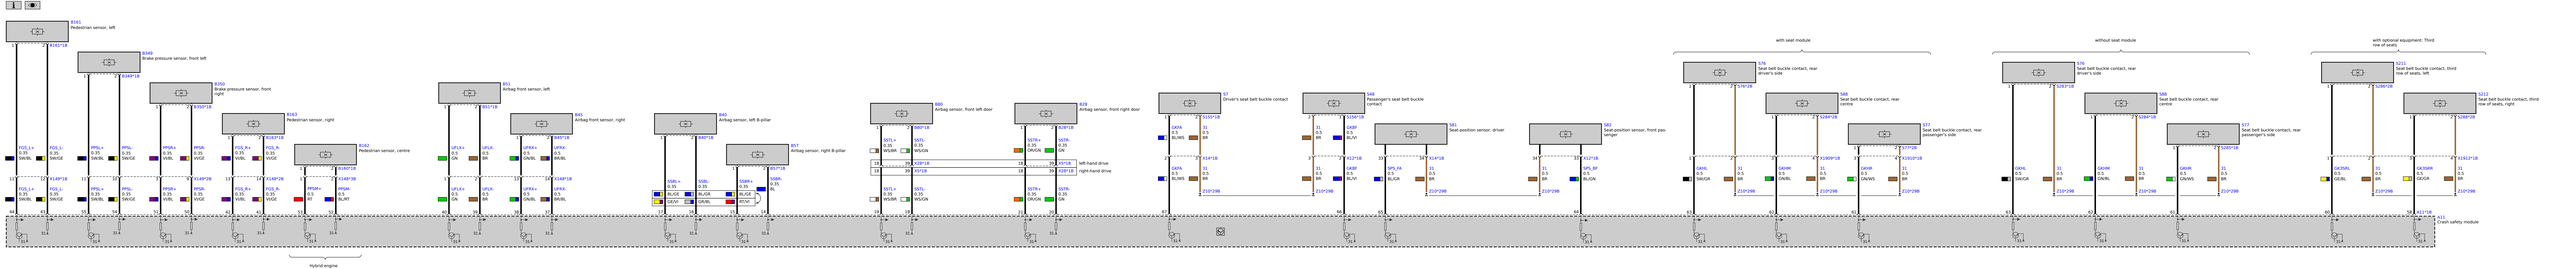
B161
Pedestrian sensor, left
B161*1B
B349
Brake pressure sensor, front left
B349*1B
B350
Brake pressure sensor, front right
B350*1B
X163
Pedestrian sensor, right
X163*1B
X162
Pedestrian sensor, centre
X162*1B
B51
Airbag front sensor, left
B51*1B
B45
Airbag front sensor, right
B45*1B
B40
Airbag sensor, left B-pillar
B40*1B
X57
Airbag sensor, right B-pillar
X57*1B
B80
Airbag sensor, front left door
B80*1B
B18
Airbag sensor, front right door
B18*1B
left-hand drive
right-hand drive
X2
Driver's seat belt buckle contact
X2*1B
X48
Passenger's seat belt buckle contact
X48*1B
X61
Seat-position sensor, driver
X61*1B
X62
Seat-position sensor, front passenger
X62*1B
with seat module
X70
Seat belt buckle contact, rear driver's side
X70*1B
X88
Seat belt buckle contact, rear centre
X88*1B
X127
Seat belt buckle contact, rear passenger's side
X127*1B
without seat module
X56
Seat belt buckle contact, rear driver's side
X56*1B
X68
Seat belt buckle contact, rear centre
X68*1B
X97
Seat belt buckle contact, rear passenger's side
X97*1B
with optional equipment: Third row of seats
X215
Seat belt buckle contact, third row of seats, left
X215*1B
X212
Seat belt buckle contact, third row of seats, right
X212*1B
A11
Crash safety module
A11*1B
Hybrid engine