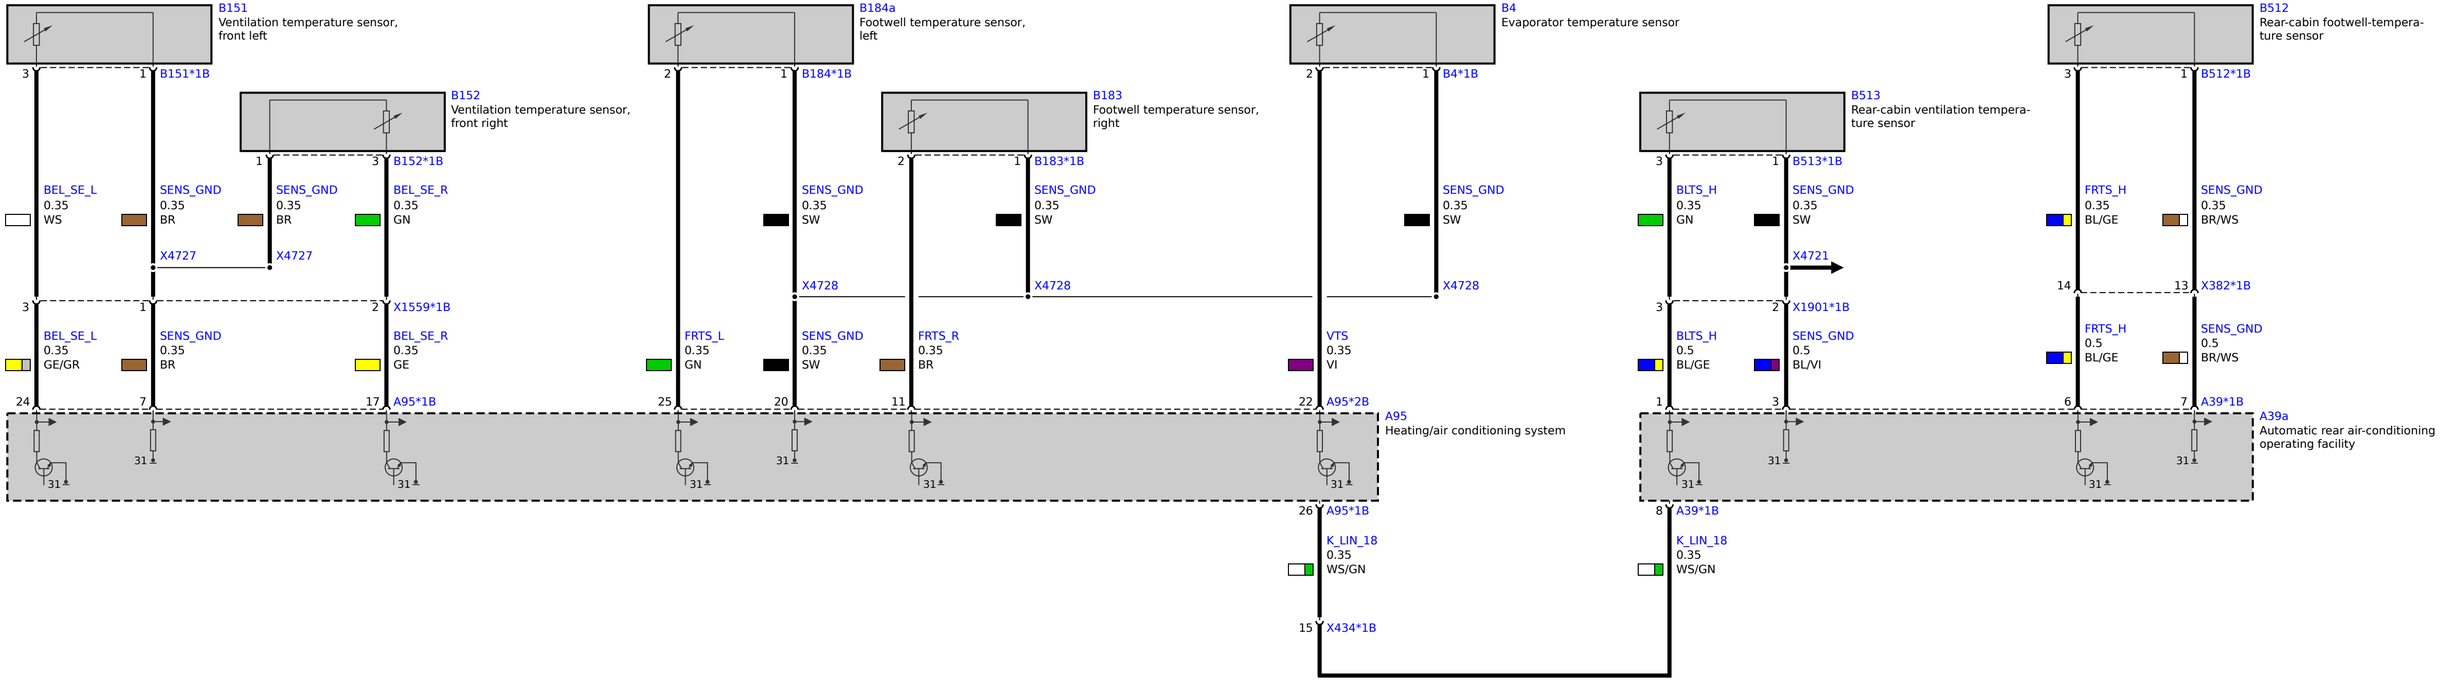
B151
Ventilation temperature sensor, front left
B152
Ventilation temperature sensor, front right
B184a
Footwell temperature sensor, left
B183
Footwell temperature sensor, right
B4
Evaporator temperature sensor
B513
Rear-cabin ventilation temperature sensor
B512
Rear-cabin footwell-temperature sensor
A95
Heating/air conditioning system
A39a
Automatic rear air-conditioning operating facility
B151*1B
B152*1B
B184*1B
B183*1B
B4*1B
B513*1B
B512*1B
BEL_SE_L 0.35 WS
SENS_GND 0.35 BR
SENS_GND 0.35 BR
BEL_SE_R 0.35 GN
X4727
X4727
SENS_GND 0.35 SW
SENS_GND 0.35 SW
SENS_GND 0.35 SW
SENS_GND 0.35 SW
X4728
X4728
BLTS_H 0.35 GN
SENS_GND 0.35 SW
X4721
FRTS_H 0.35 BL/GE
SENS_GND 0.35 BR/WS
X1559*1B
X1901*1B
X382*1B
BEL_SE_L 0.35 GE/GR
SENS_GND 0.35 BR
BEL_SE_R 0.35 GE
FRTS_L 0.35 GN
SENS_GND 0.35 SW
FRTS_R 0.35 BR
VTS 0.35 VI
BLTS_H 0.5 BL/GE
SENS_GND 0.5 BL/VI
FRTS_H 0.5 BL/GE
SENS_GND 0.5 BR/WS
A95*1B
A95*2B
A39*1B
A95*1B
K_LIN_18 0.35 WS/GN
X434*1B
A39*1B
K_LIN_18 0.35 WS/GN