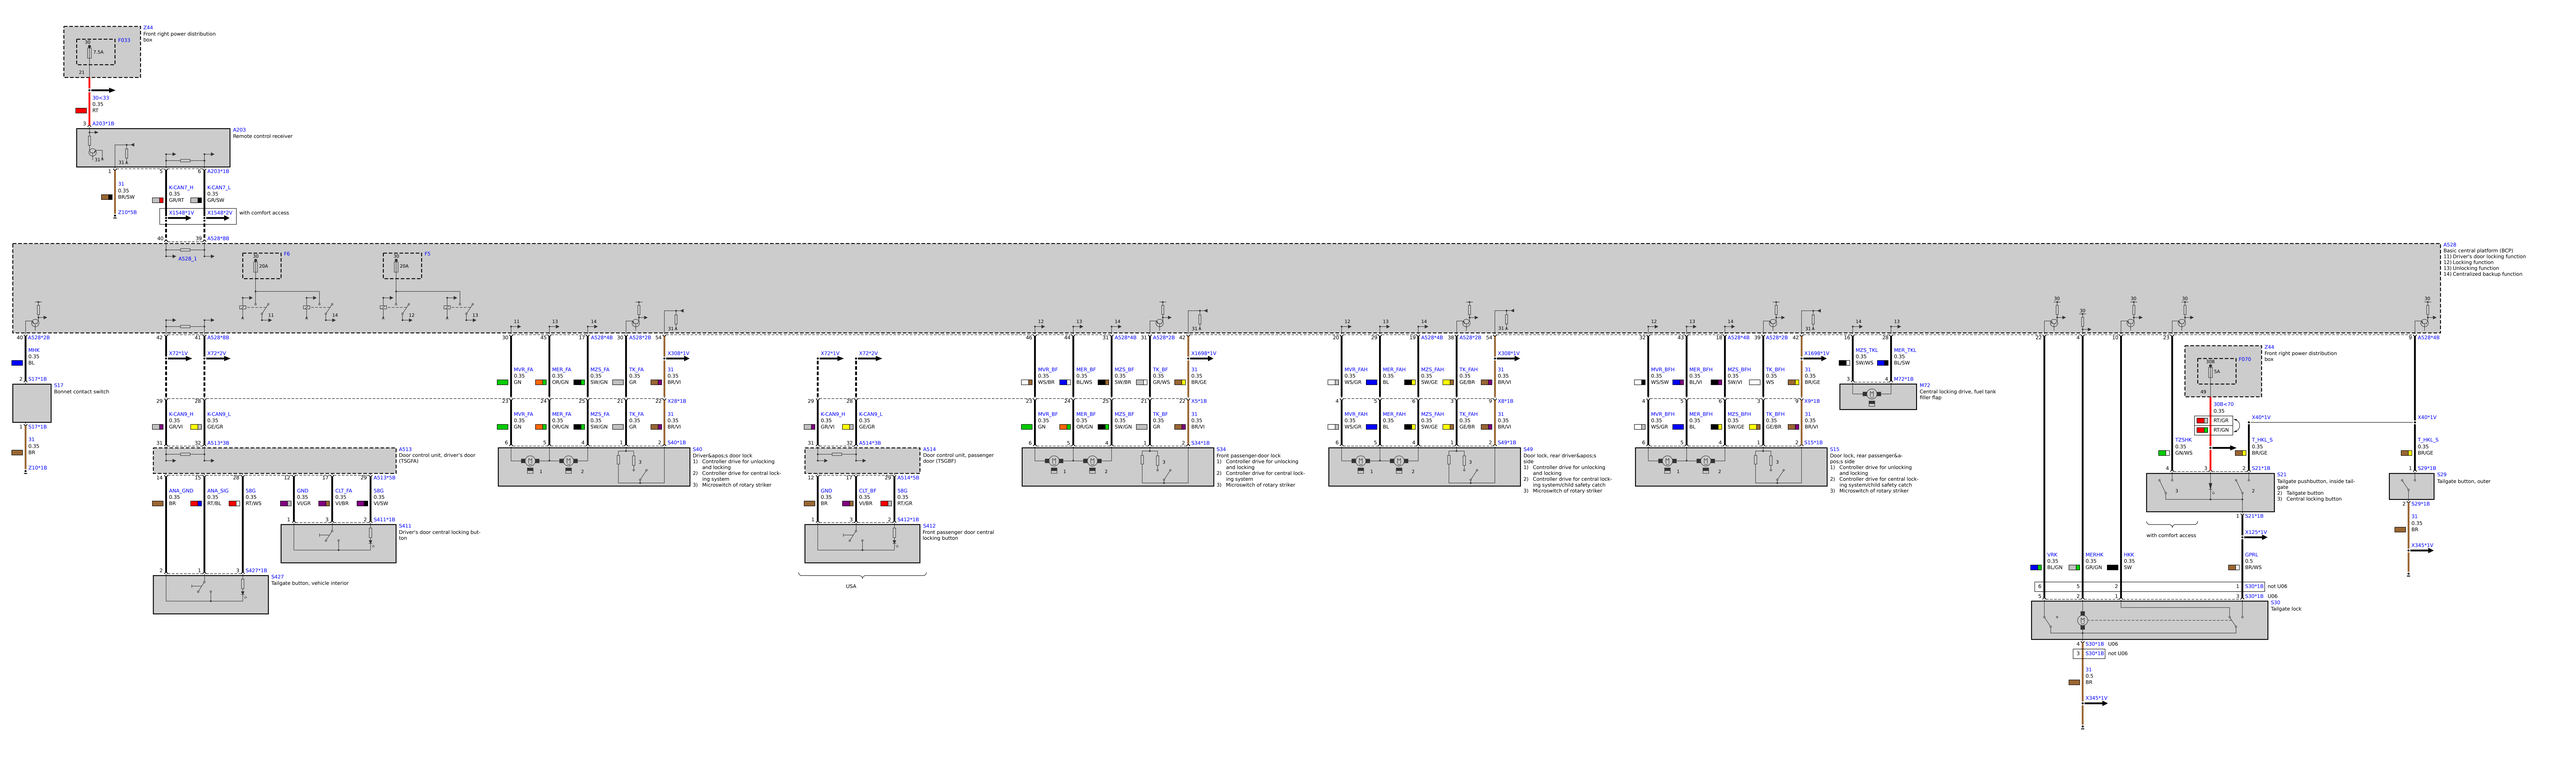
Z44
Front right power distribution box
F033
7.5A
30
87
30*33
0.35
RT
A203*1B
A203
Remote control receiver
31.4
31
0.35
BR/SW
Z10*58
A203*1B
K-CAN7_H
0.35
GR/RT
K-CAN7_L
0.35
GR/SW
X154B*2V
X154B*2V
with comfort access
A528*8B
A528_1
F6
20A
F5
20A
A528*2B
MHK
0.35
BL
S17*1B
Bonnet contact switch
S17*1B
31
0.35
BR
Z10*1B
X72*1C
X72*2C
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GR/GR
A513*3B
A513
Door control unit, driver's door (TSGFA)
ANA_GND
0.35
BR
ANA_SIG
0.35
RT/BL
SIG
0.35
RT/WS
GND
0.35
VI/GR
CLT_FA
0.35
VI/BR
VBG
0.35
VI/SW
A513*5B
S411*1B
S411
Driver's door central locking button
S427*1B
S427
Tailgate button, vehicle interior
MVR_FA
0.35
GN
MER_FA
0.35
GR/GN
MZS_FA
0.35
SW/GN
TK_FA
0.35
GR
A528*4B
A528*2B
X308*1V
31
0.35
BR/VI
X28*1B
S40*1B
S40
Driver's door lock
1) Controller drive for unlocking and locking
2) Controller drive for central locking system
3) Microswitch of rotary striker
X72*1C
X72*2C
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GR/GR
A514*3B
A514
Door control unit, passenger door (TSGBF)
GND
0.35
BR
CLT_BF
0.35
VI/BR
S81
0.35
RT/GR
S412*1B
S412
Front passanger door central locking button
USA
MVR_BF
0.35
GN
MER_BF
0.35
BL/WS
MZS_BF
0.35
SW/BR
TK_BF
0.35
GR/WS
A528*4B
A528*2B
X169B*1V
31
0.35
BR/GE
X5*1B
S34*1B
S34
Front passenger-door lock
1) Controller drive for unlocking and locking
2) Controller drive for central locking system
3) Microswitch of rotary striker
MVR_FAH
0.35
WS/GR
MER_FAH
0.35
RL
MZS_FAH
0.35
SW/GE
TK_FAH
0.35
GE/BR
A528*4B
A528*2B
X308*1V
31
0.35
BR/VI
X8*1B
S49*1B
S49
Door lock, rear driver's side
1) Controller drive for unlocking and locking
2) Controller drive for central locking system/child safety catch
3) Microswitch of rotary striker
MVR_BFH
0.35
WS/GR
MER_BFH
0.35
RL/VI
MZS_BFH
0.35
SW/VI
TK_BFH
0.35
WS
A528*4B
A528*2B
X169B*1V
31
0.35
BR/GE
X9*1B
S15*1B
S15
Door lock, rear passenger's side
1) Controller drive for unlocking and locking
2) Controller drive for central locking system/child safety catch
3) Microswitch of rotary striker
MZS_TKL
0.35
SW/WS
MVR_TKL
0.35
BL/SW
M72*1B
M72
Central locking drive, fuel tank filler flap
A528
Basic central platform (BCP)
1) Drivers door locking function
2) Locking function
3) Unlocking function
4) Centralized backup function
Z44
Front right power distribution box
F070
5A
X40*1V
308+70
0.35
RT/GN
RT/GR
T25HK
0.35
GN/WS
X40*1V
T_HKL_S
0.35
BR/GE
S29*1B
S29
Tailgate button, outer
S21*1B
S21
Tailgate pushbutton, inside tailgate
2) Tailgate button
3) Central locking button
with comfort access
X25*1V
GPRL
0.5
BR/WS
S30*1B
not U06
S30*1B
U06
S30
Tailgate lock
VHK
0.35
BL/GN
MERHK
0.35
GR/GN
HKK
0.35
SW
S30*1B
U06
S30*1B
not U06
31
0.5
BR
X345*1V
X345*1V