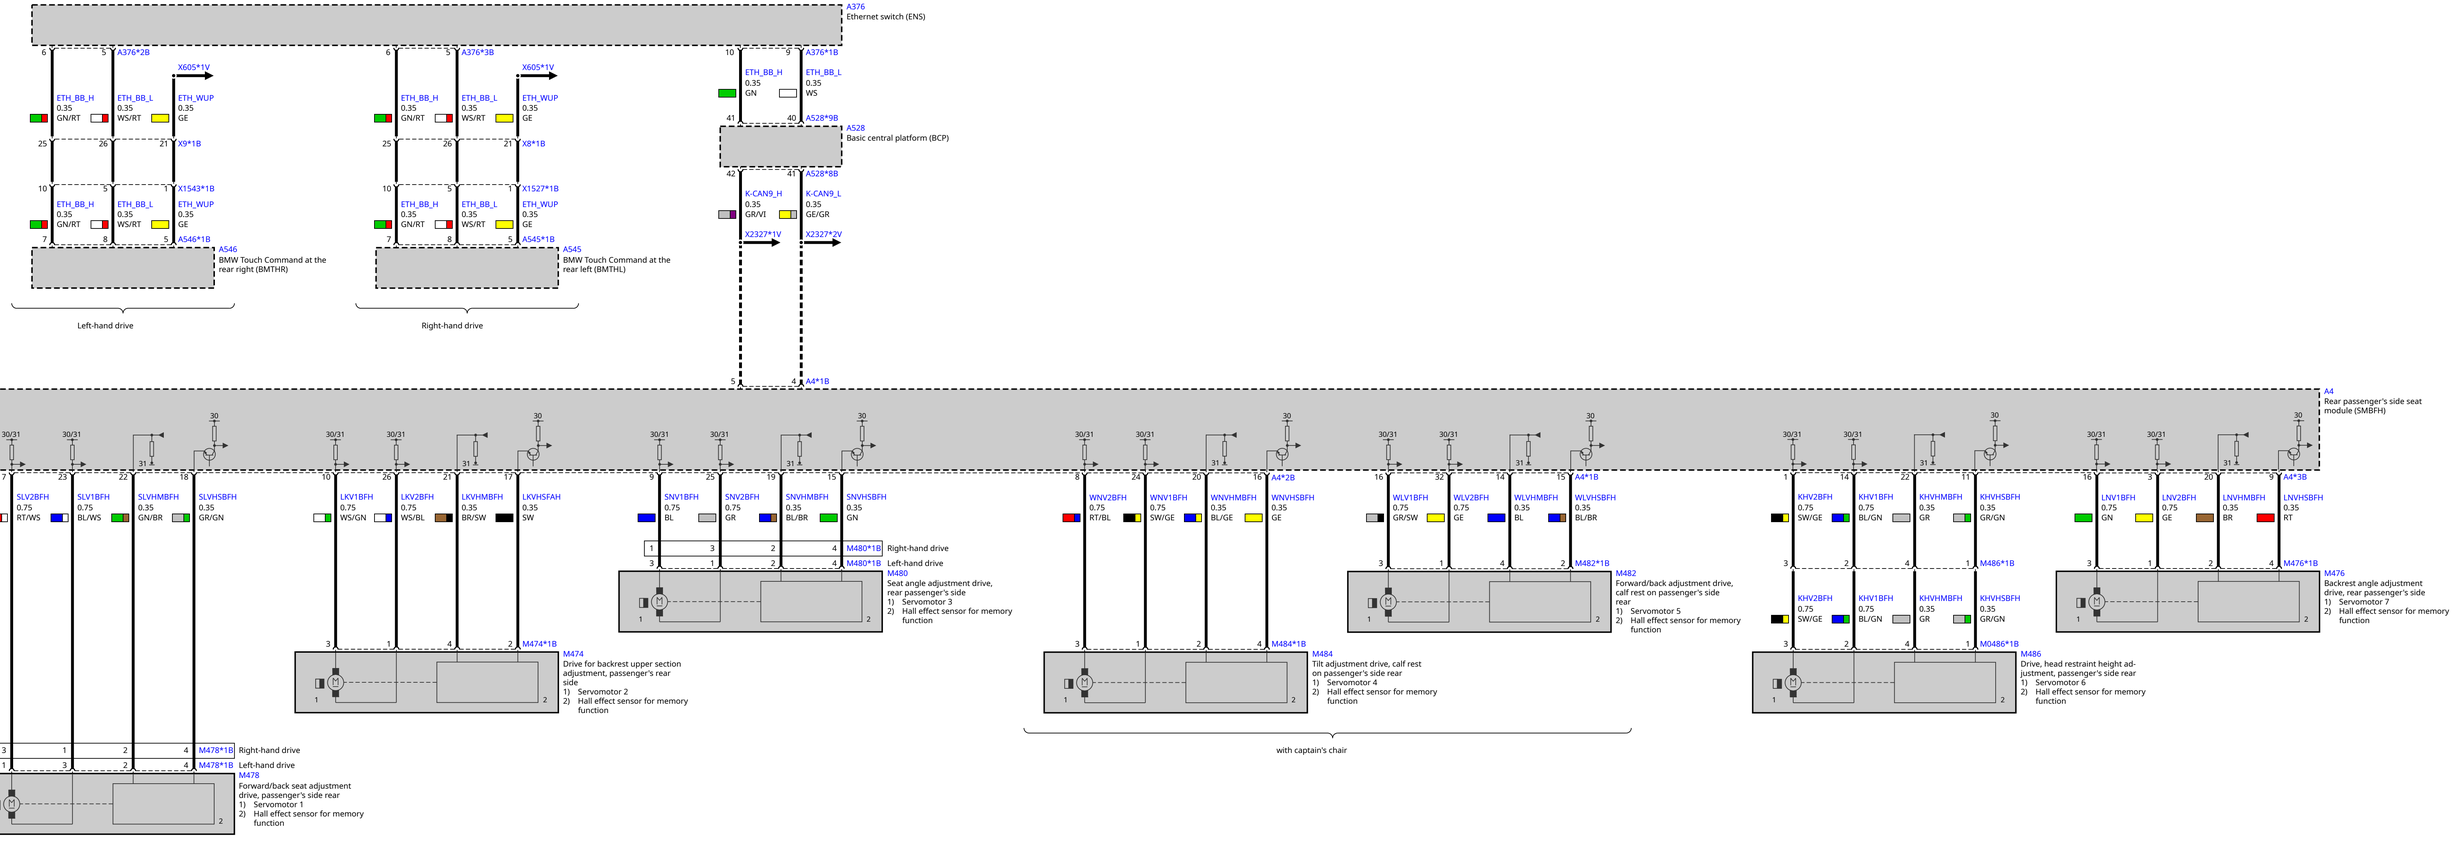
A376
Ethernet switch (ENS)
A376*2B
X605*1V
ETH_BB_H
0.35
GN/RT
ETH_BB_L
0.35
WS/RT
ETH_WUP
0.35
GE
X9*1B
X1543*1B
A546*1B
A546
BMW Touch Command at the rear right (BMTHR)
Left-hand drive
A376*3B
X8*1B
X1527*1B
A545*1B
A545
BMW Touch Command at the rear left (BMTHL)
Right-hand drive
A376*1B
ETH_BB_H
0.35
GN
ETH_BB_L
0.35
WS
A528*9B
A528
Basic central platform (BCP)
A528*8B
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
X2327*1V
X2327*2V
A4*1B
A4
Rear passenger's side seat module (SMBFH)
30/31
30
SLV2BFH
0.75
RT/WS
SLV1BFH
0.75
BL/WS
SLVHMBFH
0.35
GN/BR
SLVHSBFH
0.35
GR/GN
M478*1B
Right-hand drive
M478*1B
Left-hand drive
M478
Forward/back seat adjustment drive, passenger's side rear
1) Servomotor 1
2) Hall effect sensor for memory function
LKV1BFH
0.75
WS/GN
LKV2BFH
0.75
WS/BL
LKVHMBFH
0.35
BR/SW
LKVHSFAH
0.35
SW
M474*1B
M474
Drive for backrest upper section adjustment, passenger's rear side
1) Servomotor 2
2) Hall effect sensor for memory function
SNV1BFH
0.75
BL
SNV2BFH
0.75
GR
SNVHMBFH
0.35
BL/BR
SNVHSBFH
0.35
GN
M480*1B
Right-hand drive
M480*1B
Left-hand drive
M480
Seat angle adjustment drive, rear passenger's side
1) Servomotor 3
2) Hall effect sensor for memory function
WNV2BFH
0.75
RT/BL
WNV1BFH
0.75
SW/GE
WNVHMBFH
0.35
BL/GE
WNVHSBFH
0.35
GE
A4*2B
M484*1B
M484
Tilt adjustment drive, calf rest on passenger's side rear
1) Servomotor 4
2) Hall effect sensor for memory function
with captain's chair
WLV1BFH
0.75
GR/SW
WLV2BFH
0.75
GE
WLVHMBFH
0.35
BL
WLVHSBFH
0.35
BL/BR
A4*1B
M482*1B
M482
Forward/back adjustment drive, calf rest on passenger's side rear
1) Servomotor 5
2) Hall effect sensor for memory function
KHV2BFH
0.75
SW/GE
KHV1BFH
0.75
BL/GN
KHVHMBFH
0.35
GR
KHVHSBFH
0.35
GR/GN
M486*1B
M486
Drive, head restraint height adjustment, passenger's side rear
1) Servomotor 6
2) Hall effect sensor for memory function
LNV1BFH
0.75
GN
LNV2BFH
0.75
GE
LNVHMBFH
0.35
BR
LNVHSBFH
0.35
RT
A4*3B
M476*1B
M476
Backrest angle adjustment drive, rear passenger's side
1) Servomotor 7
2) Hall effect sensor for memory function