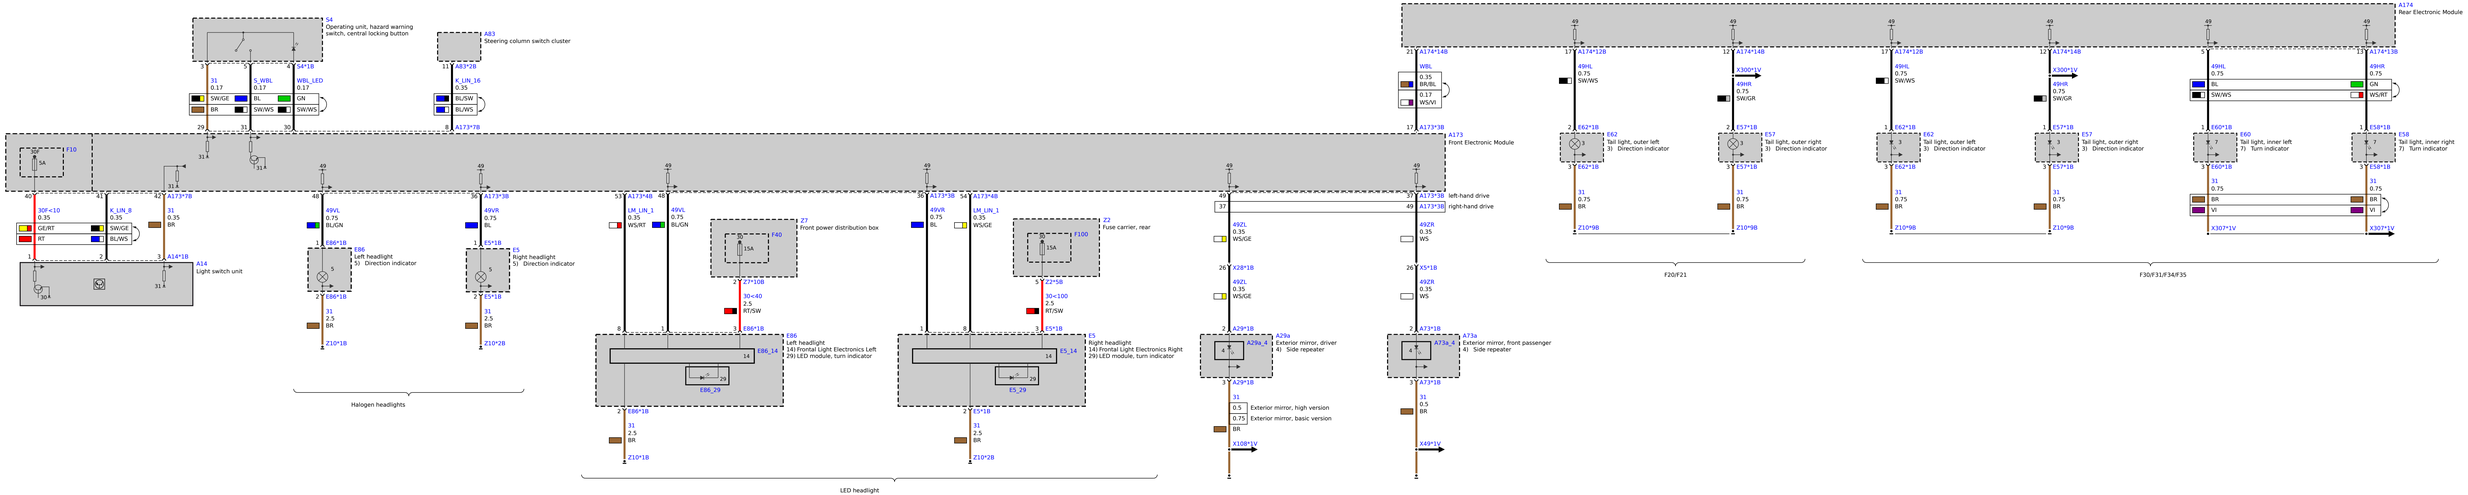
G4
Operating unit, hazard warning switch, central locking button
A83
Steering column switch cluster
S_WBL 0.17
WBL_LED 0.17
K_LIN_16 0.35
F10
5A
30F<10 0.35
K_LIN_8 0.35
A14
Light switch unit
A173
Front Electronic Module
A174
Rear Electronic Module
left-hand drive
right-hand drive
E86
Left headlight
51 Direction indicator
E5
Right headlight
51 Direction indicator
Halogen headlights
Z7
Front power distribution box
F40
15A
Z2
Fuse carrier, rear
F100
15A
E86
Left headlight
14) Frontal Light Electronics Left
29) LED module, turn indicator
E5
Right headlight
14) Frontal Light Electronics Right
29) LED module, turn indicator
LED headlight
A29a
Exterior mirror, driver
4) Side repeater
Exterior mirror, high version
Exterior mirror, basic version
A73a
Exterior mirror, front passenger
4) Side repeater
E62
Tail light, outer left
3) Direction indicator
E57
Tail light, outer right
3) Direction indicator
F20/F21
E60
Tail light, inner left
7) Turn indicator
E58
Tail light, inner right
7) Turn indicator
F30/F31/F34/F35