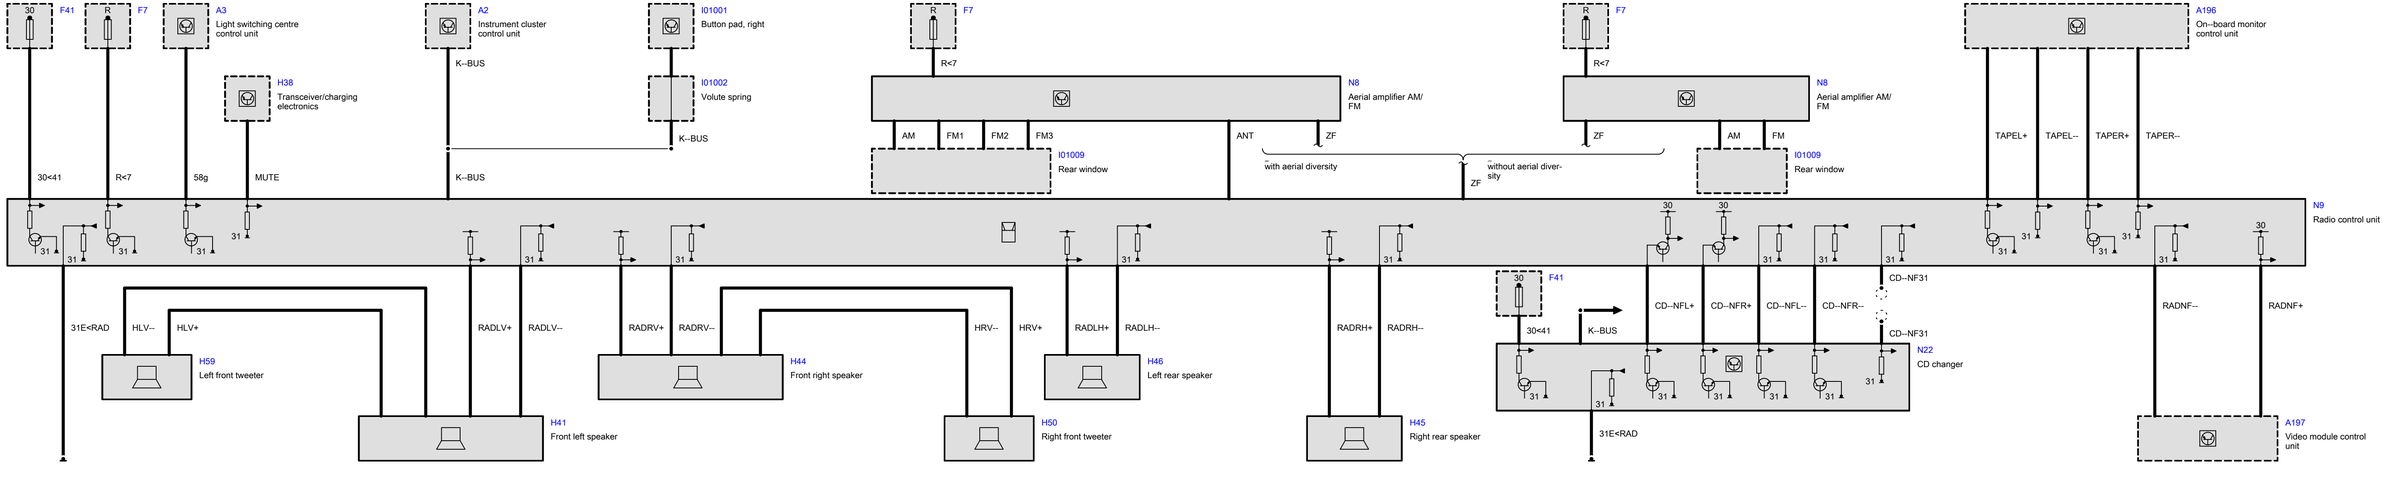
30
F41
R
F7
A3
Light switching centre control unit
H38
Transceiver/charging electronics
A2
Instrument cluster control unit
K--BUS
I01001
Button pad, right
I01002
Volute spring
K--BUS
R
F7
R<7
N8
Aerial amplifier AM/ FM
AM
FM1
FM2
FM3
I01009
Rear window
ANT
ZF
with aerial diversity
without aerial diver- sity
ZF
R
F7
R<7
N8
Aerial amplifier AM/ FM
ZF
AM
FM
I01009
Rear window
A196
On--board monitor control unit
TAPEL+
TAPEL--
TAPER+
TAPER--
30<41
R<7
58g
MUTE
K--BUS
N9
Radio control unit
31
30
31E<RAD
HLV--
HLV+
H59
Left front tweeter
H41
Front left speaker
RADLV+
RADLV--
RADRV+
RADRV--
H44
Front right speaker
HRV--
HRV+
H50
Right front tweeter
RADLH+
RADLH--
H46
Left rear speaker
RADRH+
RADRH--
H45
Right rear speaker
30
F41
30<41
K--BUS
31E<RAD
CD--NFL+
CD--NFR+
CD--NFL--
CD--NFR--
CD--NF31
CD--NF31
N22
CD changer
RADNF--
RADNF+
A197
Video module control unit