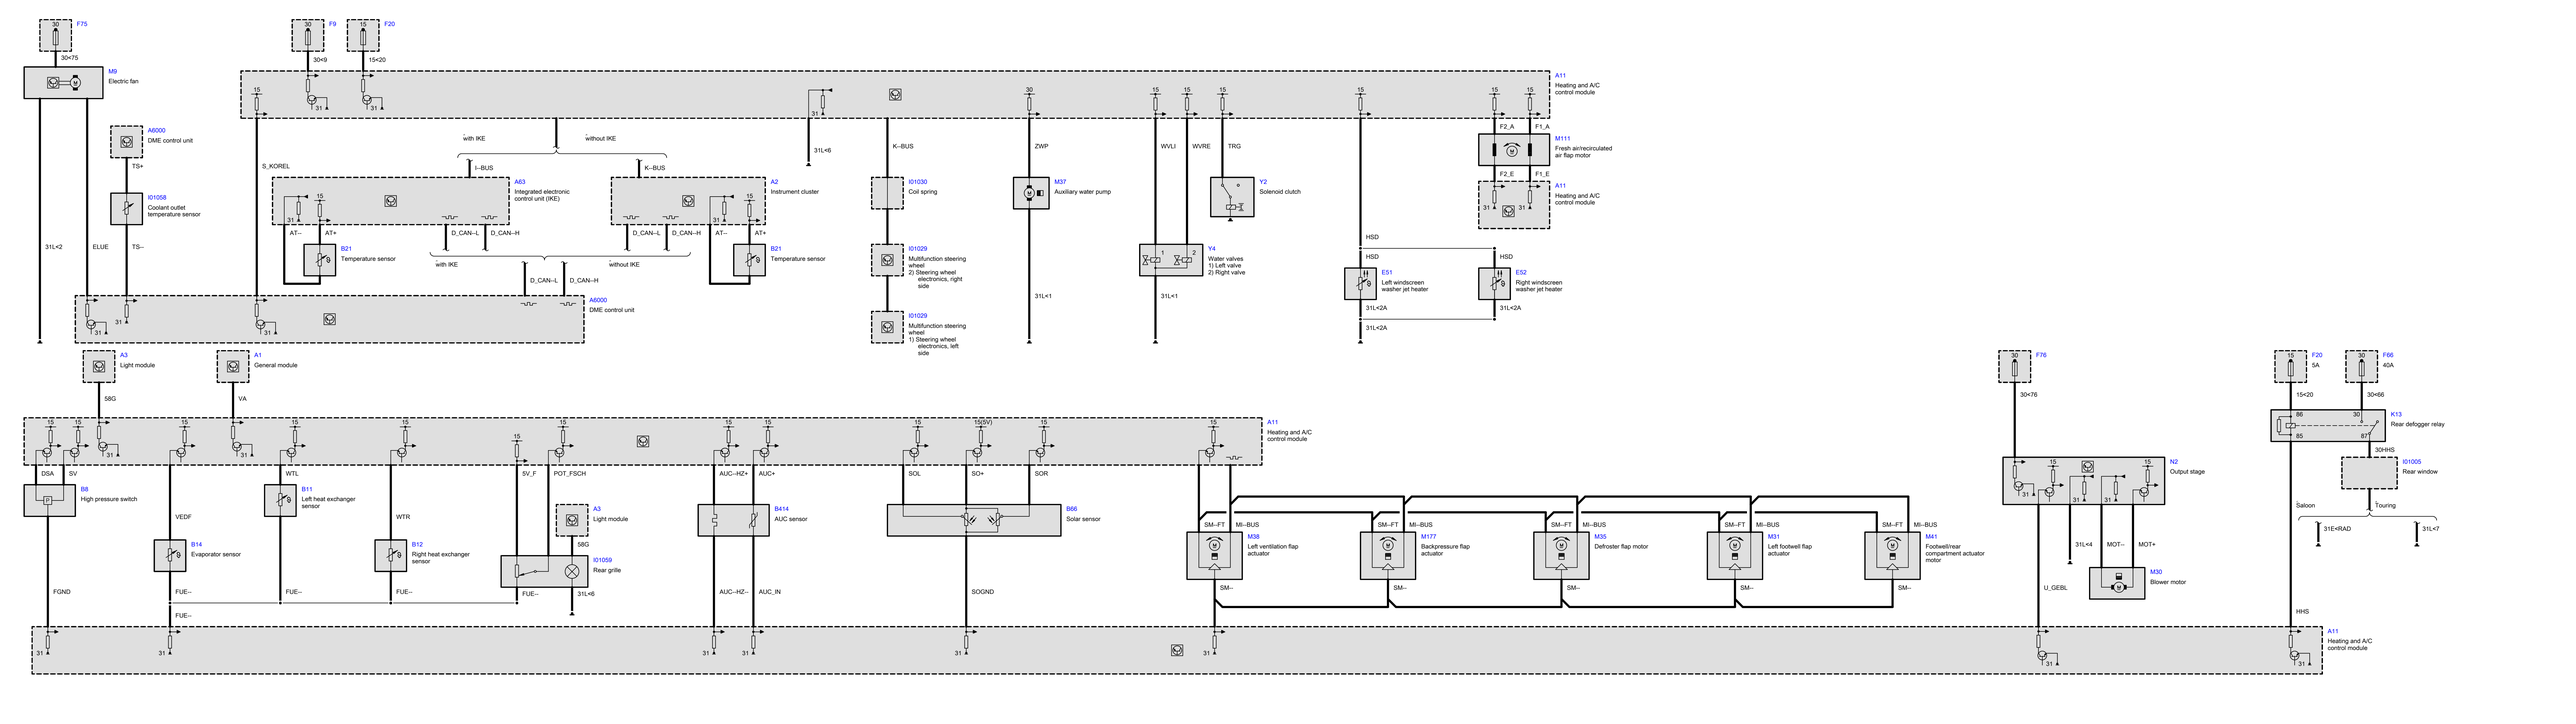
F75
30
30<75
M9
Electric fan
A6000
DME control unit
TS+
I01058
Coolant outlet temperature sensor
31L<2
ELUE
TS–
F9
30<9
F20
15<20
S_KOREL
with IKE
without IKE
I–BUS
K–BUS
A63
Integrated electronic control unit (IKE)
AT–
AT+
B21
Temperature sensor
D_CAN–L
D_CAN–H
A2
Instrument cluster
31L<6
K–BUS
I01030
Coil spring
I01029
Multifunction steering wheel
1) Steering wheel electronics, left side
2) Steering wheel electronics, right side
ZWP
M37
Auxiliary water pump
31L<1
WVLI
WVRE
TRG
Y2
Solenoid clutch
Y4
Water valves
1) Left valve
2) Right valve
A11
Heating and A/C control module
F2_A
F1_A
M111
Fresh air/recirculated air flap motor
F2_E
F1_E
HSD
E51
Left windscreen washer jet heater
E52
Right windscreen washer jet heater
31L<2A
A3
Light module
58G
A1
General module
VA
DSA
5V
B8
High pressure switch
FGND
VEDF
B14
Evaporator sensor
FUE–
WTL
B11
Left heat exchanger sensor
WTR
B12
Right heat exchanger sensor
5V_F
POT_FSCH
A3
Light module
58G
I01059
Rear grille
31L<6
AUC–HZ+
AUC+
B414
AUC sensor
AUC–HZ–
AUC_IN
SOL
SO+
SOR
B66
Solar sensor
SOGND
SM–FT
MI–BUS
SM–
M38
Left ventilation flap actuator
M177
Backpressure flap actuator
M35
Defroster flap motor
M31
Left footwell flap actuator
M41
Footwell/rear compartment actuator motor
F76
30<76
N2
Output stage
31L<4
MOT–
MOT+
U_GEBL
M30
Blower motor
F20
5A
F66
40A
15<20
30<66
K13
Rear defogger relay
86
85
87
30HHS
I01005
Rear window
Saloon
Touring
31E<RAD
31L<7
HHS