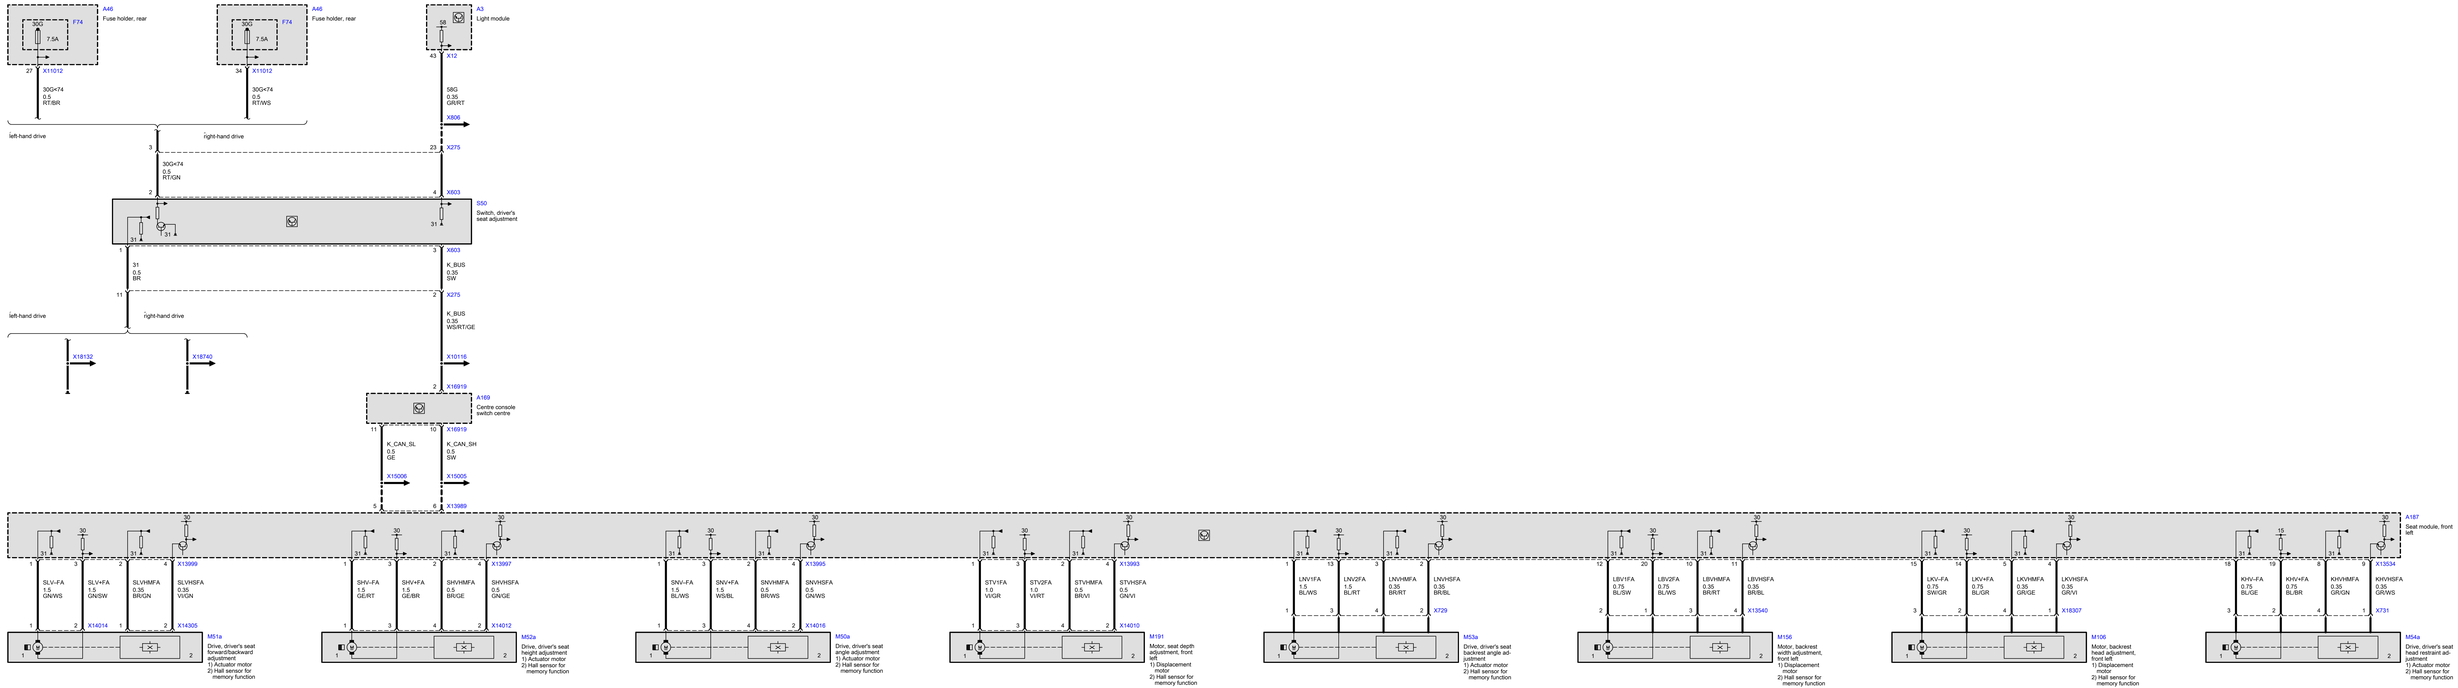
A46
Fuse holder, rear
F74
30
7.5A
27
X11012
30G<74
0.5
RT/BR
A46
Fuse holder, rear
F74
30
7.5A
34
X11012
30G<74
0.5
RT/WS
A3
Light module
58
43
X12
58G
0.35
GR/RT
X806
left-hand drive
right-hand drive
3
29
X275
30G<74
0.5
RT/GN
2
4
X603
S50
Switch, driver's seat adjustment
31
31
31
31
1
3
X603
31
0.5
BR
K_BUS
0.35
SW
11
2
X275
left-hand drive
right-hand drive
K_BUS
0.35
WS/RT/GE
X18132
X18740
X10116
2
X16919
A169
Centre console switch centre
11
10
X16919
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
X15006
X15005
5
6
X13989
A187
Seat module, front left
SLV-FA
1.5
GN/WS
SLV+FA
1.5
GN/SW
SLV/HMFA
0.35
BR/GN
SLV/HSFA
0.35
VI/GN
X13999
X14014
X14305
M51a
Drive, driver's seat forward/backward adjustment
1) Actuator motor
2) Hall sensor for memory function
SHV-FA
1.5
GE/RT
SHV+FA
1.5
GE/BR
SHV/HMFA
0.5
BR/GE
SHV/HSFA
0.5
GN/GE
X13997
X14012
M52a
Drive, driver's seat height adjustment
1) Actuator motor
2) Hall sensor for memory function
SNV-FA
1.5
BL/WS
SNV+FA
1.5
WS/BL
SNV/HMFA
0.5
BR/WS
SNV/HSFA
0.5
GN/WS
X13995
X14016
M50a
Drive, driver's seat angle adjustment
1) Actuator motor
2) Hall sensor for memory function
STV1FA
1.0
VI/GR
STV2FA
1.0
VI/RT
STV/HMFA
0.5
BR/VI
STV/HSFA
0.5
GN/VI
X13993
X14010
M191
Motor, seat depth adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LNV1FA
1.5
BL/WS
LNV2FA
1.5
BL/RT
LNV/HMFA
0.35
BR/RT
LNV/HSFA
0.35
BR/BL
X729
M53a
Drive, driver's seat backrest angle adjustment
1) Actuator motor
2) Hall sensor for memory function
LBV1FA
0.75
BL/SW
LBV2FA
0.75
BL/WS
LBV/HMFA
0.35
BR/RT
LBV/HSFA
0.35
BR/BL
X13540
M156
Motor, backrest width adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
LKV-FA
0.75
SW/GR
LKV+FA
0.75
BL/GR
LKV/HMFA
0.35
GR/GE
LKV/HSFA
0.35
GR/VI
X18307
M106
Motor, backrest head adjustment, front left
1) Displacement motor
2) Hall sensor for memory function
KHV-FA
0.75
BL/GE
KHV+FA
0.75
BL/BR
KHV/HMFA
0.35
GR/GN
KHV/HSFA
0.35
GR/WS
X13534
X731
M54a
Drive, driver's seat head restraint adjustment
1) Actuator motor
2) Hall sensor for memory function