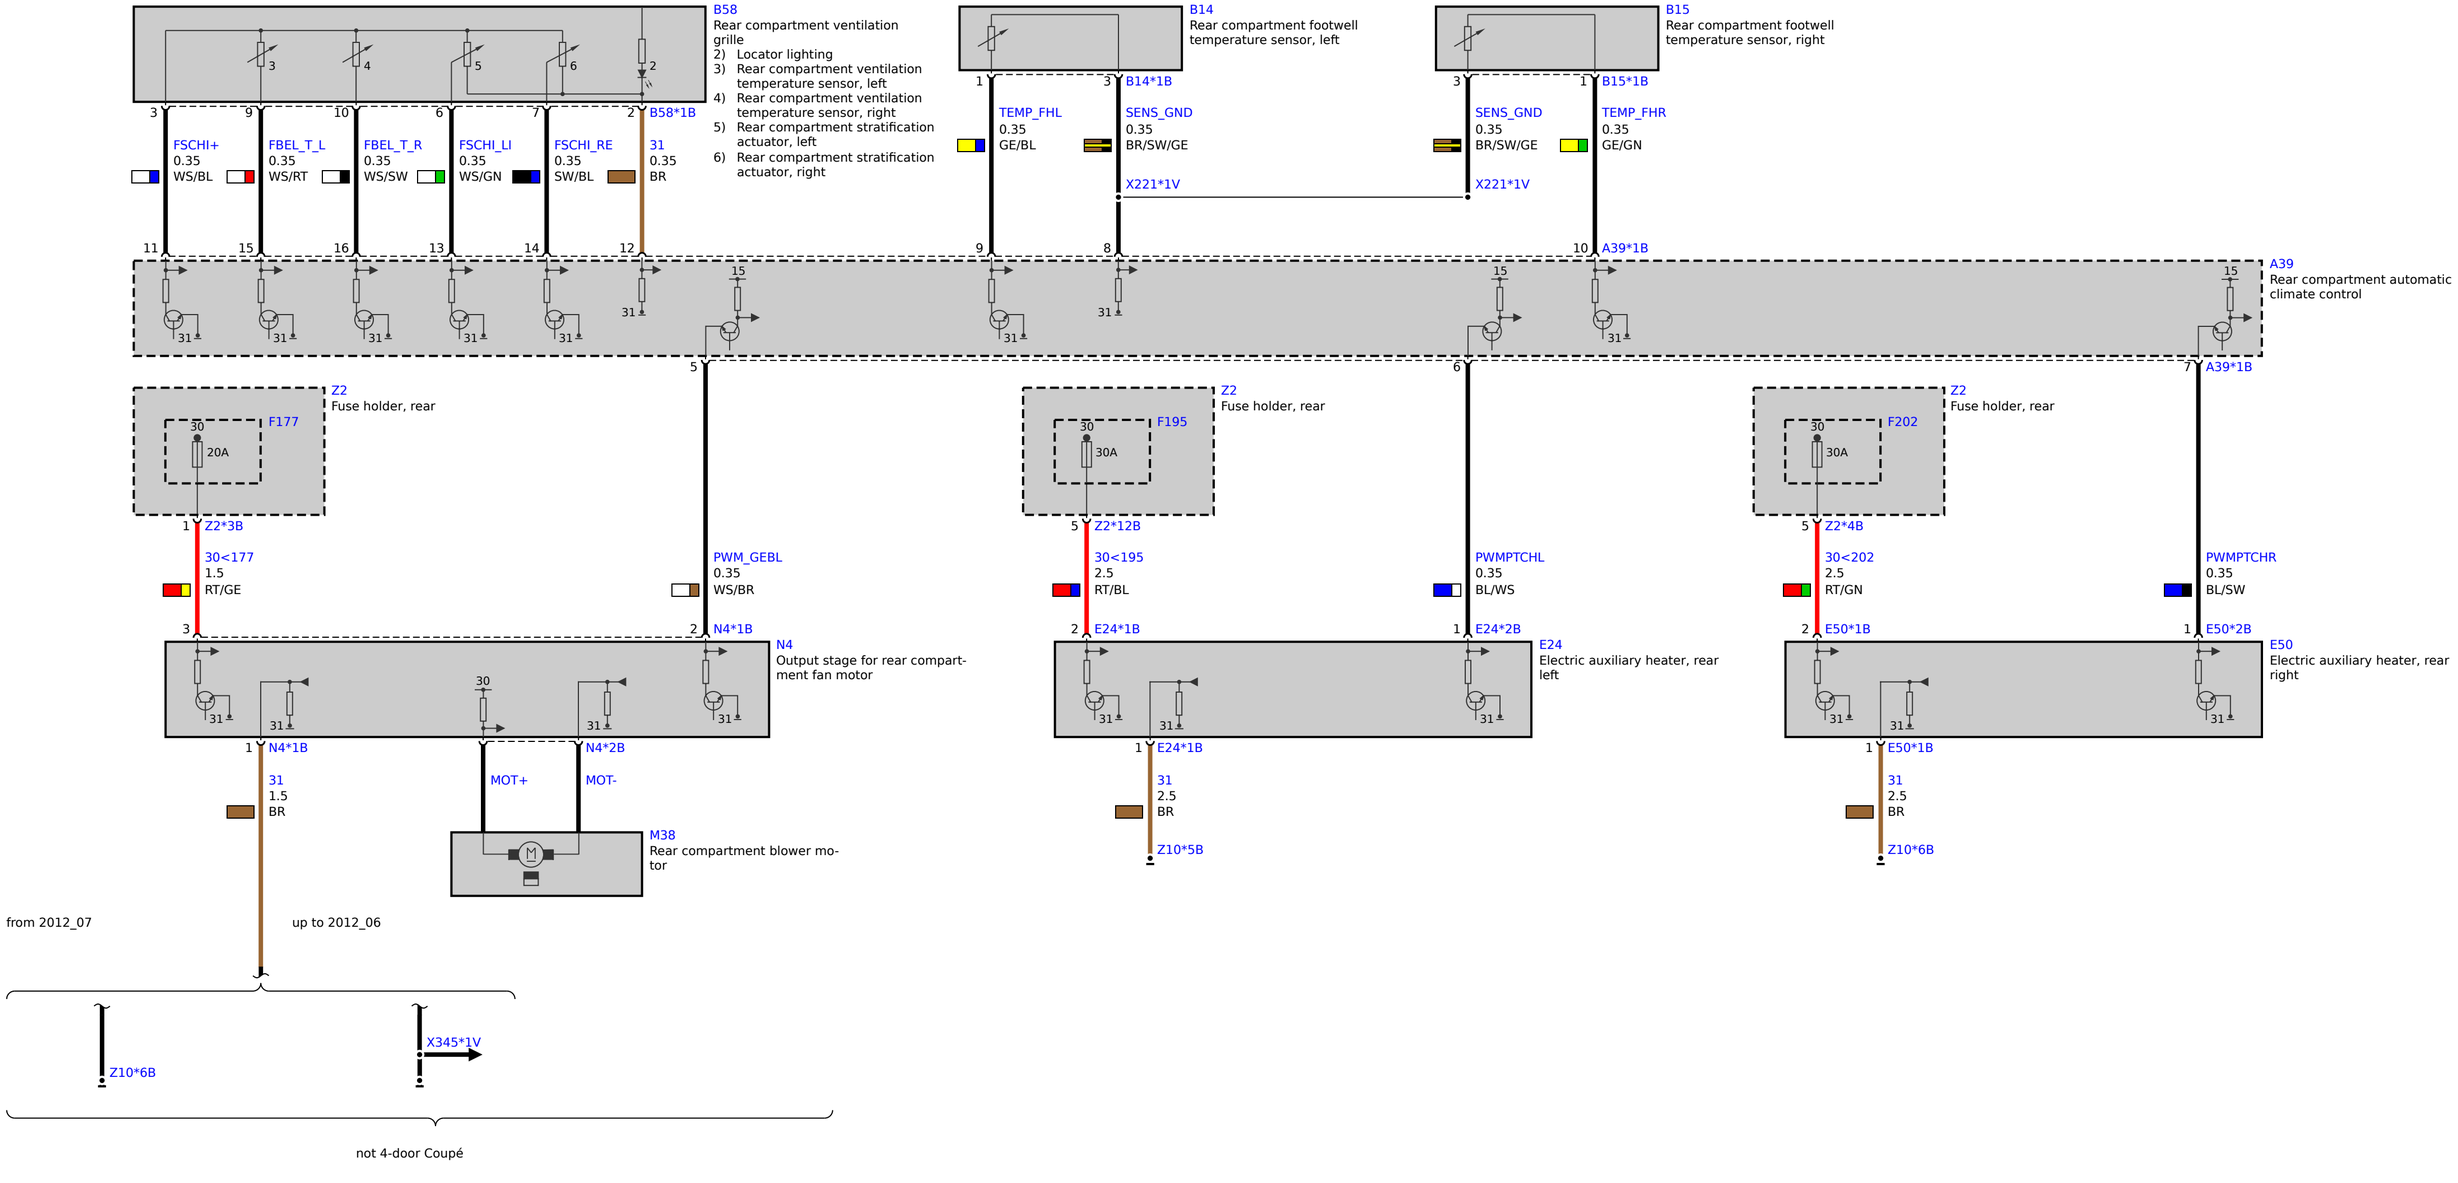
B58
Rear compartment ventilation grille
2) Locator lighting
3) Rear compartment ventilation temperature sensor, left
4) Rear compartment ventilation temperature sensor, right
5) Rear compartment stratification actuator, left
6) Rear compartment stratification actuator, right
B14
Rear compartment footwell temperature sensor, left
B15
Rear compartment footwell temperature sensor, right
FSCHI+ 0.35 WS/BL
FBEL_T_L 0.35 WS/RT
FBEL_T_R 0.35 WS/SW
FSCHI_LI 0.35 WS/GN
FSCHI_RE 0.35 SW/BL
31 0.35 BR
B58*1B
TEMP_FHL 0.35 GE/BL
SENS_GND 0.35 BR/SW/GE
B14*1B
X221*1V
SENS_GND 0.35 BR/SW/GE
TEMP_FHR 0.35 GE/GN
B15*1B
A39*1B
A39
Rear compartment automatic climate control
Z2
Fuse holder, rear
F177
20A
Z2*3B
30<177 1.5 RT/GE
PWM_GEBL 0.35 WS/BR
N4*1B
F195
30A
Z2*12B
30<195 2.5 RT/BL
PWMPTCHL 0.35 BL/WS
E24*1B
F202
30A
Z2*4B
30<202 2.5 RT/GN
PWMPTCHR 0.35 BL/SW
E50*1B
N4
Output stage for rear compartment fan motor
E24
Electric auxiliary heater, rear left
E50
Electric auxiliary heater, rear right
N4*1B
N4*2B
MOT+
MOT-
31 1.5 BR
M38
Rear compartment blower motor
E24*1B
31 2.5 BR
Z10*5B
E50*1B
31 2.5 BR
Z10*6B
from 2012_07
up to 2012_06
Z10*6B
X345*1V
not 4-door Coupé