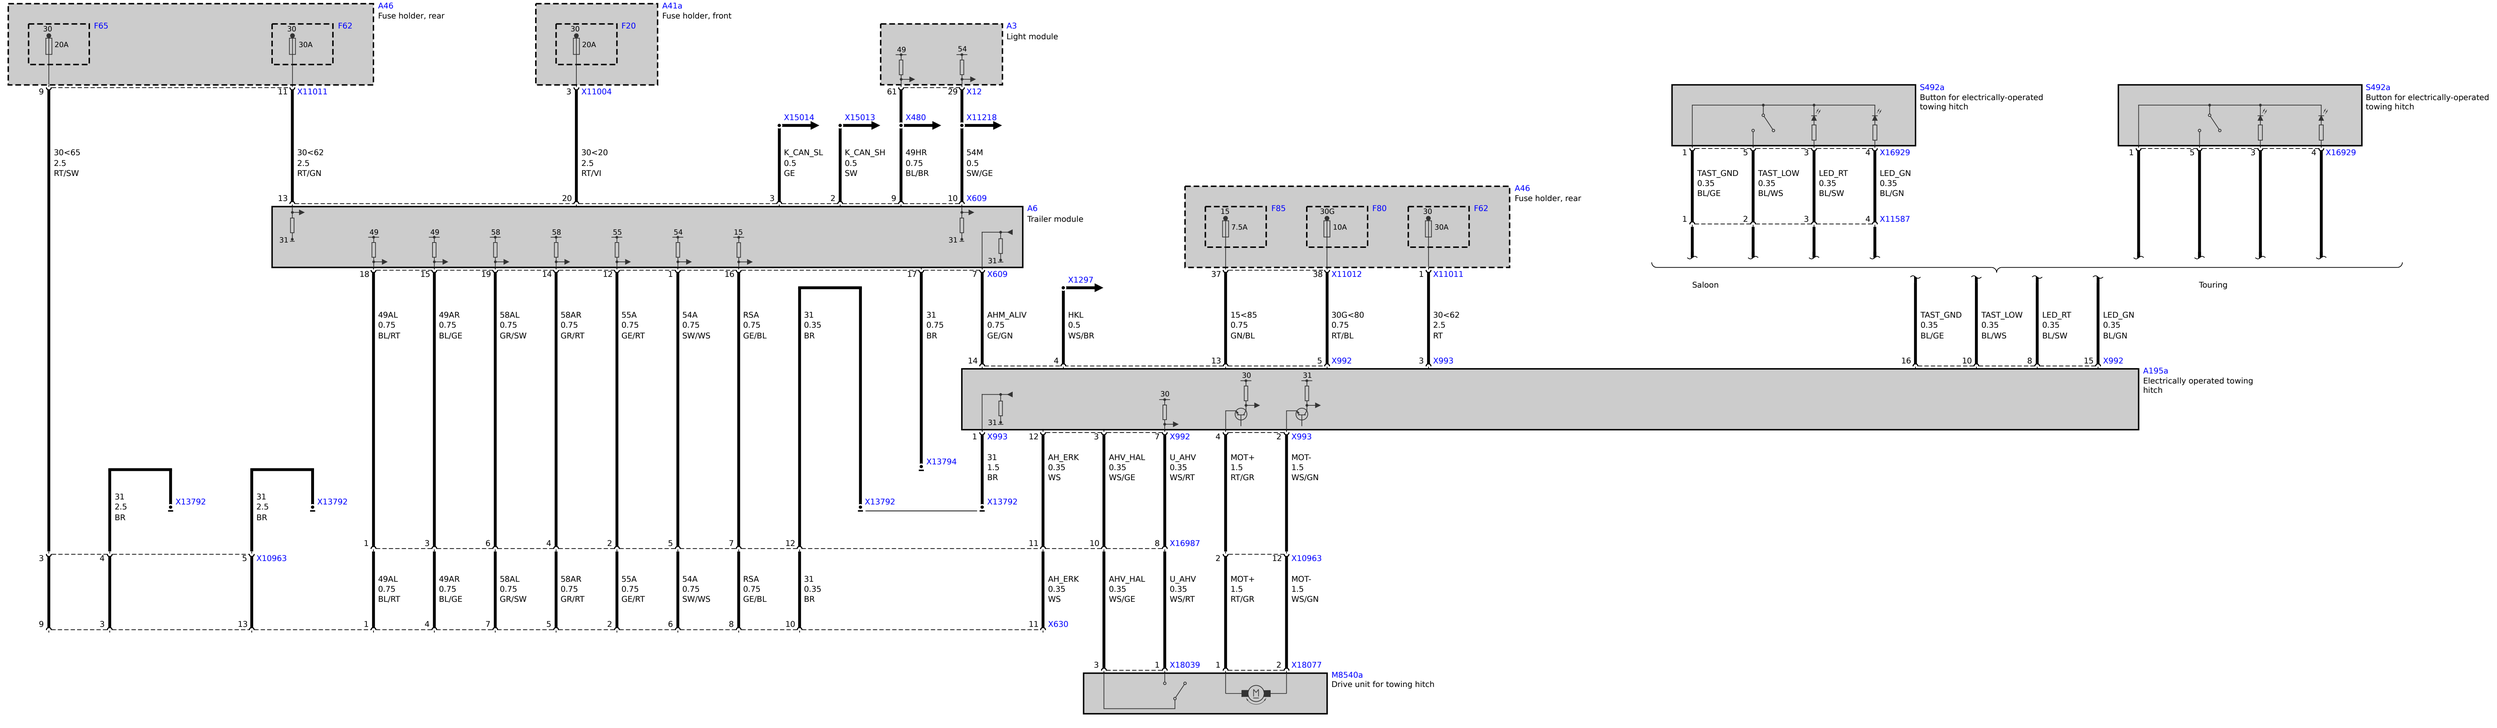
A46
Fuse holder, rear
F65
30
20A
F62
30
30A
A41a
Fuse holder, front
F20
30
20A
A3
Light module
49
54
X11011
X11004
X12
X15014
X15013
X480
X11218
30<65
2.5
RT/SW
30<62
2.5
RT/GN
30<20
2.5
RT/VI
K_CAN_SL
0.5
GE
K_CAN_SH
0.5
SW
49HR
0.75
BL/BR
54M
0.5
SW/GE
X609
A6
Trailer module
31
49
49
58
58
55
54
15
X609
49AL
0.75
BL/RT
49AR
0.75
BL/GE
58AL
0.75
GR/SW
58AR
0.75
GR/RT
55A
0.75
GE/RT
54A
0.75
SW/WS
RSA
0.75
GE/BL
31
0.35
BR
31
0.75
BR
AHM_ALIV
0.75
GE/GN
X1297
HKL
0.5
WS/BR
X13794
X13792
31
2.5
BR
X13792
31
2.5
BR
X13792
X10963
49AL
0.75
BL/RT
49AR
0.75
BL/GE
58AL
0.75
GR/SW
58AR
0.75
GR/RT
55A
0.75
GE/RT
54A
0.75
SW/WS
RSA
0.75
GE/BL
31
0.35
BR
31
1.5
BR
X13792
AH_ERK
0.35
WS
AHV_HAL
0.35
WS/GE
U_AHV
0.35
WS/RT
MOT+
1.5
RT/GR
MOT-
1.5
WS/GN
X16987
X10963
AH_ERK
0.35
WS
AHV_HAL
0.35
WS/GE
U_AHV
0.35
WS/RT
MOT+
1.5
RT/GR
MOT-
1.5
WS/GN
X630
X18039
X18077
M8540a
Drive unit for towing hitch
A46
Fuse holder, rear
F85
15
7.5A
F80
30G
10A
F62
30
30A
X11012
X11011
15<85
0.75
GN/BL
30G<80
0.75
RT/BL
30<62
2.5
RT
X992
X993
A195a
Electrically operated towing hitch
S492a
Button for electrically-operated towing hitch
X16929
TAST_GND
0.35
BL/GE
TAST_LOW
0.35
BL/WS
LED_RT
0.35
BL/SW
LED_GN
0.35
BL/GN
X11587
Saloon
S492a
Button for electrically-operated towing hitch
X16929
Touring
TAST_GND
0.35
BL/GE
TAST_LOW
0.35
BL/WS
LED_RT
0.35
BL/SW
LED_GN
0.35
BL/GN
X992