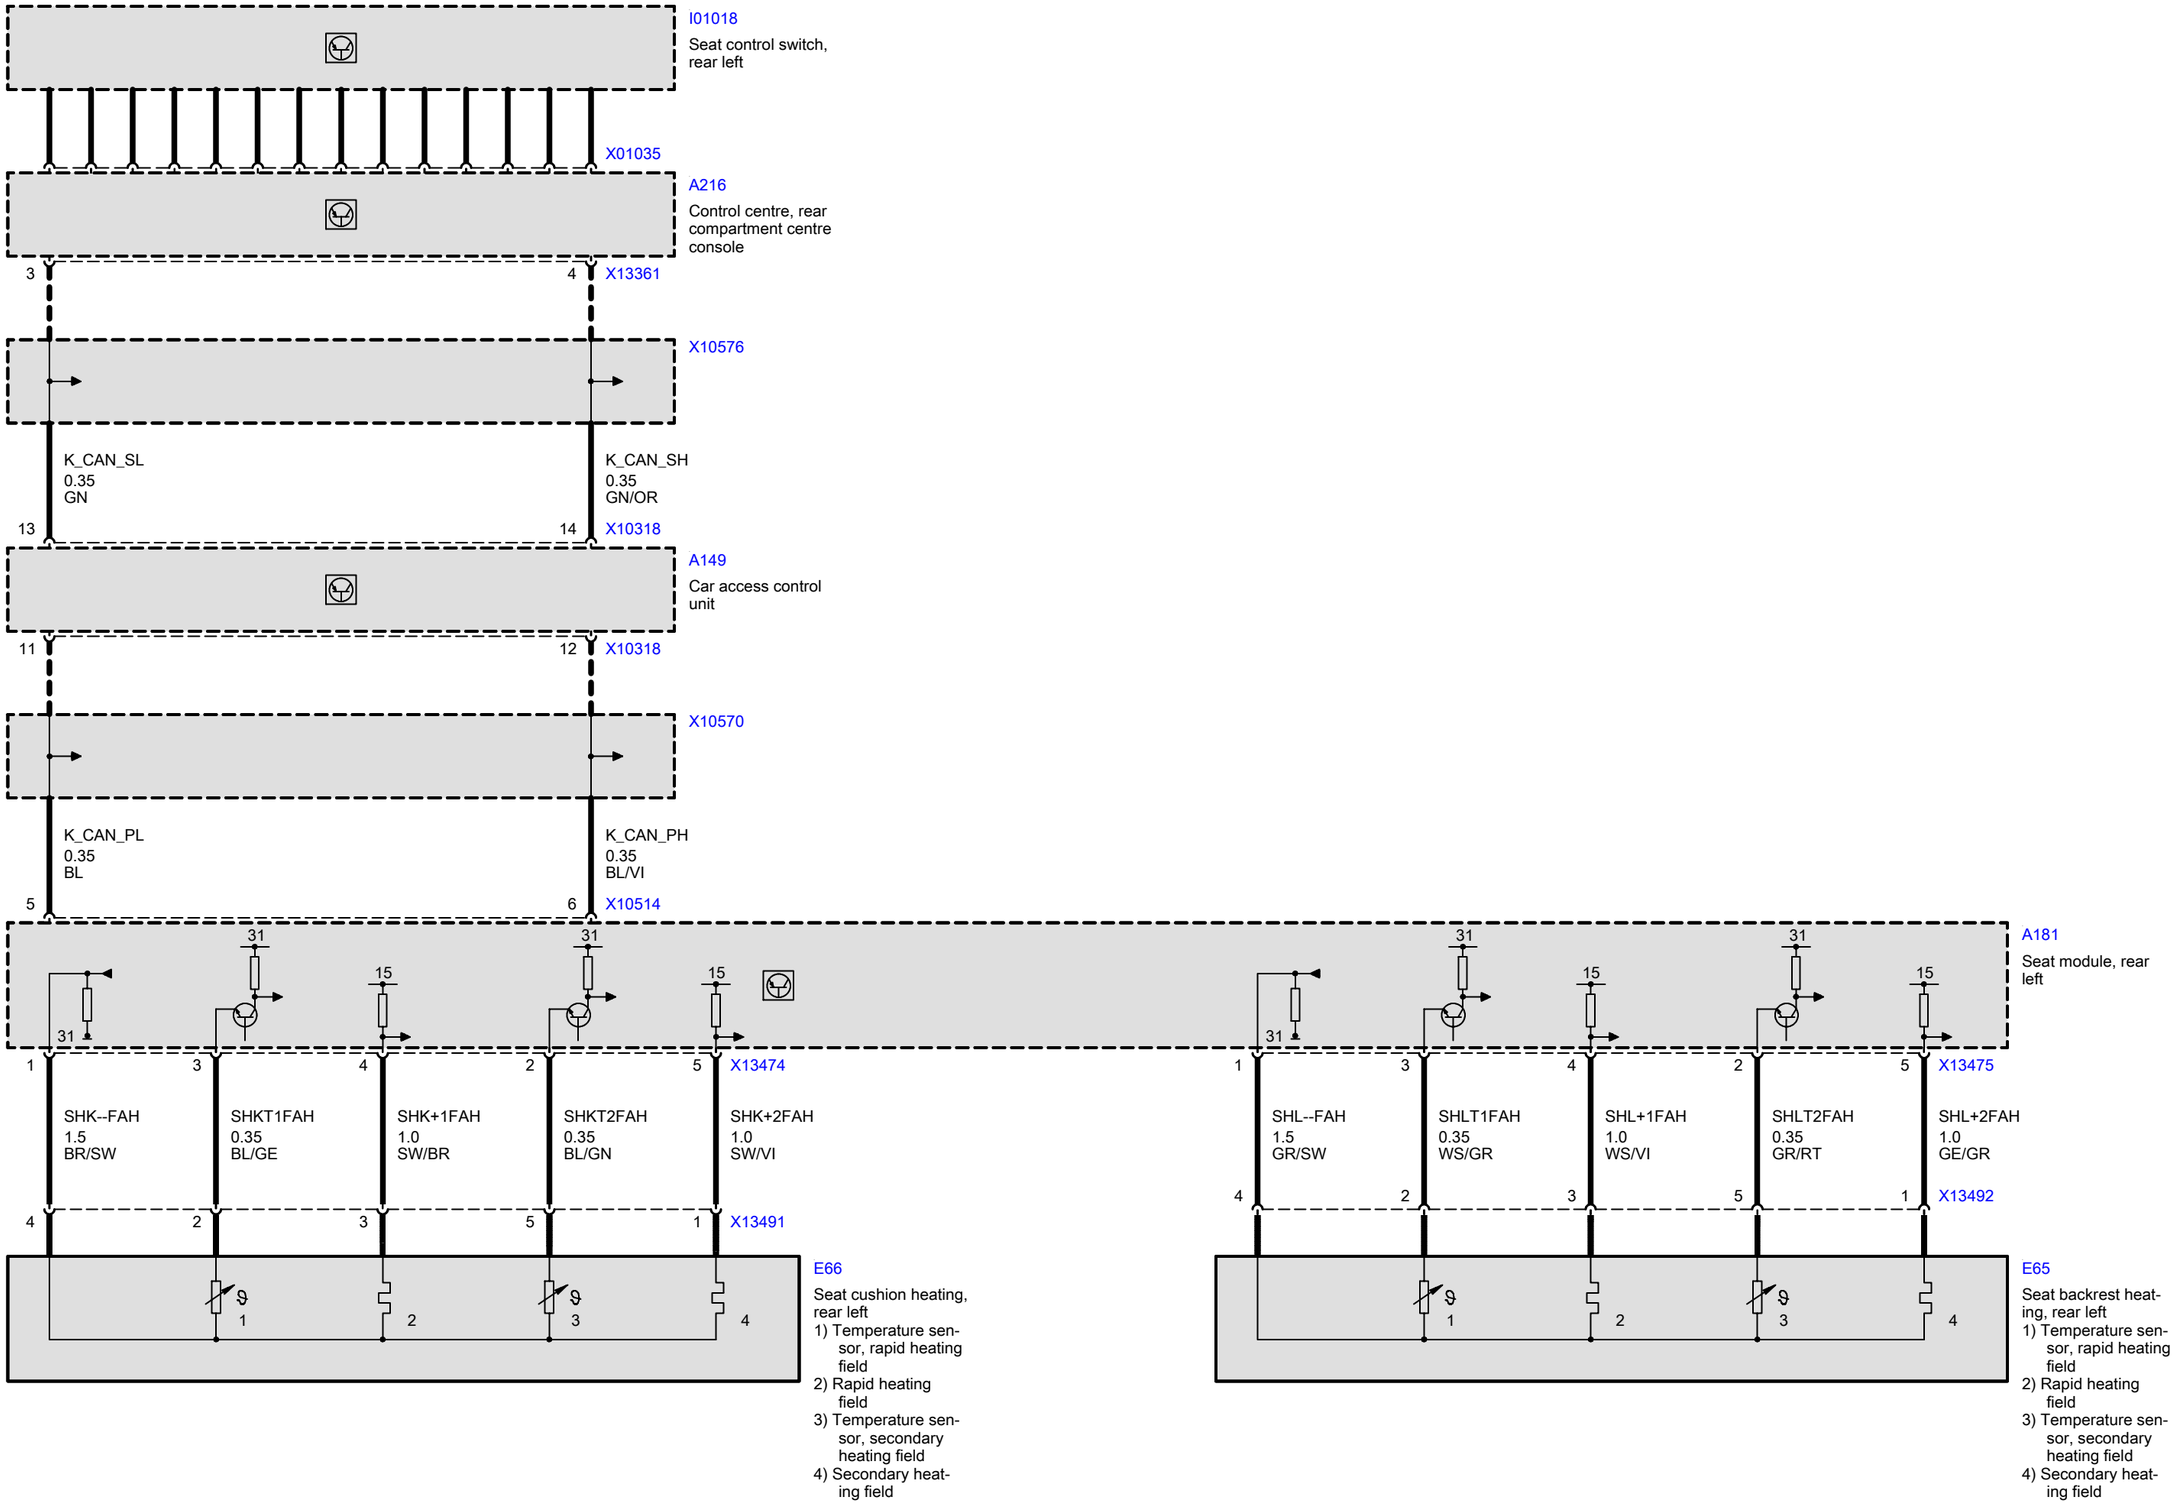
I01018
Seat control switch, rear left
X01035
A216
Control centre, rear compartment centre console
3
4
X13361
X10576
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
GN/OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10570
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
BL/VI
5
6
X10514
A181
Seat module, rear left
31
15
1
3
4
2
5
X13474
SHK--FAH
1.5
BR/SW
SHKT1FAH
0.35
BL/GE
SHK+1FAH
1.0
SW/BR
SHKT2FAH
0.35
BL/GN
SHK+2FAH
1.0
SW/VI
X13491
E66
Seat cushion heating, rear left
1) Temperature sensor, rapid heating field
2) Rapid heating field
3) Temperature sensor, secondary heating field
4) Secondary heating field
X13475
SHL--FAH
1.5
GR/SW
SHLT1FAH
0.35
WS/GR
SHL+1FAH
1.0
WS/VI
SHLT2FAH
0.35
GR/RT
SHL+2FAH
1.0
GE/GR
X13492
E65
Seat backrest heating, rear left
1) Temperature sensor, rapid heating field
2) Rapid heating field
3) Temperature sensor, secondary heating field
4) Secondary heating field