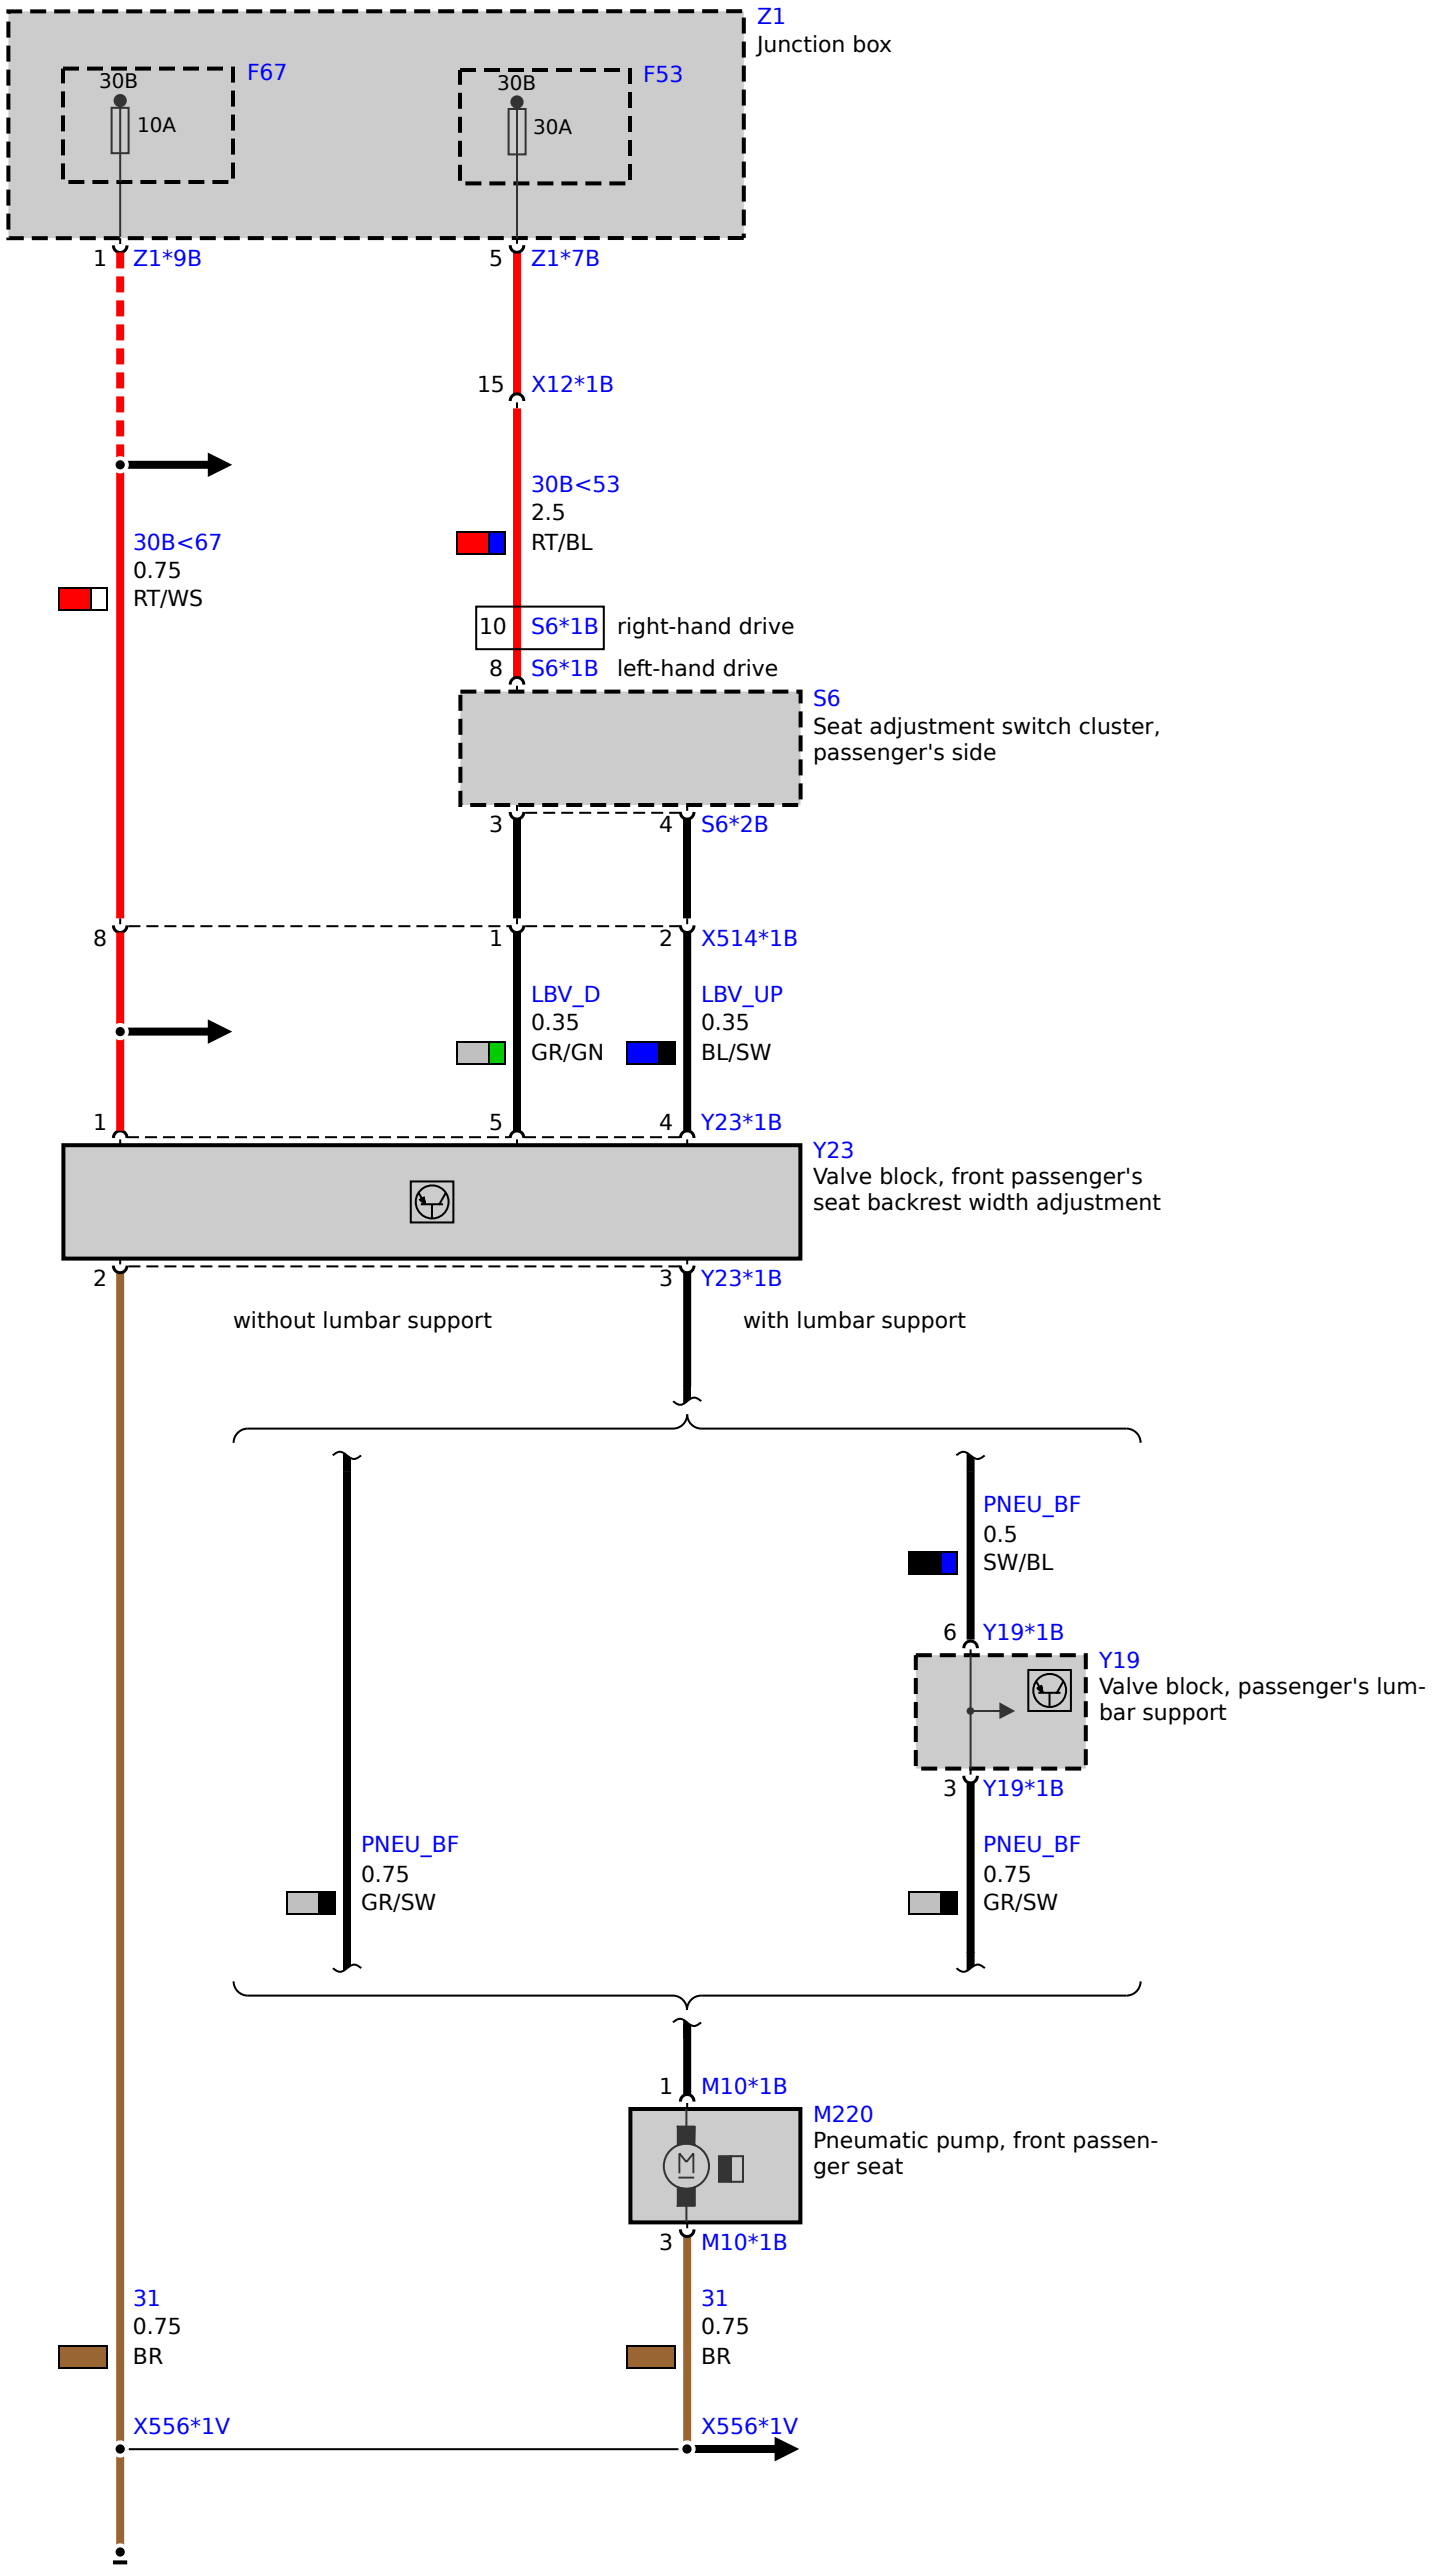
Z1
Junction box
F67
30B
10A
F53
30B
30A
1
Z1*9B
5
Z1*7B
15
X12*1B
30B<53
2.5
RT/BL
30B<67
0.75
RT/WS
10
S6*1B
right-hand drive
8
S6*1B
left-hand drive
S6
Seat adjustment switch cluster, passenger's side
3
4
S6*2B
8
1
2
X514*1B
LBV_D
0.35
GR/GN
LBV_UP
0.35
BL/SW
1
5
4
Y23*1B
Y23
Valve block, front passenger's seat backrest width adjustment
2
3
Y23*1B
without lumbar support
with lumbar support
PNEU_BF
0.5
SW/BL
6
Y19*1B
Y19
Valve block, passenger's lumbar support
3
Y19*1B
PNEU_BF
0.75
GR/SW
PNEU_BF
0.75
GR/SW
1
M10*1B
M220
Pneumatic pump, front passenger seat
3
M10*1B
31
0.75
BR
31
0.75
BR
X556*1V
X556*1V