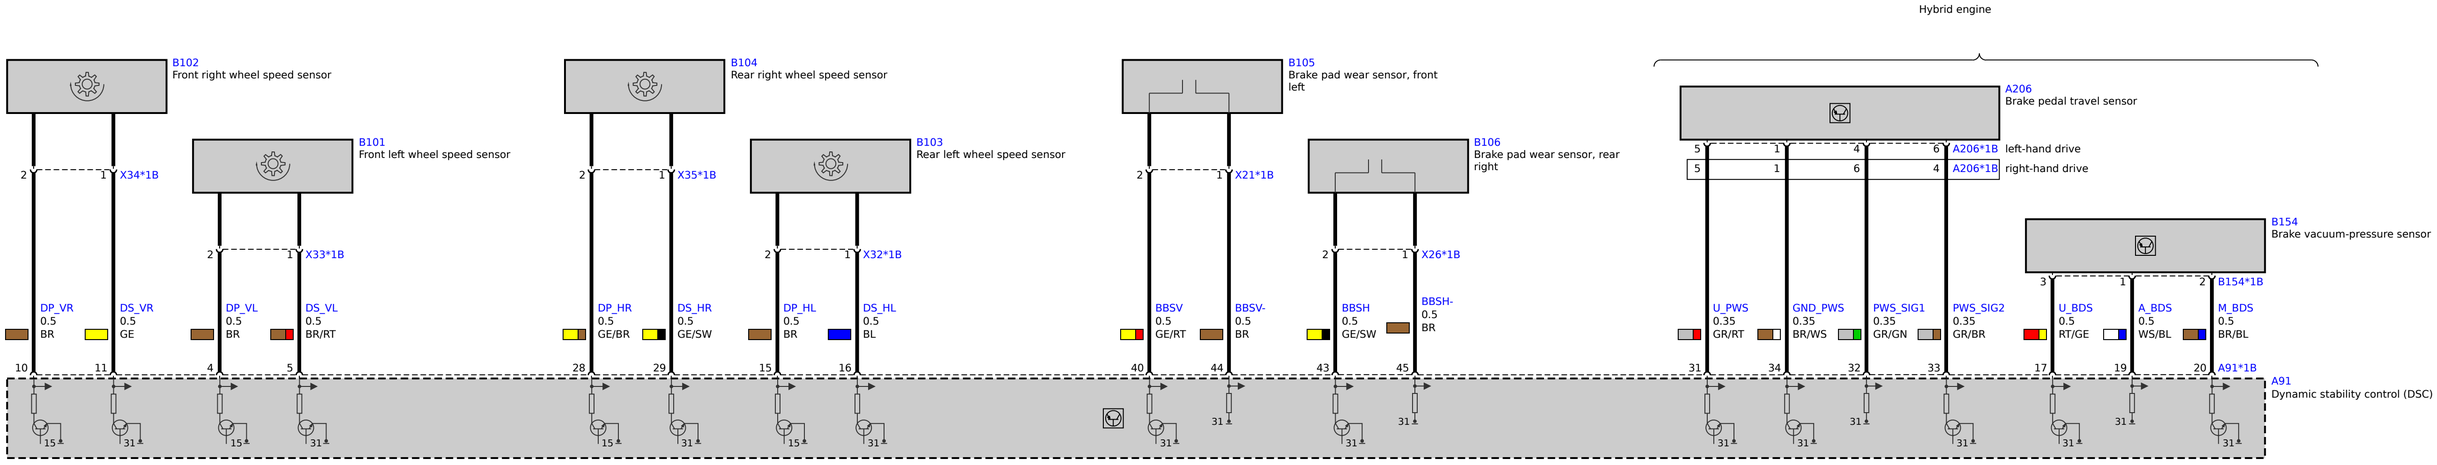
Hybrid engine
B102
Front right wheel speed sensor
B101
Front left wheel speed sensor
B104
Rear right wheel speed sensor
B103
Rear left wheel speed sensor
B105
Brake pad wear sensor, front left
B106
Brake pad wear sensor, rear right
A206
Brake pedal travel sensor
A206*1B left-hand drive
A206*1B right-hand drive
B154
Brake vacuum-pressure sensor
X34*1B
X33*1B
X35*1B
X32*1B
X21*1B
X26*1B
B154*1B
A91*1B
DP_VR 0.5 BR
DS_VR 0.5 GE
DP_VL 0.5 BR
DS_VL 0.5 BR/RT
DP_HR 0.5 GE/BR
DS_HR 0.5 GE/SW
DP_HL 0.5 BR
DS_HL 0.5 BL
BBSV 0.5 GE/RT
BBSV- 0.5 BR
BBSH 0.5 GE/SW
BBSH- 0.5 BR
U_PWS 0.35 GR/RT
GND_PWS 0.35 BR/WS
PWS_SIG1 0.35 GR/GN
PWS_SIG2 0.35 GR/BR
U_BDS 0.5 RT/GE
A_BDS 0.5 WS/BL
M_BDS 0.5 BR/BL
A91
Dynamic stability control (DSC)