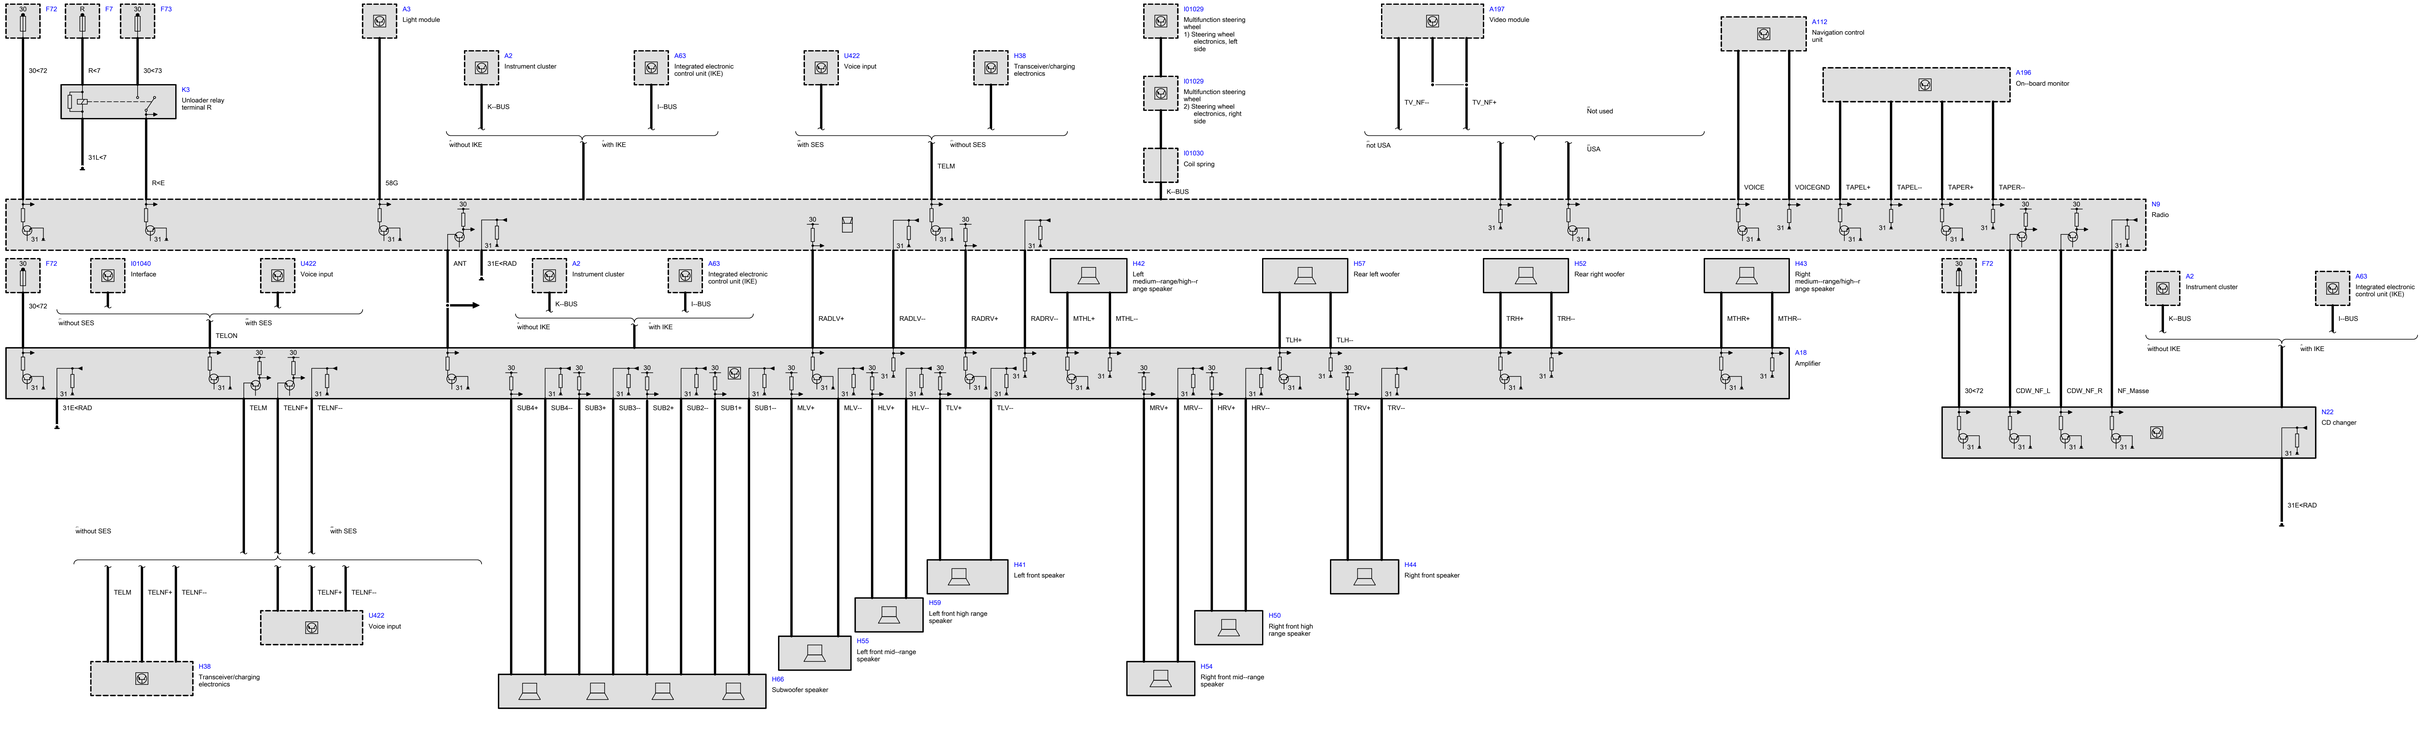
F72
F7
F73
30<72
R<7
30<73
K3
Unloader relay terminal R
31L<7
R<E
A3
Light module
58G
A2
Instrument cluster
K–BUS
without IKE
A63
Integrated electronic control unit (IKE)
I–BUS
with IKE
U422
Voice input
with SES
H38
Transceiver/charging electronics
without SES
TELM
I01029
Multifunction steering wheel
1) Steering wheel electronics, left side
I01029
Multifunction steering wheel
2) Steering wheel electronics, right side
I01030
Coil spring
K–BUS
A197
Video module
TV_NF–
TV_NF+
not USA
Not used
USA
A112
Navigation control unit
A196
On–board monitor
VOICE
VOICEGND
TAPEL+
TAPEL–
TAPER+
TAPER–
N9
Radio
F72
30<72
I01040
Interface
U422
Voice input
without SES
with SES
TELON
ANT
31E<RAD
A2
Instrument cluster
K–BUS
without IKE
A63
Integrated electronic control unit (IKE)
I–BUS
with IKE
RADLV+
RADLV–
RADRV+
RADRV–
MTHL+
MTHL–
H42
Left medium–range/high–range speaker
H57
Rear left woofer
TLH+
TLH–
H52
Rear right woofer
TRH+
TRH–
H43
Right medium–range/high–range speaker
MTHR+
MTHR–
A18
Amplifier
31E<RAD
TELM
TELNF+
TELNF–
SUB4+
SUB4–
SUB3+
SUB3–
SUB2+
SUB2–
SUB1+
SUB1–
MLV+
MLV–
HLV+
HLV–
TLV+
TLV–
MRV+
MRV–
HRV+
HRV–
TRV+
TRV–
H41
Left front speaker
H59
Left front high range speaker
H55
Left front mid–range speaker
H66
Subwoofer speaker
H54
Right front mid–range speaker
H50
Right front high range speaker
H44
Right front speaker
F72
30<72
CDW_NF_L
CDW_NF_R
NF_Masse
N22
CD changer
31E<RAD
A2
Instrument cluster
K–BUS
without IKE
A63
Integrated electronic control unit (IKE)
I–BUS
with IKE