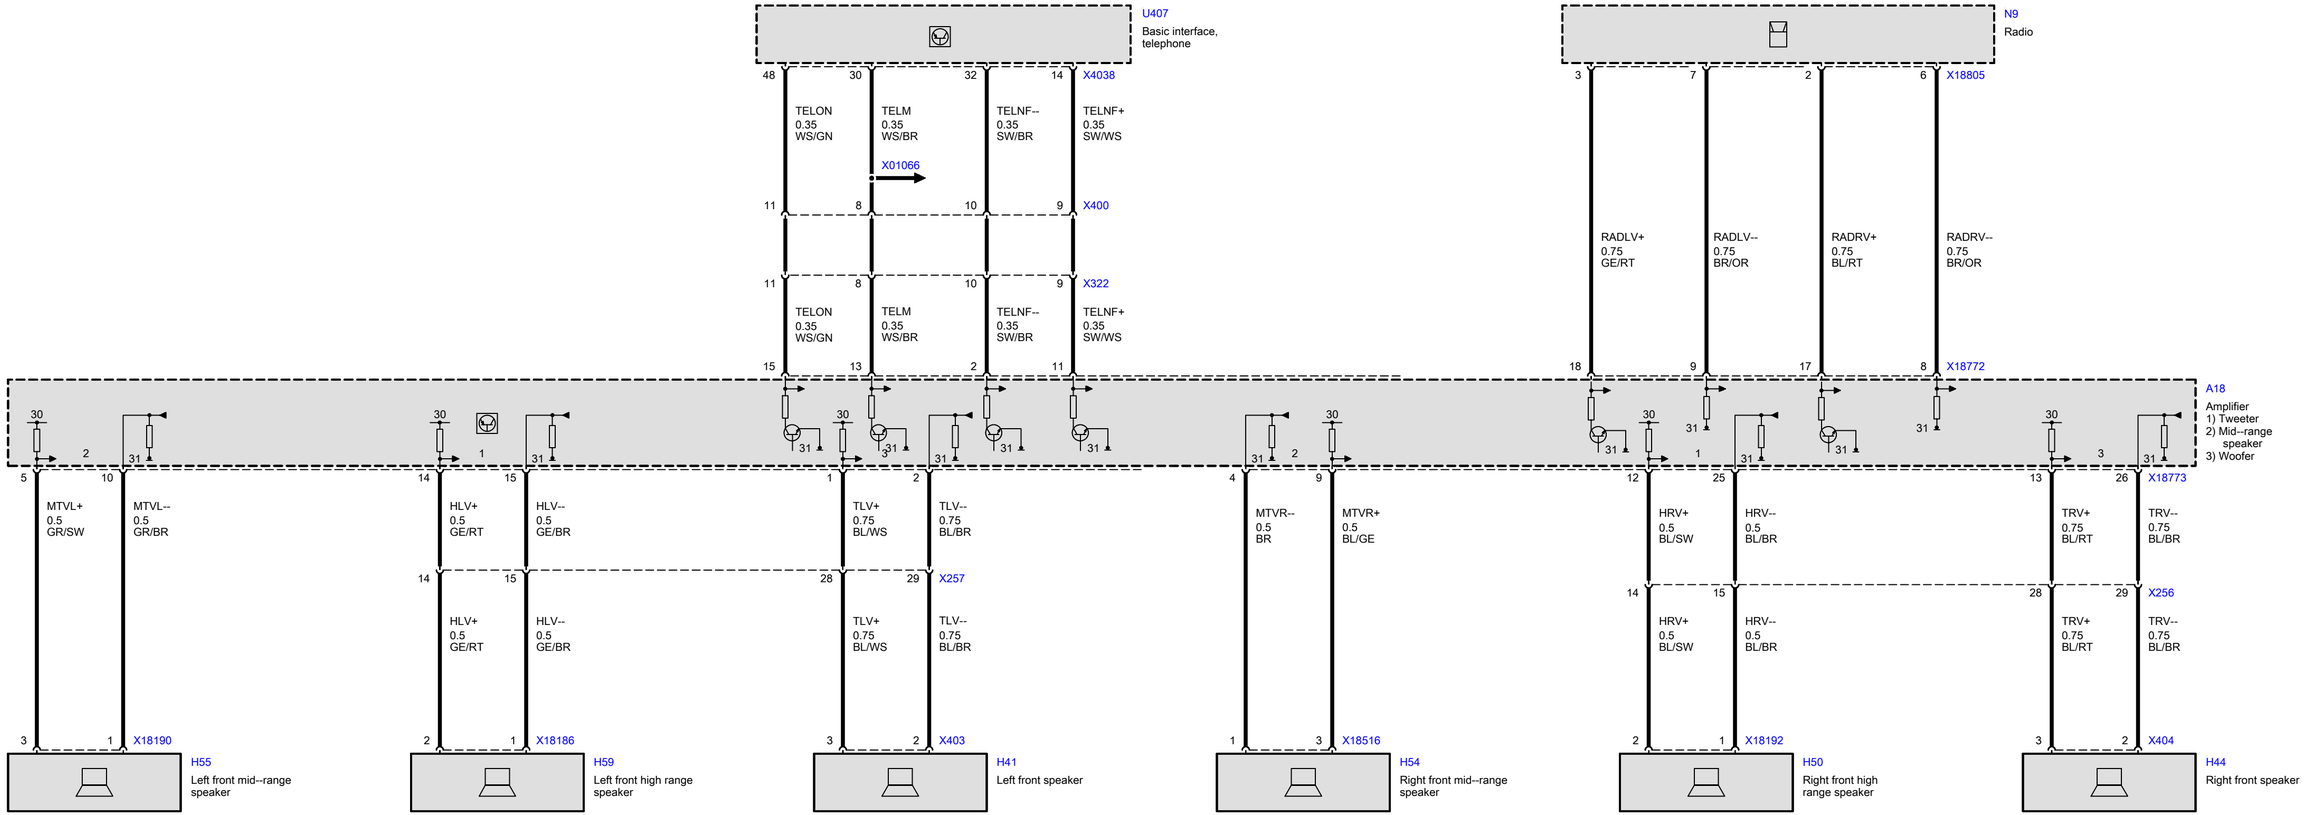
U407
Basic interface, telephone
N9
Radio
X4038
X01066
X400
X322
X18805
X18772
A18
Amplifier
1) Tweeter
2) Mid--range speaker
3) Woofer
X18773
X257
X256
X18190
X18186
X403
X18516
X18192
X404
H55
Left front mid--range speaker
H59
Left front high range speaker
H41
Left front speaker
H54
Right front mid--range speaker
H50
Right front high range speaker
H44
Right front speaker
TELON 0.35 WS/GN
TELM 0.35 WS/BR
TELNF-- 0.35 SW/BR
TELNF+ 0.35 SW/WS
RADLV+ 0.75 GE/RT
RADLV-- 0.75 BR/OR
RADRV+ 0.75 BL/RT
RADRV-- 0.75 BR/OR
MTVL+ 0.5 GR/SW
MTVL-- 0.5 GR/BR
HLV+ 0.5 GE/RT
HLV-- 0.5 GE/BR
TLV+ 0.75 BL/WS
TLV-- 0.75 BL/BR
MTVR-- 0.5 BR
MTVR+ 0.5 BL/GE
HRV+ 0.5 BL/SW
HRV-- 0.5 BL/BR
TRV+ 0.75 BL/RT
TRV-- 0.75 BL/BR