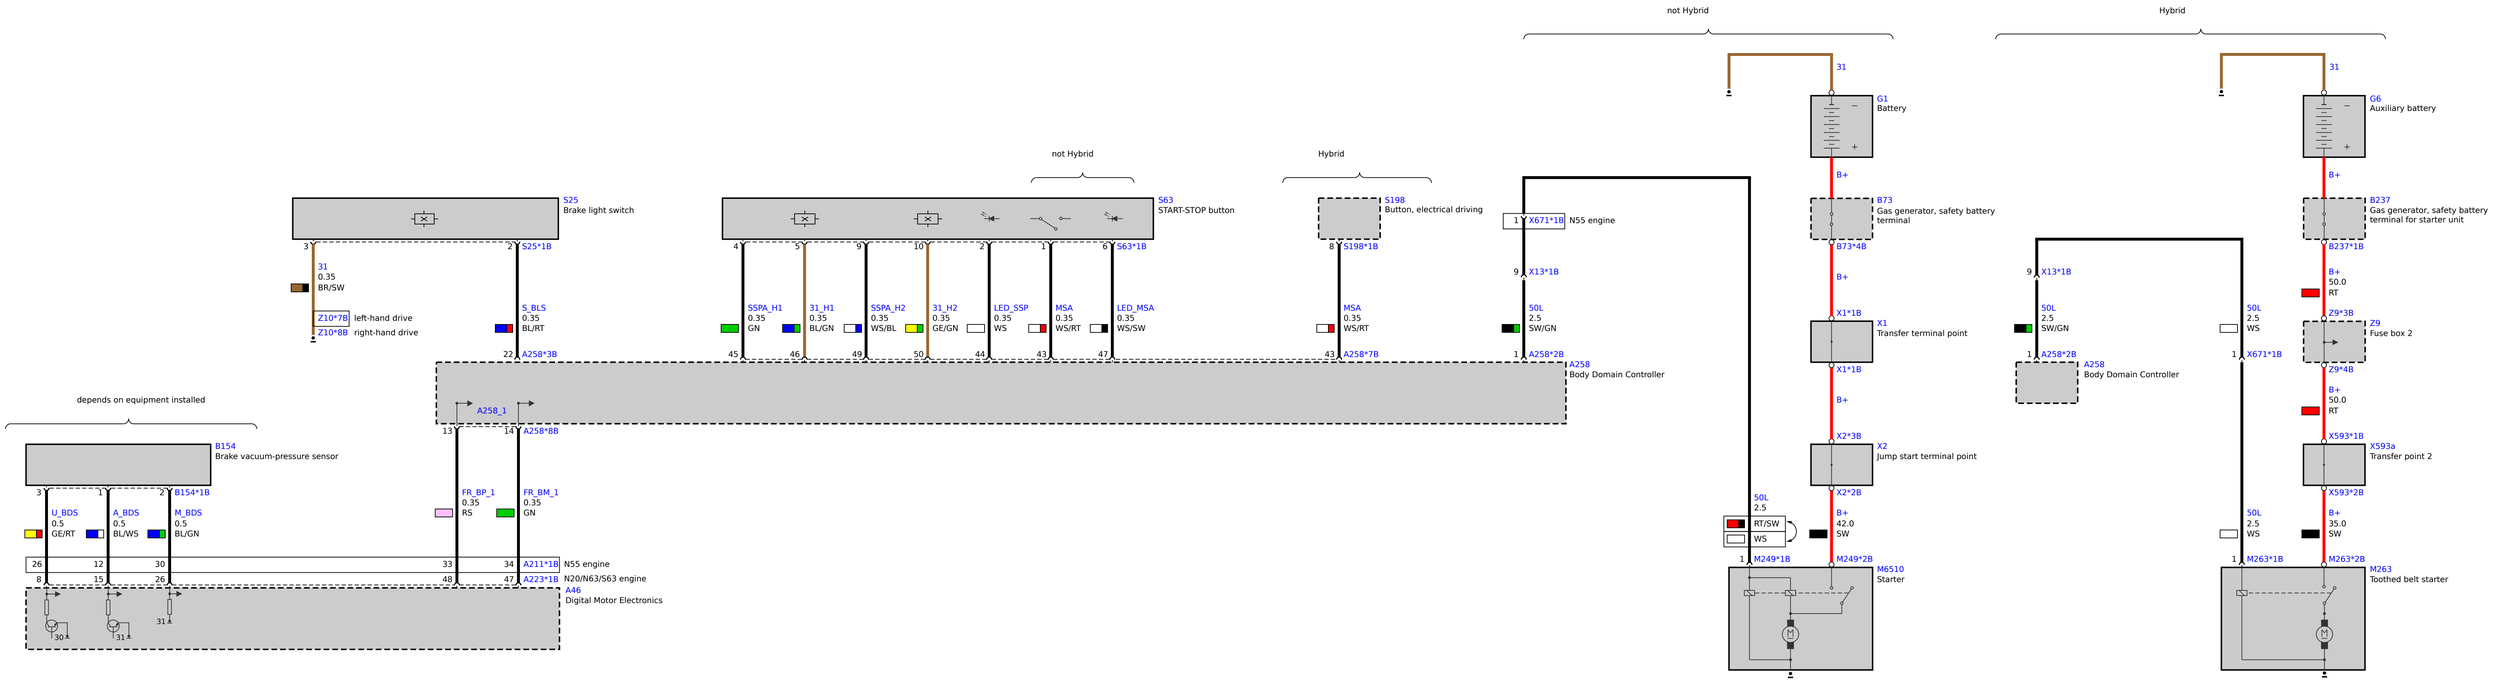
not Hybrid
Hybrid
S25
Brake light switch
3
2
S25*1B
31
0.35
BR/SW
Z10*7B left-hand drive
Z10*8B right-hand drive
S_BLS
0.35
BL/RT
22
A258*3B
not Hybrid
S63
START-STOP button
4
5
9
10
2
1
6
S63*1B
SSPA_H1
0.35
GN
45
31_H1
0.35
BL/GN
46
SSPA_H2
0.35
WS/BL
49
31_H2
0.35
GE/GN
50
LED_SSP
0.35
WS
44
MSA
0.35
WS/RT
43
LED_MSA
0.35
WS/SW
47
Hybrid
S198
Button, electrical driving
8
S198*1B
MSA
0.35
WS/RT
43
A258*7B
1
X671*1B
N55 engine
9
X13*1B
50L
2.5
SW/GN
1
A258*2B
A258
Body Domain Controller
A258_1
13
14
A258*8B
depends on equipment installed
B154
Brake vacuum-pressure sensor
3
1
2
B154*1B
U_BDS
0.5
GE/RT
A_BDS
0.5
BL/WS
M_BDS
0.5
BL/GN
FR_BP_1
0.35
RS
FR_BM_1
0.35
GN
26
12
30
33
34
A211*1B
N55 engine
8
15
26
48
47
A223*1B
N20/N63/S63 engine
A46
Digital Motor Electronics
30
31
31
not Hybrid
31
G1
Battery
B+
B73
Gas generator, safety battery terminal
B73*4B
B+
X1*1B
X1
Transfer terminal point
X1*1B
B+
X2*3B
X2
Jump start terminal point
X2*2B
B+
42.0
SW
50L
2.5
RT/SW
WS
1
M249*1B
M249*2B
M6510
Starter
Hybrid
31
G6
Auxiliary battery
B+
B237
Gas generator, safety battery terminal for starter unit
B237*1B
B+
50.0
RT
Z9*3B
Z9
Fuse box 2
Z9*4B
B+
50.0
RT
X593*1B
X593a
Transfer point 2
X593*2B
B+
35.0
SW
9
X13*1B
50L
2.5
SW/GN
1
A258*2B
A258
Body Domain Controller
50L
2.5
WS
1
X671*1B
50L
2.5
WS
1
M263*1B
M263*2B
M263
Toothed belt starter