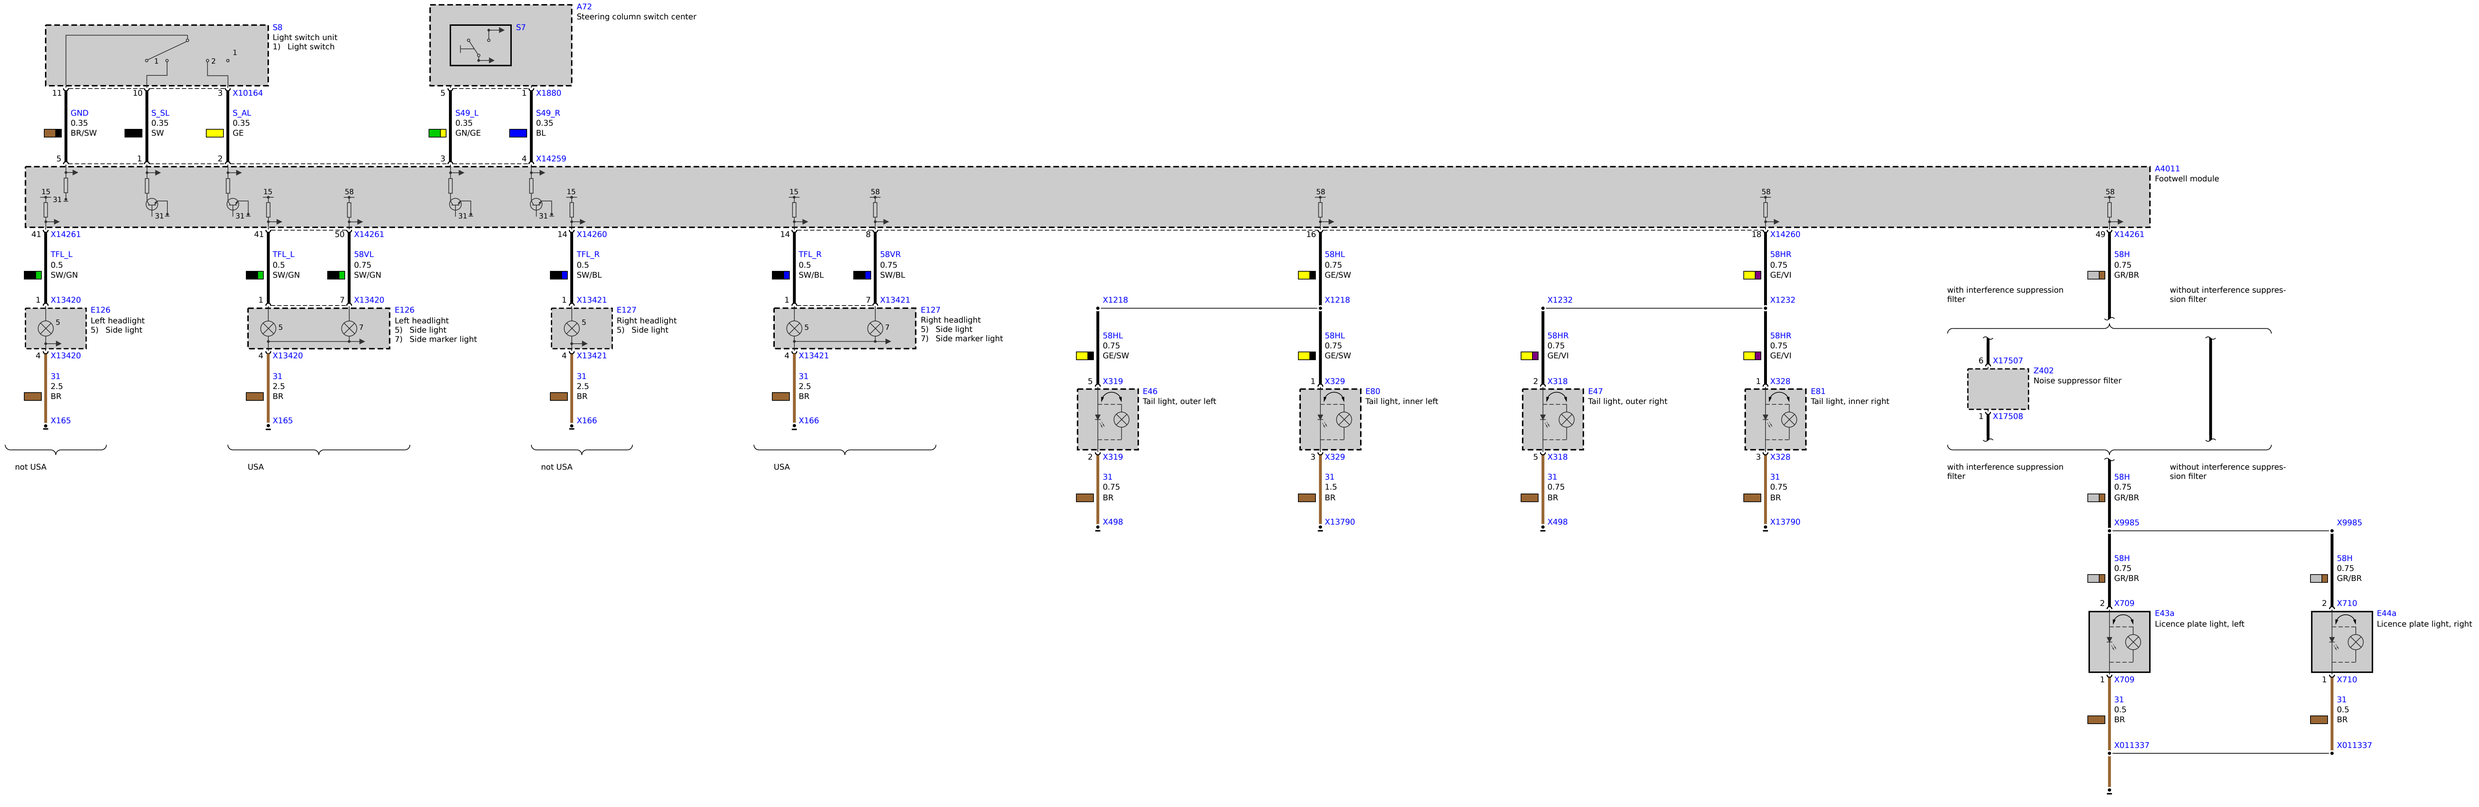
S8
Light switch unit
1) Light switch
A72
Steering column switch center
S7
GND
0.35
BR/SW
S_SL
0.35
SW
X10164
S_AL
0.35
GE
S49_L
0.35
GN/GE
X1880
S49_R
0.35
BL
X14259
A4011
Footwell module
X14261
TFL_L
0.5
SW/GN
X13420
E126
Left headlight
5) Side light
31
2.5
BR
X165
not USA
X14261
TFL_L
0.5
SW/GN
58VL
0.75
SW/GN
X13420
E126
Left headlight
5) Side light
7) Side marker light
X165
USA
X14260
TFL_R
0.5
SW/BL
X13421
E127
Right headlight
5) Side light
X166
not USA
X14260
TFL_R
0.5
SW/BL
58VR
0.75
SW/BL
X13421
E127
Right headlight
5) Side light
7) Side marker light
X166
USA
X1218
58HL
0.75
GE/SW
X319
E46
Tail light, outer left
31
0.75
BR
X498
X1218
58HL
0.75
GE/SW
X329
E80
Tail light, inner left
31
1.5
BR
X13790
X1232
58HR
0.75
GE/VI
X318
E47
Tail light, outer right
31
0.75
BR
X498
X1232
58HR
0.75
GE/VI
X328
E81
Tail light, inner right
31
0.75
BR
X13790
X14261
58H
0.75
GR/BR
with interference suppression filter
without interference suppression filter
X17507
Z402
Noise suppressor filter
X17508
with interference suppression filter
without interference suppression filter
58H
0.75
GR/BR
X9985
X9985
58H
0.75
GR/BR
X709
E43a
Licence plate light, left
X709
31
0.5
BR
X011337
58H
0.75
GR/BR
X710
E44a
Licence plate light, right
X710
31
0.5
BR
X011337