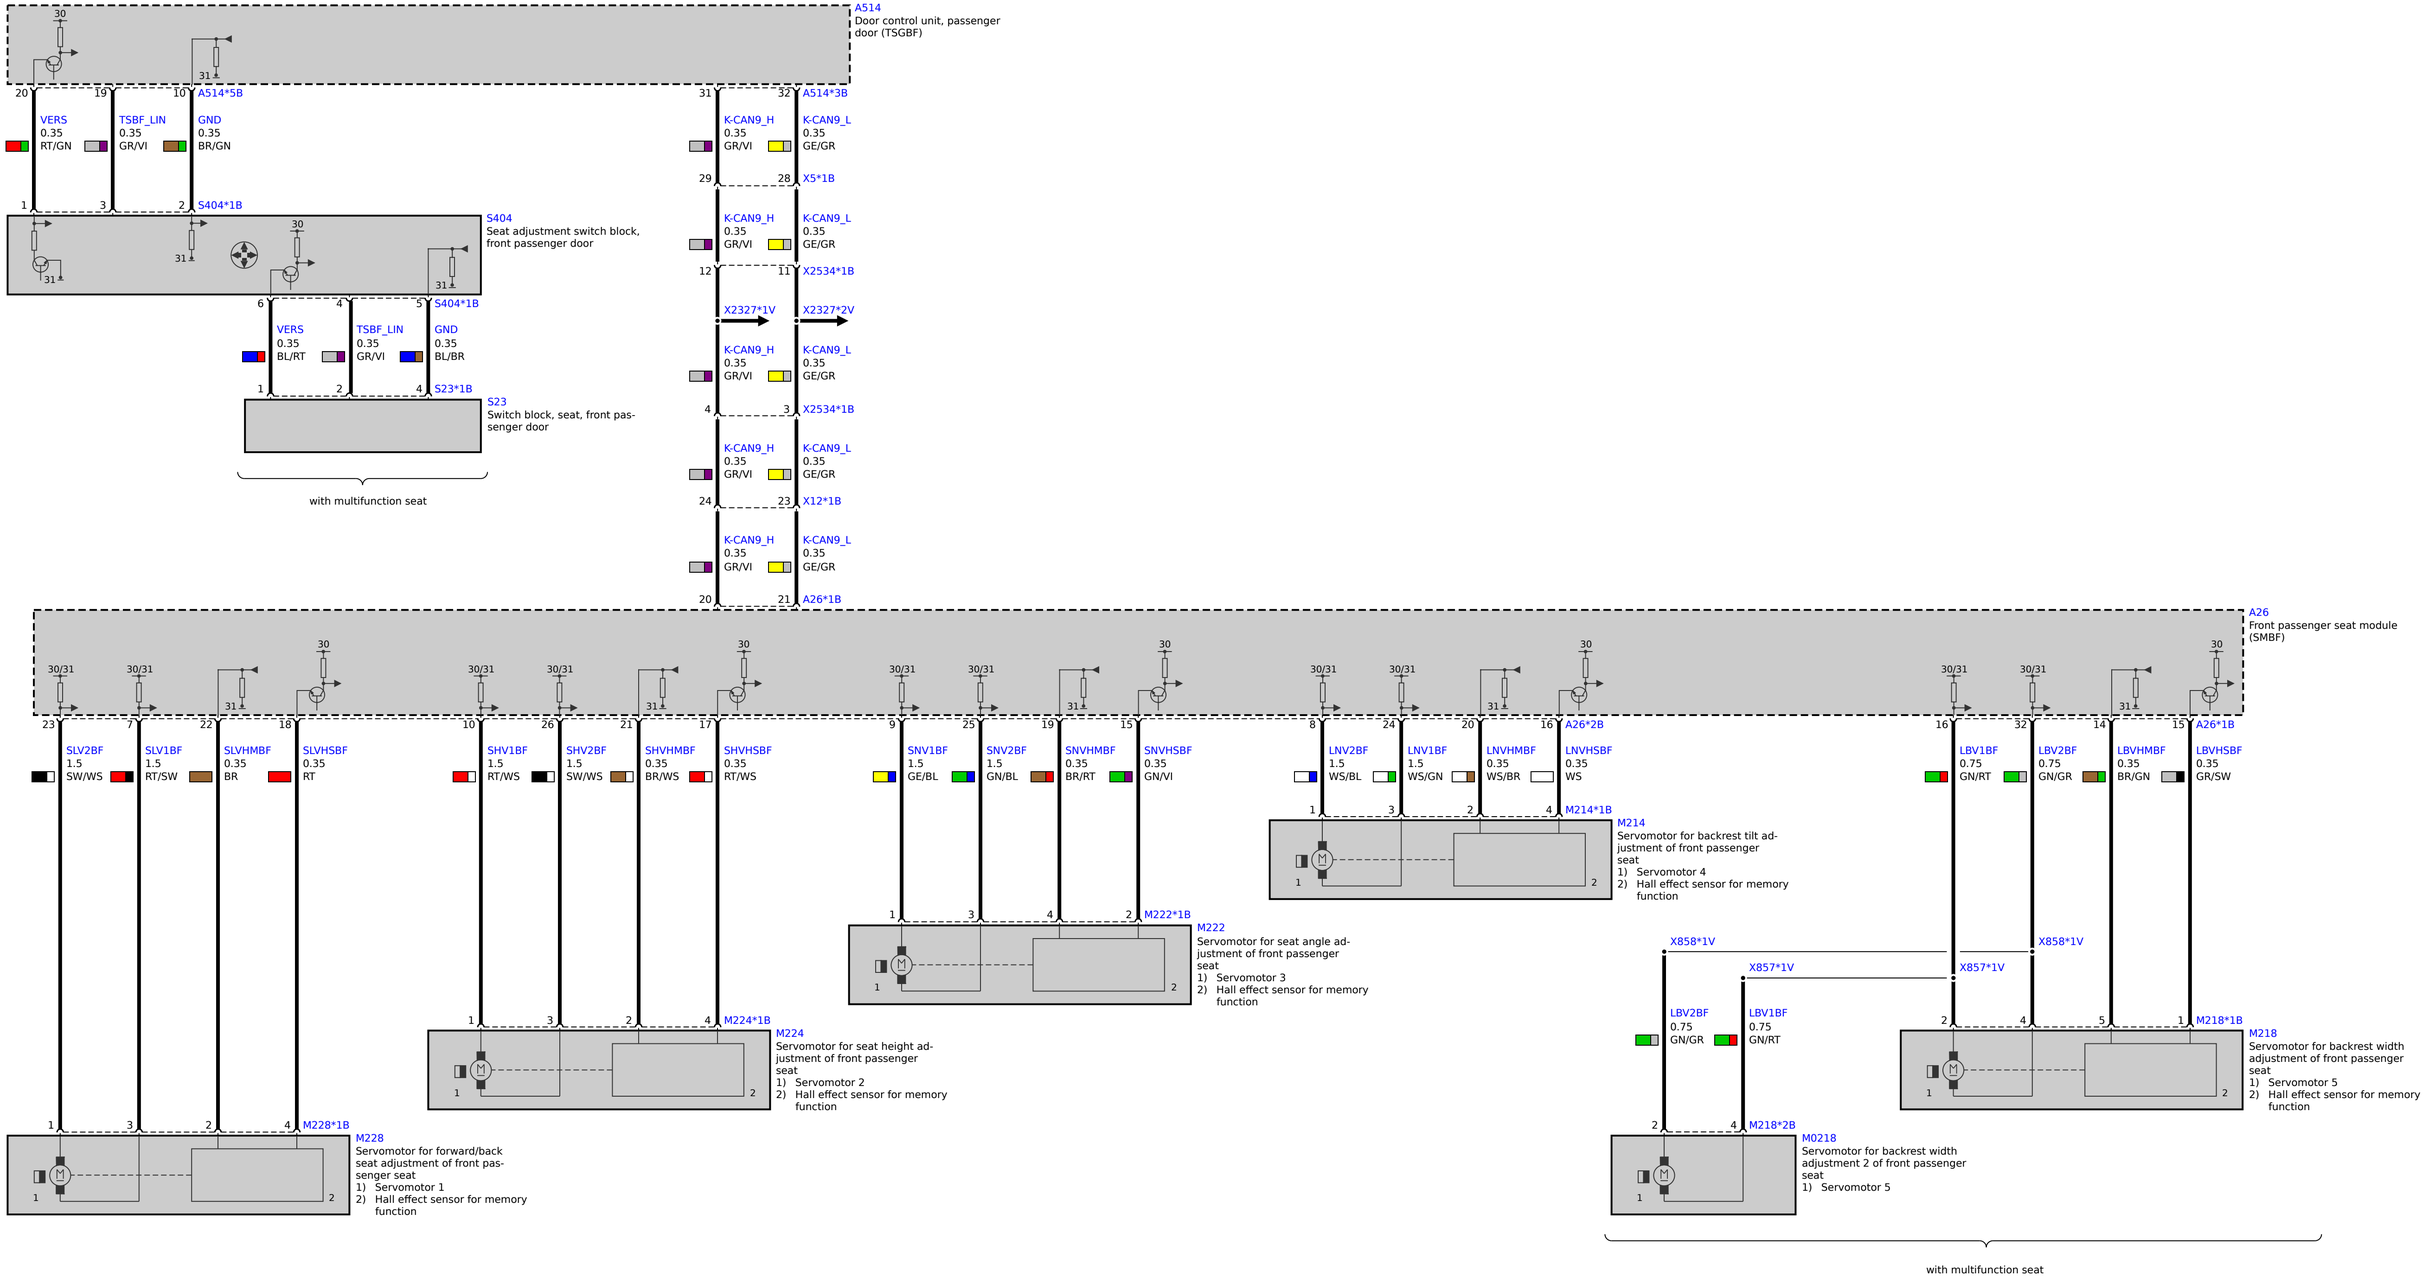
A514
Door control unit, passenger door (TSGBF)
VERS 0.35 RT/GN
TSBF_LIN 0.35 GR/VI
GND 0.35 BR/GN
A514*5B
S404*1B
S404
Seat adjustment switch block, front passenger door
VERS 0.35 BL/RT
TSBF_LIN 0.35 GR/VI
GND 0.35 BL/BR
S404*1B
S23*1B
S23
Switch block, seat, front passenger door
with multifunction seat
K-CAN9_H 0.35 GR/VI
K-CAN9_L 0.35 GE/GR
A514*3B
X5*1B
X2534*1B
X2327*1V
X2327*2V
X2534*1B
X12*1B
A26*1B
A26
Front passenger seat module (SMBF)
SLV2BF 1.5 SW/WS
SLV1BF 1.5 RT/SW
SLVHMBF 0.35 BR
SLVHSBF 0.35 RT
M228*1B
M228
Servomotor for forward/back seat adjustment of front passenger seat
1) Servomotor 1
2) Hall effect sensor for memory function
SHV1BF 1.5 RT/WS
SHV2BF 1.5 SW/WS
SHVHMBF 0.35 BR/WS
SHVHSBF 0.35 RT/WS
M224*1B
M224
Servomotor for seat height adjustment of front passenger seat
1) Servomotor 2
2) Hall effect sensor for memory function
SNV1BF 1.5 GE/BL
SNV2BF 1.5 GN/BL
SNVHMBF 0.35 BR/RT
SNVHSBF 0.35 GN/VI
M222*1B
M222
Servomotor for seat angle adjustment of front passenger seat
1) Servomotor 3
2) Hall effect sensor for memory function
LNV2BF 1.5 WS/BL
LNV1BF 1.5 WS/GN
LNVHMBF 0.35 WS/BR
LNVHSBF 0.35 WS
A26*2B
M214*1B
M214
Servomotor for backrest tilt adjustment of front passenger seat
1) Servomotor 4
2) Hall effect sensor for memory function
LBV1BF 0.75 GN/RT
LBV2BF 0.75 GN/GR
LBVHMBF 0.35 BR/GN
LBVHSBF 0.35 GR/SW
A26*1B
X858*1V
X857*1V
LBV2BF 0.75 GN/GR
LBV1BF 0.75 GN/RT
M218*2B
M0218
Servomotor for backrest width adjustment 2 of front passenger seat
1) Servomotor 5
M218*1B
M218
Servomotor for backrest width adjustment of front passenger seat
1) Servomotor 5
2) Hall effect sensor for memory function
with multifunction seat