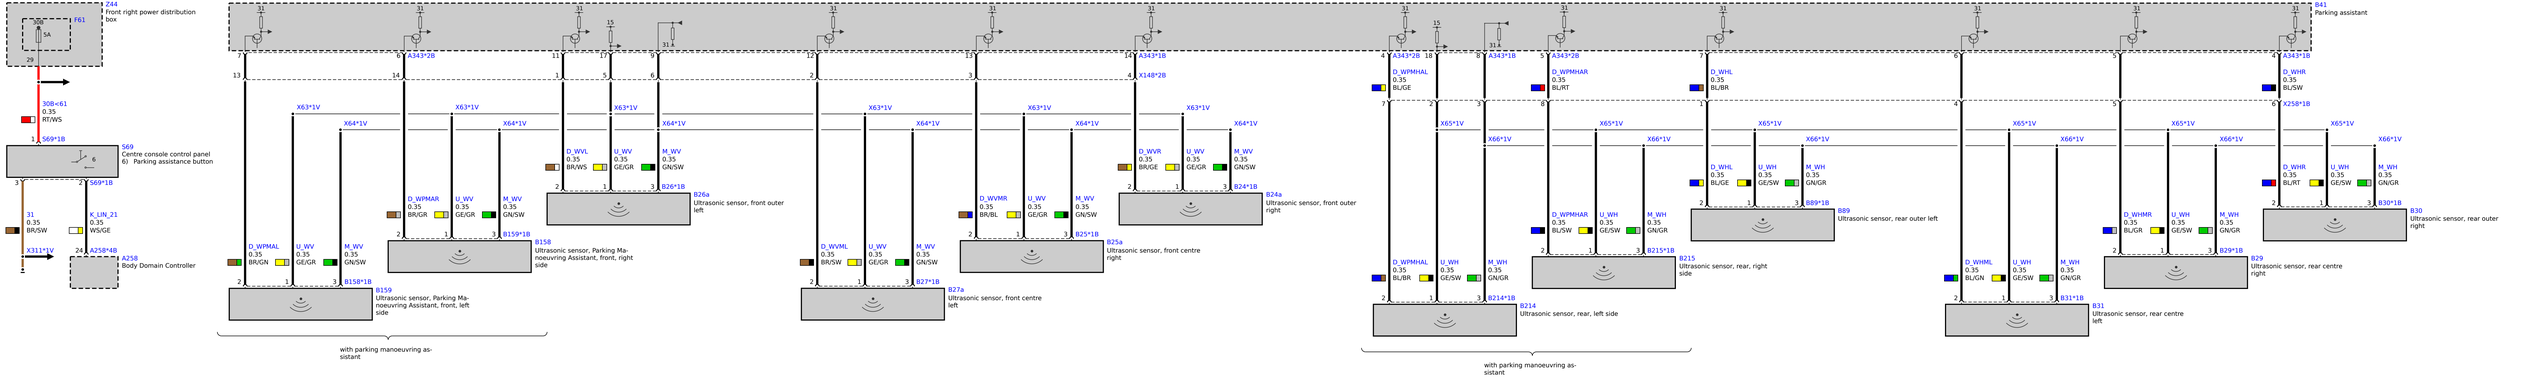
Z44
Front right power distribution box
F61
30A
5A
29
30B<61
0.35
RT/WS
S69*1B
S69
Centre console control panel
6) Parking assistance button
S69*1B
31
0.35
BR/SW
K_LIN_21
0.35
WS/GE
X311*1V
A258*4B
A258
Body Domain Controller
31
A343*2B
A343*1B
X14B*2B
X63*1V
X64*1V
X65*1V
X66*1V
D_WPMAL
0.35
BR/GN
U_WV
0.35
GE/GR
M_WV
0.35
GN/SW
B15B*1B
B159
Ultrasonic sensor, Parking Manoeuvring Assistant, front, left side
D_WPMAR
0.35
BR/GR
B159*1B
B158
Ultrasonic sensor, Parking Manoeuvring Assistant, front, right side
D_WVL
0.35
BR/WS
B26*1B
B26a
Ultrasonic sensor, front outer left
D_WVR
0.35
BR/GE
B24*1B
B24a
Ultrasonic sensor, front outer right
D_WVML
0.35
BR/SW
B27*1B
B27a
Ultrasonic sensor, front centre left
D_WVMR
0.35
BR/BL
B25*1B
B25a
Ultrasonic sensor, front centre right
with parking manoeuvring assistant
D_WPMHAL
0.35
BL/GE
B214*1B
B214
Ultrasonic sensor, rear, left side
D_WPMHAR
0.35
BL/RT
B215*1B
B215
Ultrasonic sensor, rear, right side
D_WHL
0.35
BL/BR
B89*1B
B89
Ultrasonic sensor, rear outer left
D_WHR
0.35
BL/SW
B41
Parking assistant
X258*1B
B30*1B
B30
Ultrasonic sensor, rear outer right
D_WHMR
0.35
BL/GR
B29*1B
B29
Ultrasonic sensor, rear centre right
D_WHML
0.35
BL/GN
B31*1B
B31
Ultrasonic sensor, rear centre left
with parking manoeuvring assistant