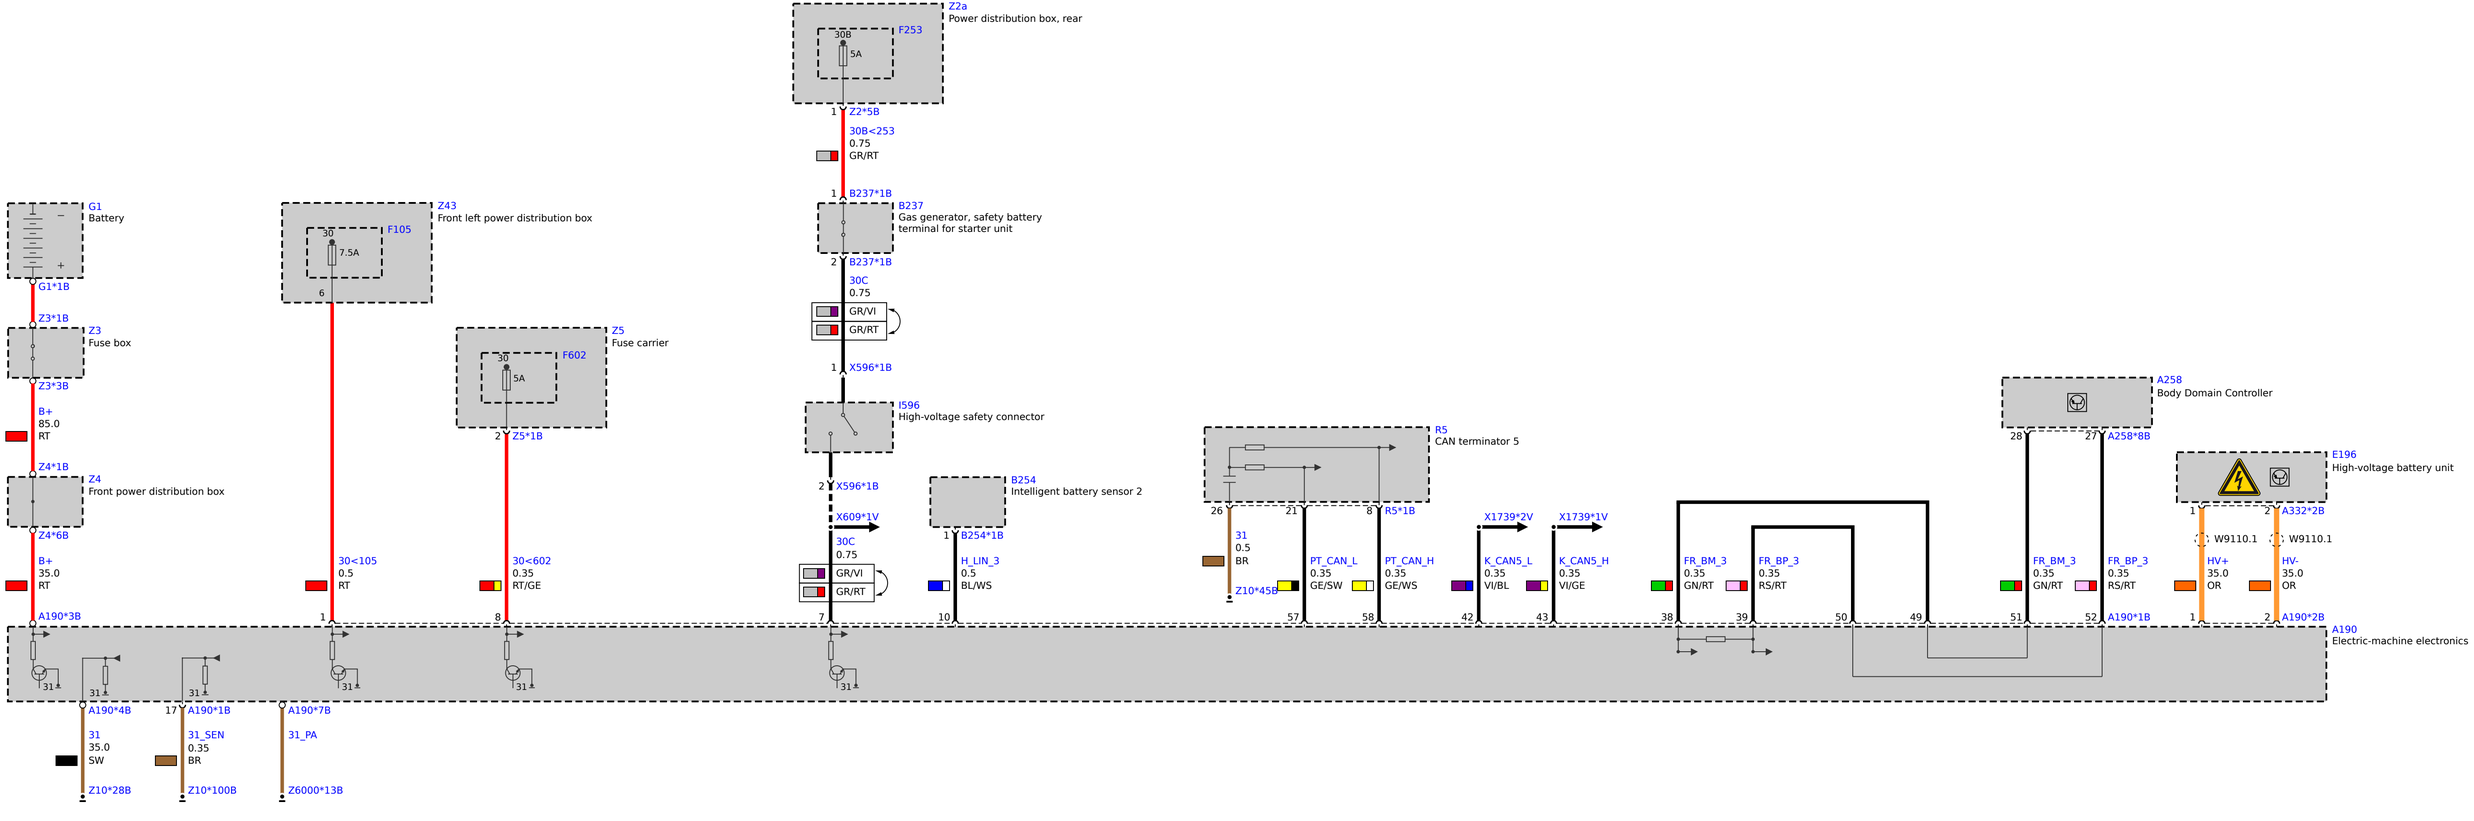
Z2a
Power distribution box, rear
F253
30B
5A
Z2*5B
30B<253
0.75
GR/RT
B237*1B
B237
Gas generator, safety battery terminal for starter unit
B237*1B
30C
0.75
GR/VI
GR/RT
X596*1B
I596
High-voltage safety connector
X596*1B
X609*1V
30C
0.75
GR/VI
GR/RT
B254
Intelligent battery sensor 2
B254*1B
H_LIN_3
0.5
BL/WS
G1
Battery
G1*1B
Z3*1B
Z3
Fuse box
Z3*3B
B+
85.0
RT
Z4*1B
Z4
Front power distribution box
Z4*6B
B+
35.0
RT
A190*3B
Z43
Front left power distribution box
F105
30
7.5A
6
30<105
0.5
RT
Z5
Fuse carrier
F602
30
5A
Z5*1B
30<602
0.35
RT/GE
R5
CAN terminator 5
31
0.5
BR
Z10*45B
R5*1B
PT_CAN_L
0.35
GE/SW
PT_CAN_H
0.35
GE/WS
X1739*2V
K_CAN5_L
0.35
VI/BL
X1739*1V
K_CAN5_H
0.35
VI/GE
FR_BM_3
0.35
GN/RT
FR_BP_3
0.35
RS/RT
A258
Body Domain Controller
A258*8B
FR_BM_3
0.35
GN/RT
FR_BP_3
0.35
RS/RT
A190*1B
E196
High-voltage battery unit
A332*2B
W9110.1
W9110.1
HV+
35.0
OR
HV-
35.0
OR
A190*2B
A190
Electric-machine electronics
A190*4B
31
35.0
SW
Z10*28B
A190*1B
31_SEN
0.35
BR
Z10*100B
A190*7B
31_PA
Z6000*13B