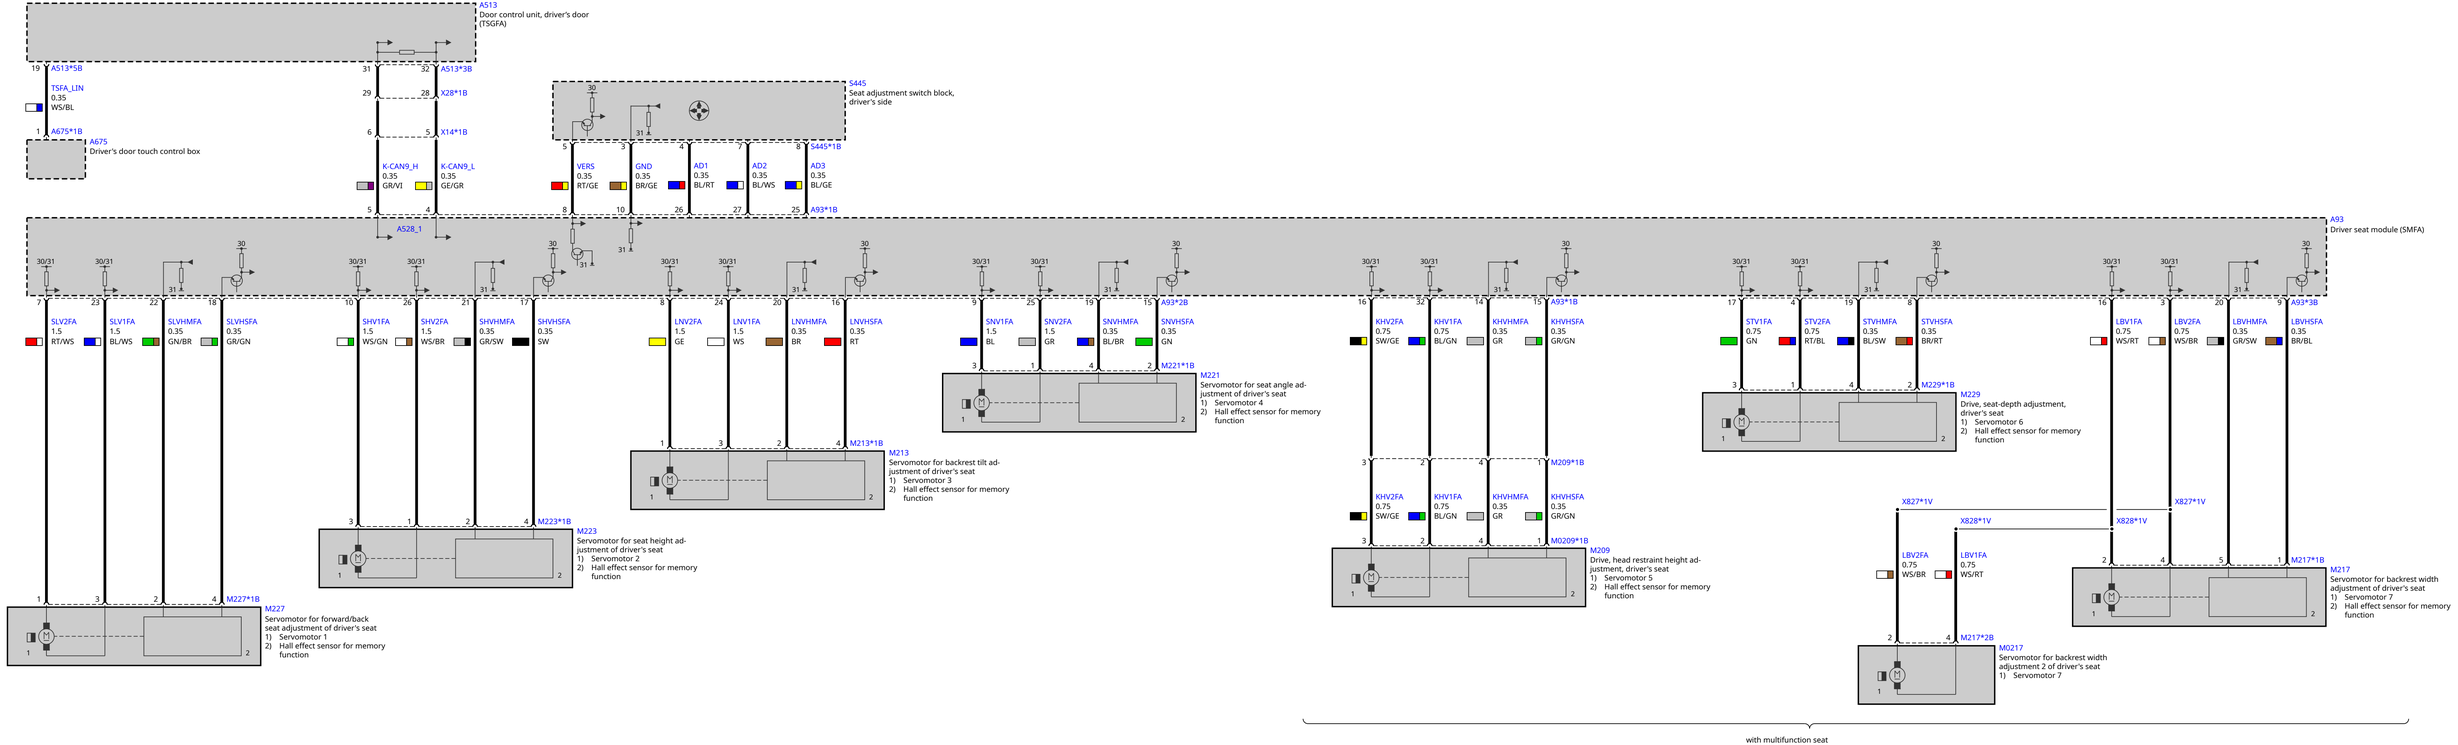
A513
Door control unit, driver's door (TSGFA)
A513*5B
TSFA_LIN
0.35
WS/BL
A675*1B
A675
Driver's door touch control box
A513*3B
X28*1B
X14*1B
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
S445
Seat adjustment switch block, driver's side
S445*1B
VERS
0.35
RT/GE
GND
0.35
BR/GE
AD1
0.35
BL/RT
AD2
0.35
BL/WS
AD3
0.35
BL/GE
A93*1B
A528_1
A93
Driver seat module (SMFA)
SLV2FA
1.5
RT/WS
SLV1FA
1.5
BL/WS
SLVHMFA
0.35
GN/BR
SLVHSFA
0.35
GR/GN
M227*1B
M227
Servomotor for forward/back seat adjustment of driver's seat
1) Servomotor 1
2) Hall effect sensor for memory function
SHV1FA
1.5
WS/GN
SHV2FA
1.5
WS/BR
SHVHMFA
0.35
GR/SW
SHVHSFA
0.35
SW
M223*1B
M223
Servomotor for seat height adjustment of driver's seat
1) Servomotor 2
2) Hall effect sensor for memory function
LNV2FA
1.5
GE
LNV1FA
1.5
WS
LNVHMFA
0.35
BR
LNVHSFA
0.35
RT
M213*1B
M213
Servomotor for backrest tilt adjustment of driver's seat
1) Servomotor 3
2) Hall effect sensor for memory function
SNV1FA
1.5
BL
SNV2FA
1.5
GR
SNVHMFA
0.35
BL/BR
SNVHSFA
0.35
GN
A93*2B
M221*1B
M221
Servomotor for seat angle adjustment of driver's seat
1) Servomotor 4
2) Hall effect sensor for memory function
KHV2FA
0.75
SW/GE
KHV1FA
0.75
BL/GN
KHVHMFA
0.35
GR
KHVHSFA
0.35
GR/GN
M209*1B
M0209*1B
M209
Drive, head restraint height adjustment, driver's seat
1) Servomotor 5
2) Hall effect sensor for memory function
STV1FA
0.75
GN
STV2FA
0.75
RT/BL
STVHMFA
0.35
BL/SW
STVHSFA
0.35
BR/RT
M229*1B
M229
Drive, seat-depth adjustment, driver's seat
1) Servomotor 6
2) Hall effect sensor for memory function
LBV1FA
0.75
WS/RT
LBV2FA
0.75
WS/BR
LBVHMFA
0.35
GR/SW
LBVHSFA
0.35
BR/BL
A93*3B
X827*1V
X828*1V
LBV2FA
0.75
WS/BR
LBV1FA
0.75
WS/RT
M217*1B
M217
Servomotor for backrest width adjustment of driver's seat
1) Servomotor 7
2) Hall effect sensor for memory function
M217*2B
M0217
Servomotor for backrest width adjustment 2 of driver's seat
1) Servomotor 7
with multifunction seat