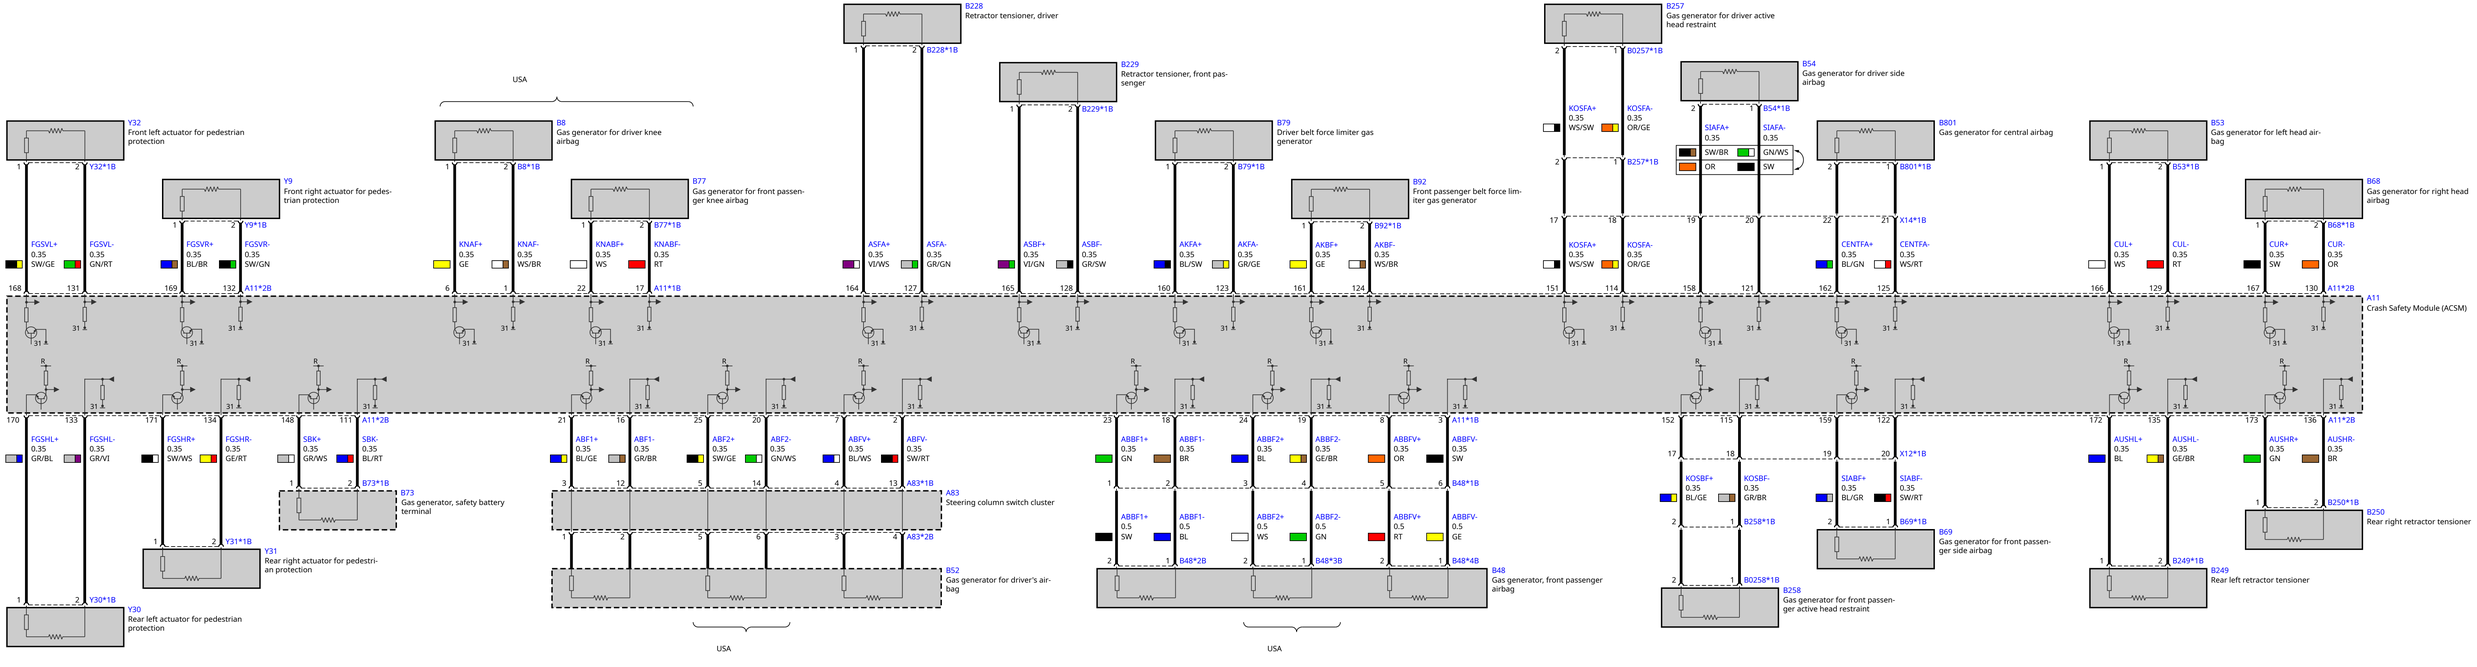
Y32
Front left actuator for pedestrian protection
Y9
Front right actuator for pedestrian protection
USA
B8
Gas generator for driver knee airbag
B77
Gas generator for front passenger knee airbag
B228
Retractor tensioner, driver
B229
Retractor tensioner, front passenger
B79
Driver belt force limiter gas generator
B92
Front passenger belt force limiter gas generator
B257
Gas generator for driver active head restraint
B54
Gas generator for driver side airbag
B801
Gas generator for central airbag
B53
Gas generator for left head airbag
B68
Gas generator for right head airbag
A11
Crash Safety Module (ACSM)
B73
Gas generator, safety battery terminal
Y31
Rear right actuator for pedestrian protection
Y30
Rear left actuator for pedestrian protection
A83
Steering column switch cluster
B52
Gas generator for driver's airbag
USA
B48
Gas generator, front passenger airbag
USA
B69
Gas generator for front passenger side airbag
B258
Gas generator for front passenger active head restraint
B250
Rear right retractor tensioner
B249
Rear left retractor tensioner
FGSVL+ 0.35 SW/GE
FGSVL- 0.35 GN/RT
FGSVR+ 0.35 BL/BR
FGSVR- 0.35 SW/GN
KNAF+ 0.35 GE
KNAF- 0.35 WS/BR
KNABF+ 0.35 WS
KNABF- 0.35 RT
ASFA+ 0.35 VI/WS
ASFA- 0.35 GR/GN
ASBF+ 0.35 VI/GN
ASBF- 0.35 GR/SW
AKFA+ 0.35 BL/SW
AKFA- 0.35 GR/GE
AKBF+ 0.35 GE
AKBF- 0.35 WS/BR
KOSFA+ 0.35 WS/SW
KOSFA- 0.35 OR/GE
SIAFA+ 0.35
SIAFA- 0.35
SW/BR
GN/WS
OR
SW
CENTFA+ 0.35 BL/GN
CENTFA- 0.35 WS/RT
CUL+ 0.35 WS
CUL- 0.35 RT
CUR+ 0.35 SW
CUR- 0.35 OR
FGSHL+ 0.35 GR/BL
FGSHL- 0.35 GR/VI
FGSHR+ 0.35 SW/WS
FGSHR- 0.35 GE/RT
SBK+ 0.35 GR/WS
SBK- 0.35 BL/RT
ABF1+ 0.35 BL/GE
ABF1- 0.35 GR/BR
ABF2+ 0.35 SW/GE
ABF2- 0.35 GN/WS
ABFV+ 0.35 BL/WS
ABFV- 0.35 SW/RT
ABBF1+ 0.35 GN
ABBF1- 0.35 BR
ABBF2+ 0.35 BL
ABBF2- 0.35 GE/BR
ABBFV+ 0.35 OR
ABBFV- 0.35 SW
ABBF1+ 0.5 SW
ABBF1- 0.5 BL
ABBF2+ 0.5 WS
ABBF2- 0.5 GN
ABBFV+ 0.5 RT
ABBFV- 0.5 GE
KOSBF+ 0.35 BL/GE
KOSBF- 0.35 GR/BR
SIABF+ 0.35 BL/GR
SIABF- 0.35 SW/RT
AUSHL+ 0.35 BL
AUSHL- 0.35 GE/BR
AUSHR+ 0.35 GN
AUSHR- 0.35 BR