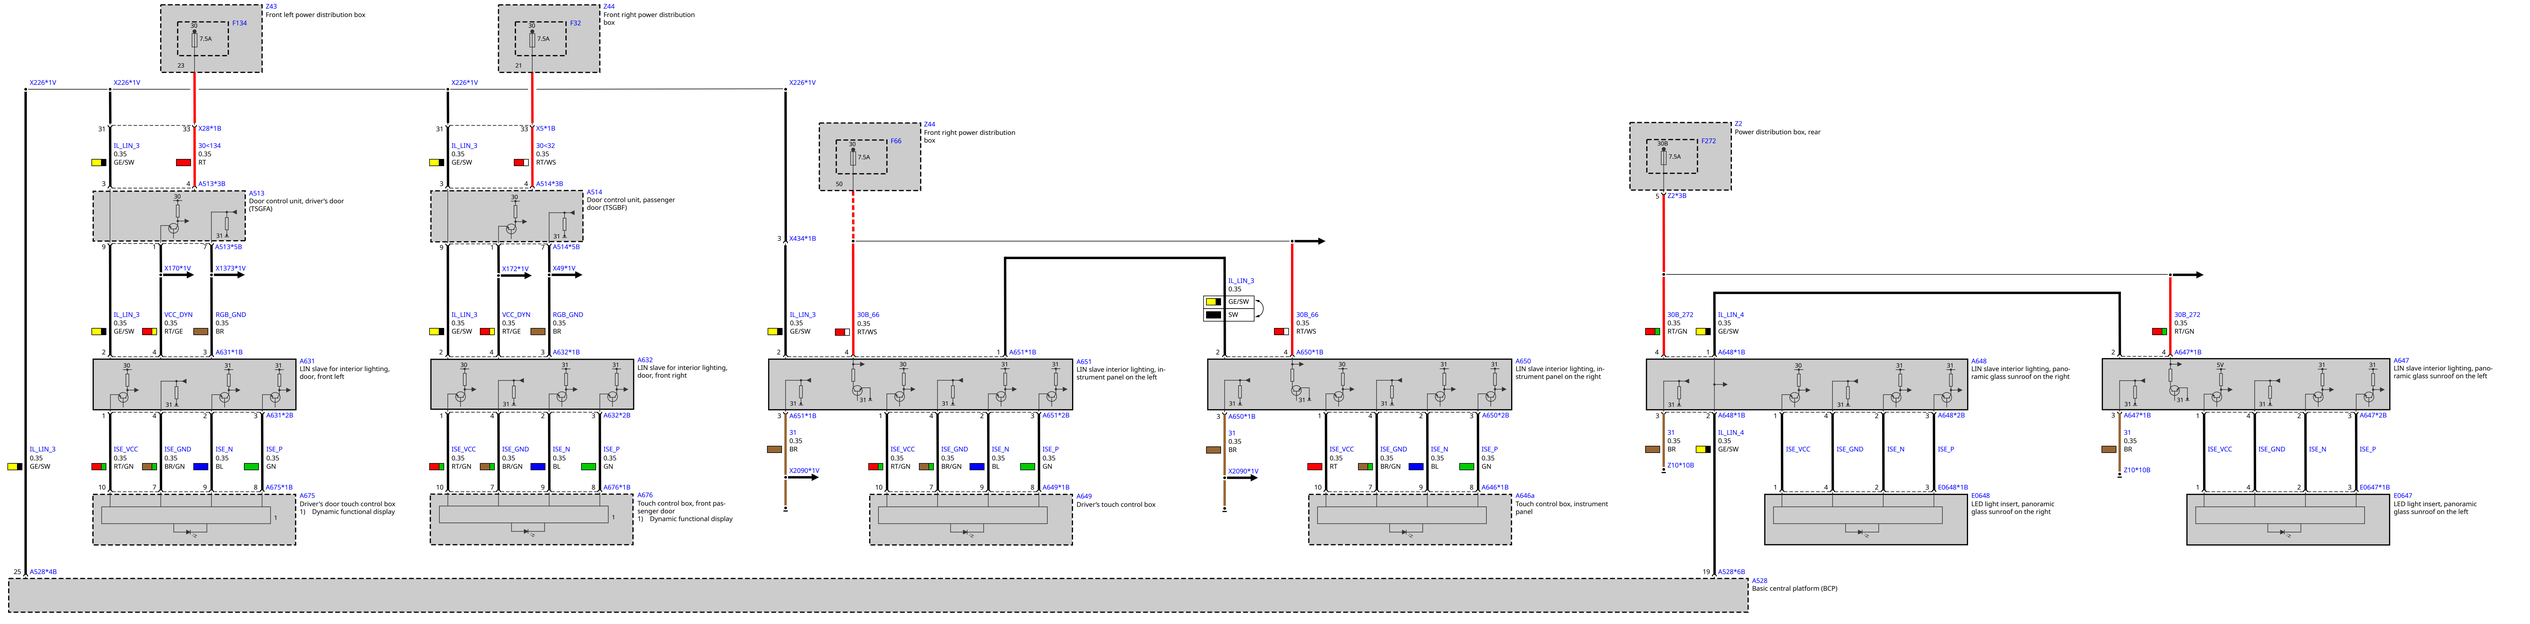
Z43
Front left power distribution box
F134
7.5A
23
X226*1V
X28*1B
IL_LIN_3
0.35
GE/SW
30<134
0.35
RT
A513*3B
A513
Door control unit, driver's door (TSGFA)
X170*1V
X1373*1V
VCC_DYN
0.35
RT/GE
RGB_GND
0.35
BR
A631*1B
A631
LIN slave for interior lighting, door, front left
ISE_VCC
0.35
RT/GN
ISE_GND
0.35
BR/GN
ISE_N
0.35
BL
ISE_P
0.35
GN
A631*2B
A675*1B
A675
Driver's door touch control box
1) Dynamic functional display
Z44
Front right power distribution box
F32
7.5A
21
X5*1B
30<32
0.35
RT/WS
A514*3B
A514
Door control unit, passenger door (TSGBF)
X172*1V
X49*1V
A514*5B
A632*1B
A632
LIN slave for interior lighting, door, front right
A632*2B
A676*1B
A676
Touch control box, front passenger door
1) Dynamic functional display
F66
50
X434*1B
30B_66
0.35
RT/WS
A651*1B
A651
LIN slave interior lighting, instrument panel on the left
X2090*1V
31
0.35
BR
A649
Driver's touch control box
A650*1B
A650
LIN slave interior lighting, instrument panel on the right
A650*2B
A646*1B
A646a
Touch control box, instrument panel
Z2
Power distribution box, rear
F272
30B
Z2*3B
30B_272
0.35
RT/GN
IL_LIN_4
0.35
GE/SW
A648*1B
A648
LIN slave interior lighting, panoramic glass sunroof on the right
A648*2B
Z10*10B
E0648*1B
E0648
LED light insert, panoramic glass sunroof on the right
5V
A647*1B
A647
LIN slave interior lighting, panoramic glass sunroof on the left
A647*2B
E0647*1B
E0647
LED light insert, panoramic glass sunroof on the left
A528*4B
A528*6B
A528
Basic central platform (BCP)