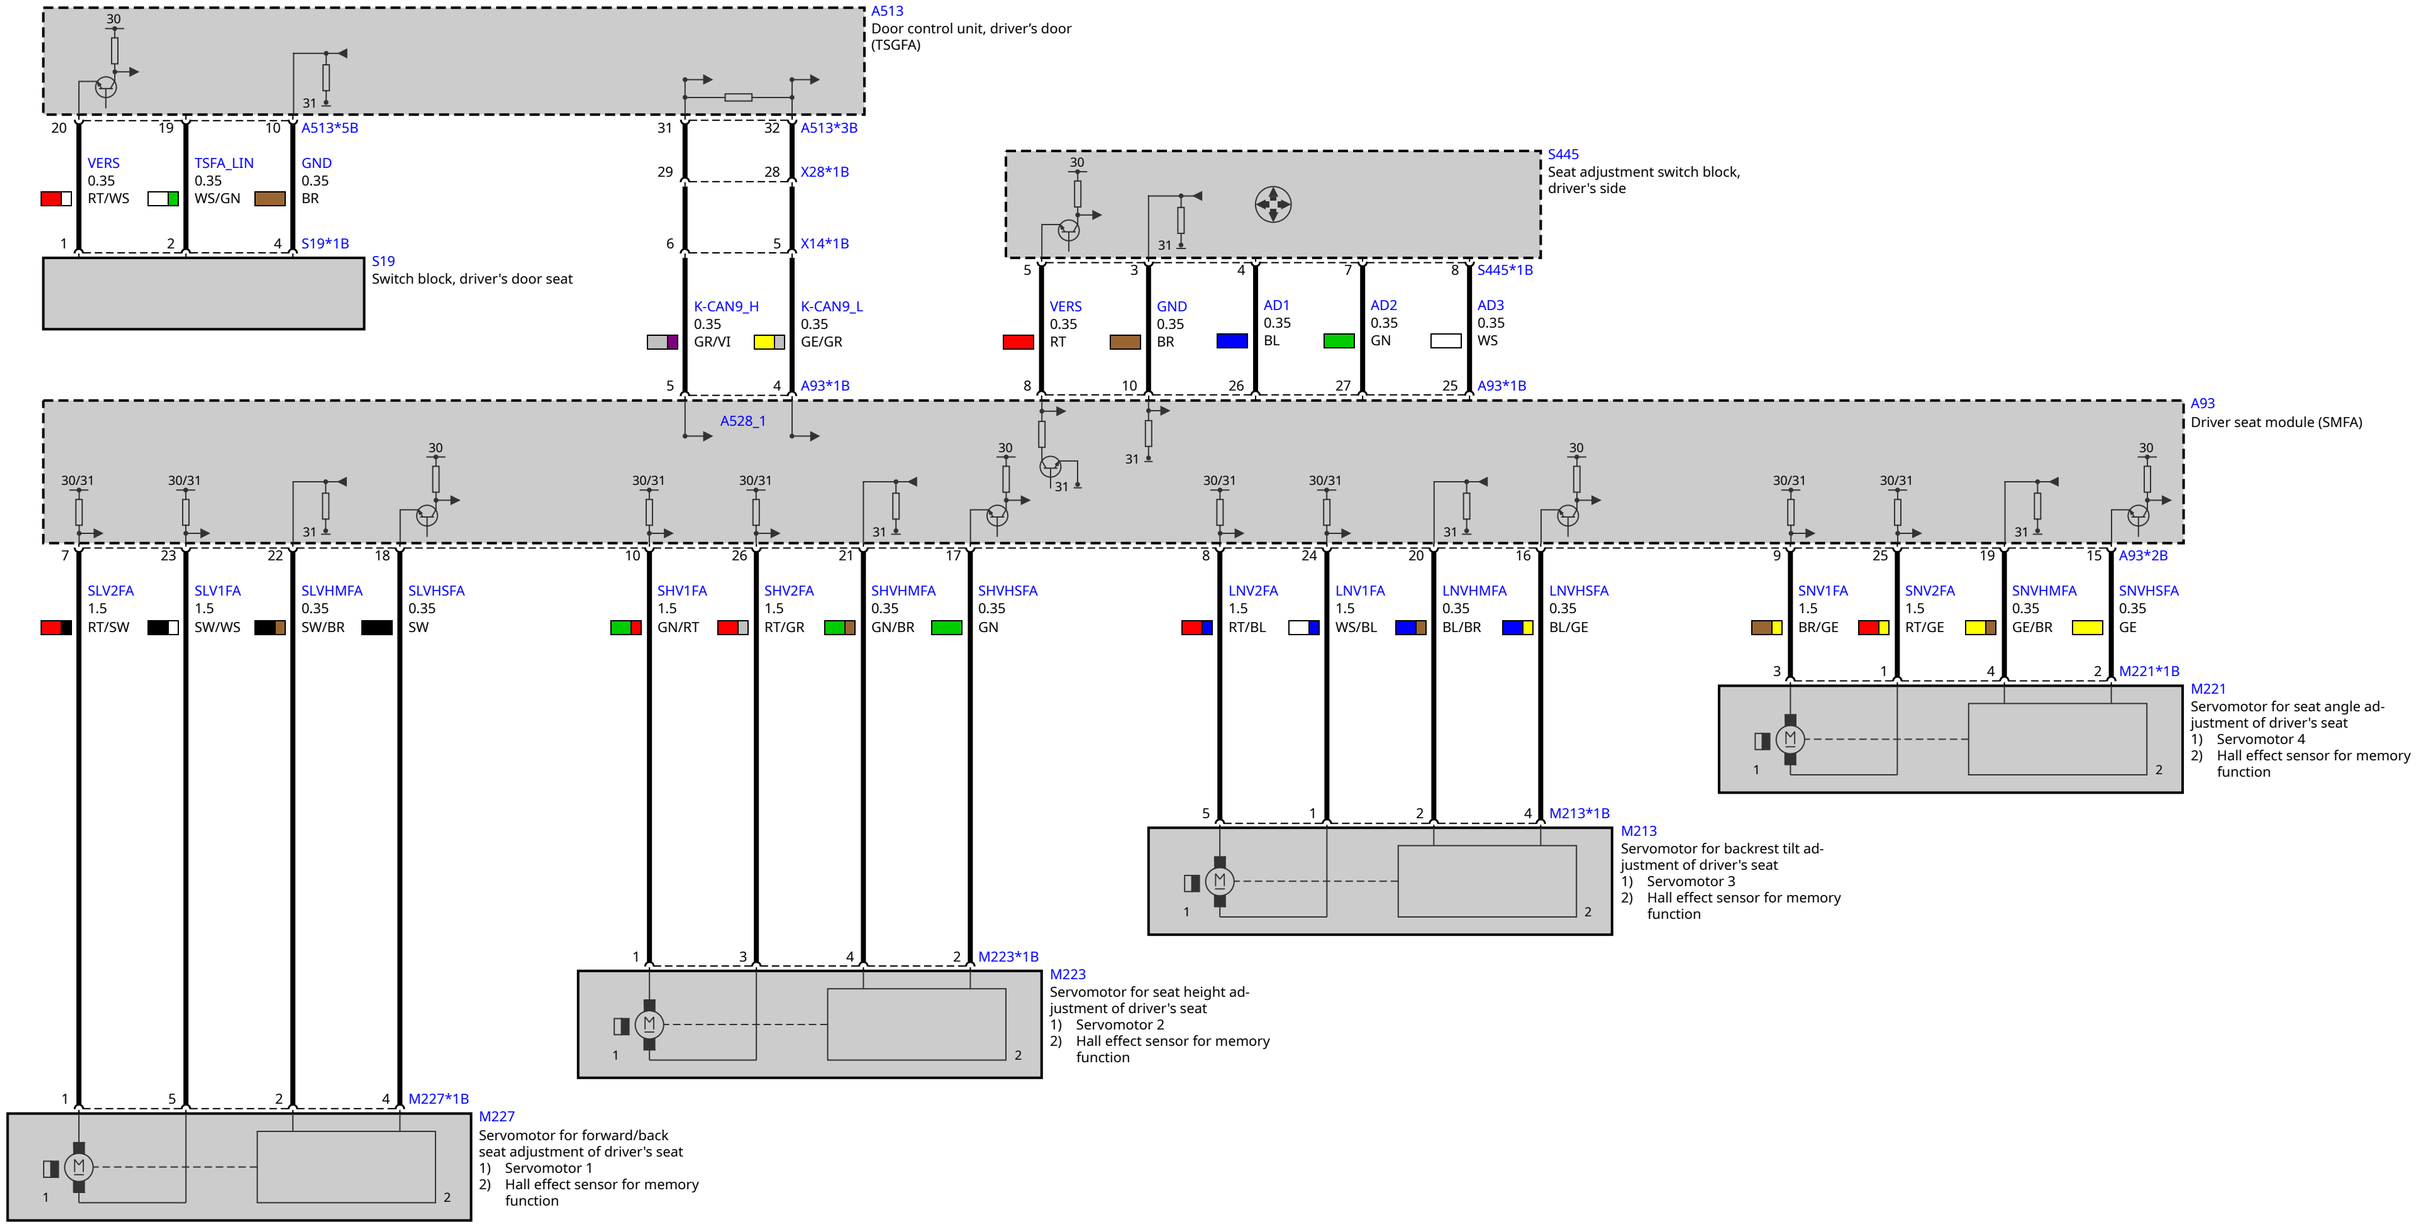
A513
Door control unit, driver's door (TSGFA)
A513*5B
A513*3B
VERS 0.35 RT/WS
TSFA_LIN 0.35 WS/GN
GND 0.35 BR
S19*1B
S19
Switch block, driver's door seat
X28*1B
X14*1B
K-CAN9_H 0.35 GR/VI
K-CAN9_L 0.35 GE/GR
A93*1B
A528_1
S445
Seat adjustment switch block, driver's side
S445*1B
VERS 0.35 RT
GND 0.35 BR
AD1 0.35 BL
AD2 0.35 GN
AD3 0.35 WS
A93
Driver seat module (SMFA)
A93*2B
SLV2FA 1.5 RT/SW
SLV1FA 1.5 SW/WS
SLVHMFA 0.35 SW/BR
SLVHSFA 0.35 SW
SHV1FA 1.5 GN/RT
SHV2FA 1.5 RT/GR
SHVHMFA 0.35 GN/BR
SHVHSFA 0.35 GN
LNV2FA 1.5 RT/BL
LNV1FA 1.5 WS/BL
LNVHMFA 0.35 BL/BR
LNVHSFA 0.35 BL/GE
SNV1FA 1.5 BR/GE
SNV2FA 1.5 RT/GE
SNVHMFA 0.35 GE/BR
SNVHSFA 0.35 GE
M221*1B
M221
Servomotor for seat angle adjustment of driver's seat
1) Servomotor 4
2) Hall effect sensor for memory function
M213*1B
M213
Servomotor for backrest tilt adjustment of driver's seat
1) Servomotor 3
2) Hall effect sensor for memory function
M223*1B
M223
Servomotor for seat height adjustment of driver's seat
1) Servomotor 2
2) Hall effect sensor for memory function
M227*1B
M227
Servomotor for forward/back seat adjustment of driver's seat
1) Servomotor 1
2) Hall effect sensor for memory function