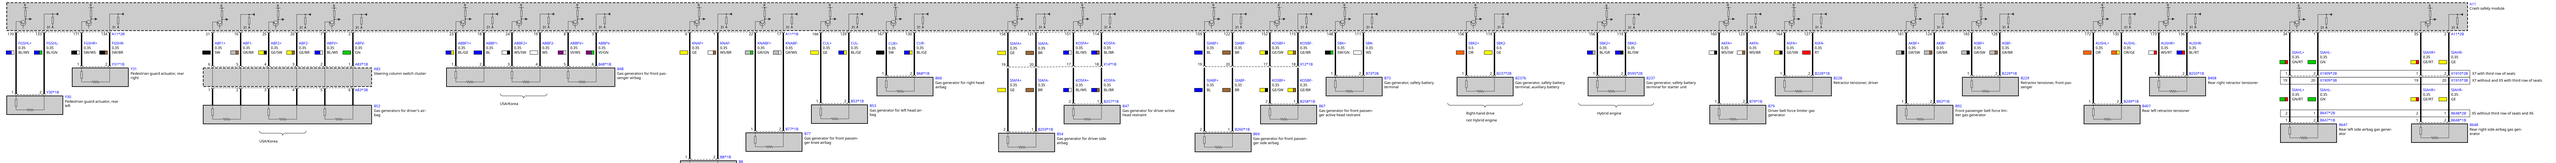
A11
Crash safety module
X2/24:+
0.35
BL/WH
X2/24:+
0.35
BL/GN
X2/24:-
0.35
GR/WH
X2/24:-
0.35
GR/GN
X1/7*18
X2/6
Pedestrian guard actuator, rear right
X1/7*18
X2/6
Pedestrian guard actuator, rear left
X1/7*18
X2/6
X8/8*1:+
0.35
BL/GR
X8/8*1:-
0.35
GR/GR
X8/8*1:+
0.35
BL/GR
X8/8*1:-
0.35
GR/GR
X8/8*1:+
0.35
BL/GR
X8/8*1:-
0.35
GR/GR
X8/8*1:+
0.35
BL/GR
X8/8*1:-
0.35
GR/GR
X1/7*18
X8
Steering column switch cluster
X1/7*18
X2/2
Gas generators for driver's air-bag
USA/Korea
X8/8*2:+
0.35
BL/GR
X8/8*2:-
0.35
GR/GR
X8/8*2:+
0.35
BL/GR
X8/8*2:-
0.35
GR/GR
X8/8*2:+
0.35
BL/GR
X8/8*2:-
0.35
GR/GR
X8/8*2:+
0.35
BL/GR
X8/8*2:-
0.35
GR/GR
X1/7*18
X8
X1/7*18
X2/8
Gas generators for front passenger airbag
USA/Korea
X9/4:+
0.35
GE
X9/4:-
0.35
WH/BR
X1/7*18
X2/7
Gas generator for driver knee airbag
X9/4
X1/7*18
X9/5:+
0.35
GR/GN
X9/5:-
0.35
GR/WS
X1/7*18
X2/7
Gas generator for front passenger-side airbag
X1/6:+
0.35
GE
X1/6:-
0.35
BL/GE
X1/7*18
X2/3
Gas generator for left head airbag
X1/6
X1/6:-
0.35
GE
X1/6:+
0.35
BL/GE
X1/7*18
X2/8
Gas generator for right head airbag
X9/3:+
0.35
GE
X9/3:-
0.35
BR
X1/3:+
0.35
BL/WS
X1/3:-
0.35
BL-SW
X1/7*18
X2/4
Gas generator for driver side airbag
X9/3
X1/7*18
X2/7
Gas generator for driver active head restraint
X9/3:+
0.35
GE
X9/3:-
0.35
BR
X1/3:+
0.35
BL/WS
X1/3:-
0.35
BL-SW
X1/7*18
X9/9:+
0.35
BL
X9/9:-
0.35
BR
X1/9:+
0.35
GR/GW
X1/9:-
0.35
GR-SW
X1/7*18
X2/8
Gas generator for front passenger-side head restraint
X9/9
X1/7*18
X2/7
Gas generator for front passenger-side airbag
X9/9:+
0.35
BL
X9/9:-
0.35
BR
X1/9:+
0.35
GR/GW
X1/9:-
0.35
GR-SW
X1/7*18
X9/2:-
0.35
GE
X9/2:-
0.35
GE
X1/7*18
X2/7B
Gas generator, safety battery terminal, auxiliary battery
X1/7*18
X2/7B
Right-hand drive
not Hybrid-engine
X9/2:-
0.35
GE
X9/2:-
0.35
BL/GR
X9/2:-
0.35
BL/BW
X1/7*18
X2/7
Gas generator, safety battery terminal for starter unit
X1/7*18
X2/7
Hybrid-engine
X9/5:+
0.35
WS/WR
X9/5:-
0.35
WS/BR
X1/7*18
X2/9
Driver belt force limiter gas generator
X9/5
X1/7*18
X2/9
X9/5:+
0.35
WS/WR
X9/5:-
0.35
WS/BR
X1/7*18
X2/9
Retractor tensioner, driver
X8/8*1
0.35
GR/GW
X8/8*1
0.35
GR/GW
X1/7*18
X2/9
Front passenger belt force lim-iter gas generator
X8/8
0.35
GR/GW
X8/8
0.35
GR/GW
X1/7*18
X2/9
Retractor tensioner, front pas-senger
X1/9/L:+
0.35
GE
X1/9/L:-
0.35
GR/LG
X1/7*18
X2/9
Rear left retractor tensioner
X1/9
X1/7*18
X2/9
X1/9/R:+
0.35
WS/WR
X1/9/R:-
0.35
BL/BR
X1/7*18
X2/9
Rear right retractor tensioner
X1/9
X1/7*18
X2/9
X9/4/L:+
0.35
GE
X9/4/L:-
0.35
GR/WT
X1/7*18
X9/4/L:+
0.35
GE
X9/4/L:-
0.35
GR/WT
X1/7*18
X9/4/R:+
0.35
GE
X9/4/R:-
0.35
GR/GR
X1/7*18
X9/4/R:+
0.35
GE
X9/4/R:-
0.35
GR/GR
X1/7*18
X1/9/F:+
0.35
GE
X1/9/F:-
0.35
GR/LG
X1/7*18
X1/9/F:+
0.35
GE
X1/9/F:-
0.35
GR/LG
X1/7*18
X1/9/R:+
0.35
GE
X1/9/R:-
0.35
GR/GR
X1/7*18
X1/9/R:+
0.35
GE
X1/9/R:-
0.35
GR/GR
X1/7*18
X1/7*18
X1/7*18